

FAQ / Application Note

Subject : How to enable “USB FDD/CDROM/ZIP/HDD boot” Function on ECM-3610/5612/5613?

FAQ Document No: H08009

Date: 2002/10/17

Model No. ECM-3610/5612/5613

Rev.A1


Category: ☐ General ☒ H/W ☐ S/W ☐ Others, _____

Purpose :

Modify BIOS item to enable USB boot devices, such as “USB FDD/CDROM/ZIP/HDD

Please refer to follow picture to change your CMOS setting.

1, Change “First Boot Device” setting to your USB boot device.

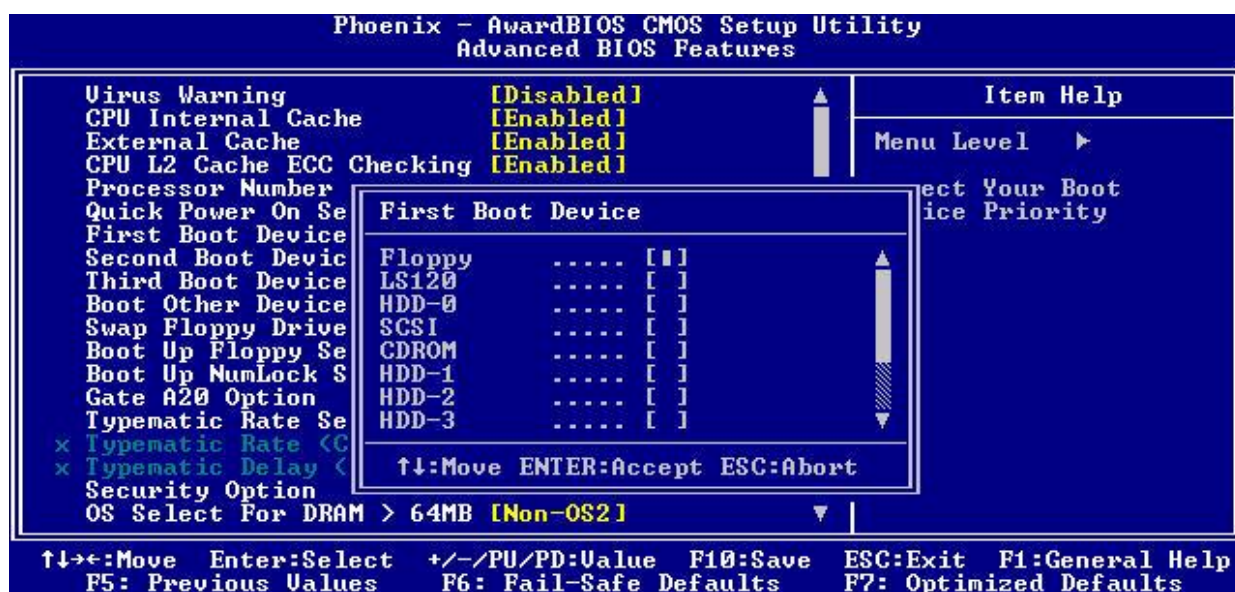

Avalue Technology Inc.

www.avalue.com.tw

1

Headquarters: Tel: 886-2-8226-2345

Fax: 886-2-8226-2777

Email: sales@avalue.com.tw

Europe office: Tel: 45-7025-0310

Email: sales.europe@avalue.com.tw

US office: Tel: 1-732-578-0200

Fax: 1-732-578-0250


Email: sales@avalue-usa.com

China office: Tel: 86-21-5426-3399

Fax: 86-21-6495-0370

Email: sales.china@avalue.com.tw

2, enable "USB keyboard Support"

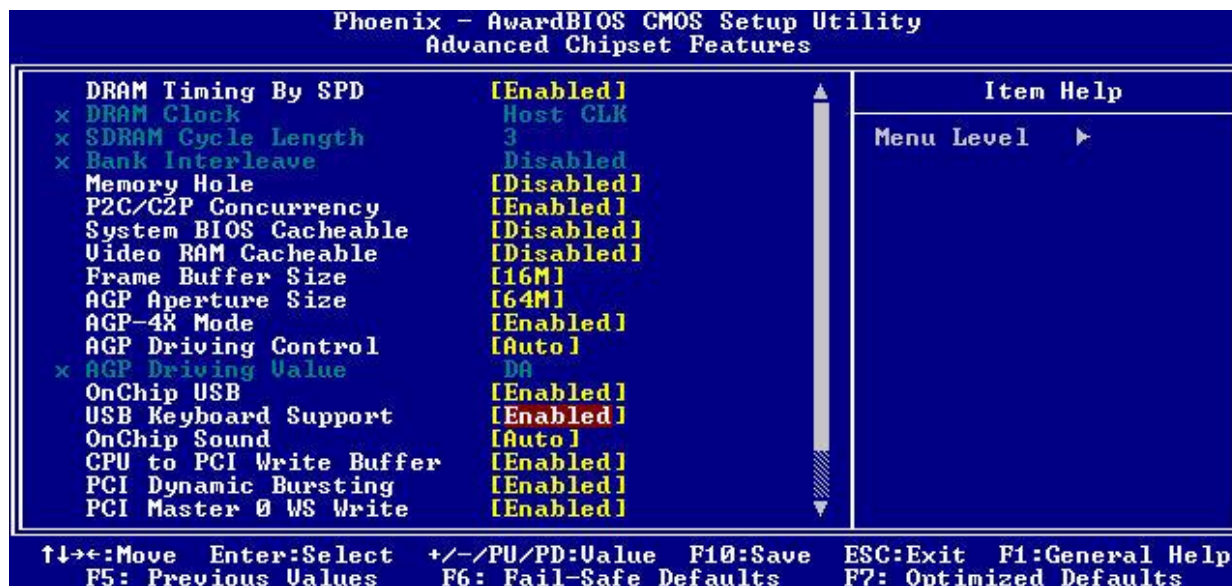

Save the CMOS setting. Reboot your system, and then you can boot from your USB device.