



## FAQ / Application Note

<b>Subject : Audio/Video setting of ECM-3610/5612/5613 under Linux Redhat7.3</b>	
<b>FAQ Document No: S08012</b>	<b>Date: 2002/10/07</b>
<b>Model No. VT8606 series</b>	<b>Rev.A1</b>
<b>Category:</b> <input type="checkbox"/> General <input type="checkbox"/> H/W <input checked="" type="checkbox"/> S/W <input type="checkbox"/> Others, _____	
<b>Purpose :</b> <b>Step by step to setup Audio/Video driver under Linux RedHat7.3</b>	

1. Use ID Root to login console mode.
2. Audio Setting :  
Red Hat 7.3 will detect the Sound Card automatically(VT82C686X).
3. Video Setting
  - (1) Click "Setup" and "enter".
  - (2) In "Choose a Tool" screen and select "X configuration".
  - (3) In "Choose a Card" screen and select "S3 Savage4".
  - (4) In "Monitor Setup" screen and select which monitor you use.
  - (5) In "Screen Configuration" screen and select "Don't Probe".
  - (6) In "Video Memory" screen and select "16 MB"(Frame Buffer size default setting).
  - (7) In "Clockchip Configuration" screen and select "No Clockchip Setting (recommended)".
  - (8) In "Select Video Modes" screen and select "24 bits" and "1024x768".