

FAQ / Application Note


Subject : Different setting for RS232/422/485 of COM2 with ECM-LX800	
FAQ Document No: H09005	Date: 2009/01/21
Model Name. ECM-LX800	Rev. A1
Category: <input type="checkbox"/> General <input checked="" type="checkbox"/> H/W <input checked="" type="checkbox"/> S/W <input type="checkbox"/> Others, I/O Interface Application	
Purpose : In ECM-LX800B, modified the hardware design, therefore RS232/422/485 serial ports selection are controlled by hardware, In ECM-LX800A setting in BIOS	

For ECM-LX800B, just only setting the JUMPER on the board

It does not need setting through the BIOS

Please refer to the pictures below

2.3.3 COM2—Ring, +5V, +12V power / RS232,422,485 select(JR12)

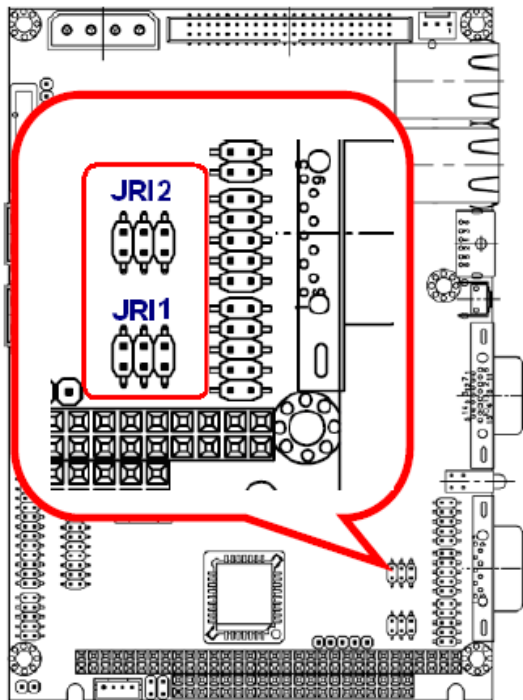

ECM-LX800A
Ring, +5V, +12V
power select

Ring*

1



2

* Default

+5V

1



2

+12V

1



2

ECM-LX800B
RS232,422,485
select

RS232*

1



2

* Default

RS422

1



2

RS485

1



2

Avalue Technology Inc.

www.avalue.com.tw
sales@avalue.com.tw
Tel:+886-2-82262345
Fax:+886-2-82262777

Avalue Europe
sales.europe@avalue.com.tw
Tel: +45-7025-0310
Fax: +45-4975-5026

Avalue USA
sales@avalue-usa.com
Tel: +1-732-578-0200
Fax: +1-732-578-0250



BCM Advanced Research
BCM5Sales@bcmcom.com
Tel: +1-949-470-1888
Fax: +1-949-470-0971

Avalue China
sales.china@avalue.com.cn
Tel: +86-21-5426-3399
Fax: +86-21-6495-0370

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.



Modify your cable pin assignment based on the following in order to use RS232/422/485

2.3.8 Serial port 2 connector in RS-232 Mode (JCOM2)

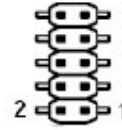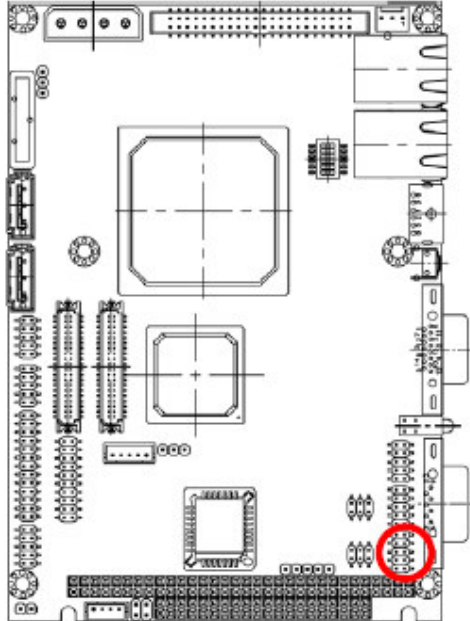

Signal	PIN	PIN	Signal
DCD	1	2	RxD
TxD	3	4	DTR
GND	5	6	DSR
RTS	7	8	CTS
RI	9	10	NC

2.3.9 Serial port 2 connector in RS-422 Mode (JCOM2)

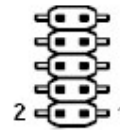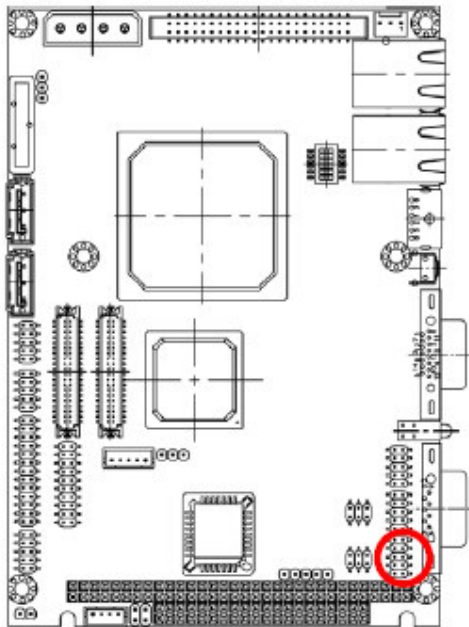

Signal	PIN	PIN	Signal
TxD-	1	2	RxD+
TxD+	3	4	RxD-
GND	5	6	NC
NC	7	8	NC
NC	9	10	NC

Avalue Technology Inc.

www.avalue.com.tw
 sales@avalue.com.tw
 Tel:+886-2-82262345
 Fax:+886-2-82262777



Avalue Europe
 sales.europe@avalue.com.tw
 Tel: +45-7025-0310
 Fax: +45-4975-5026

Avalue USA
 sales@avalue-usa.com
 Tel: +1-732-578-0200
 Fax: +1-732-578-0250

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.
 BCM Advanced Research
 BCM5Sales@bcmcom.com
 Tel: +1-949-470-1888
 Fax: +1-949-470-0971

Avalue China
 sales.china@avalue.com.cn
 Tel: +86-21-5426-3399
 Fax: +86-21-6495-0370

2.3.10 Serial port 2 connector in RS-485 Mode (JCOM2)

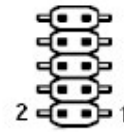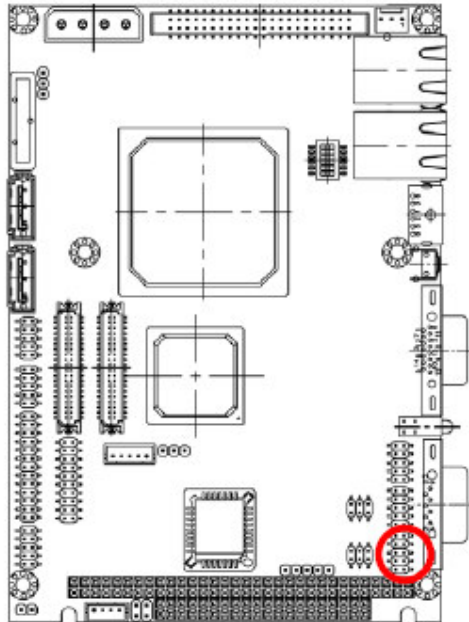

Signal	PIN	PIN	Signal
DATA-	1	2	NC
DATA+	3	4	NC
GND	5	6	NC
NC	7	8	NC
NC	9	10	NC

For ECM-LX800A

Just only setting in BIOS, Integrated Peripherals → Serial Port 2 Mode refer to the pictures below

Serial Port 2 Mode	232, 422, 485	Select the mode of serial port 2.
--------------------	---------------	-----------------------------------

