

FAQ / Application Note

Subject : How to make ECM-LX800D CF slot working as IDE Primary Master Mode.

FAQ Document No: H10004

Date: 2010/04/08

Model Name. (a.All models, b.若不同 model,以逗號區隔)

Rev. A1

Category: ☐ General ☒ H/W ☐ S/W ☐ Others, 寫小分類

Purpose :

Rework SOP for ECM-LX800D CF slot working as IDE Primary Master Mode.

Case: ECM-LX800D CF slot located as IDE Primary Slave. Customer require CF working as IDE primary Master mode.

Procedure:

1. Find CF slot.
2. CF slot Pin 39 is CSEL (#Master) Active Low signal. The original SCH pull high for Making CF card as Slave Mode.
3. Find adjacent GND pin15 for connecting Pin39 as GND. It will make CF card working as IDE Primary Master Mode
4. Please refer below Picture for short those two pins.



Avalue Technology Inc.

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.



www.avalue.com.tw
sales@avalue.com.tw
Tel: +886-2-82262345
Fax: +886-2-82262777

Avalue Europe
sales.europe@avalue.com.tw
Tel: +45-7025-0310
Fax: +45-4975-5026

Avalue USA
sales@avalue-usa.com
Tel: +1-732-578-0200
Fax: +1-732-578-0250

BCM Advanced Research
BCMSales@bcmcom.com
Tel: +1-949-470-1888
Fax: +1-949-470-0971

Avalue China
sales.china@avalue.com.cn
Tel: +86-21-5426-3399
Fax: +86-21-6495-0370

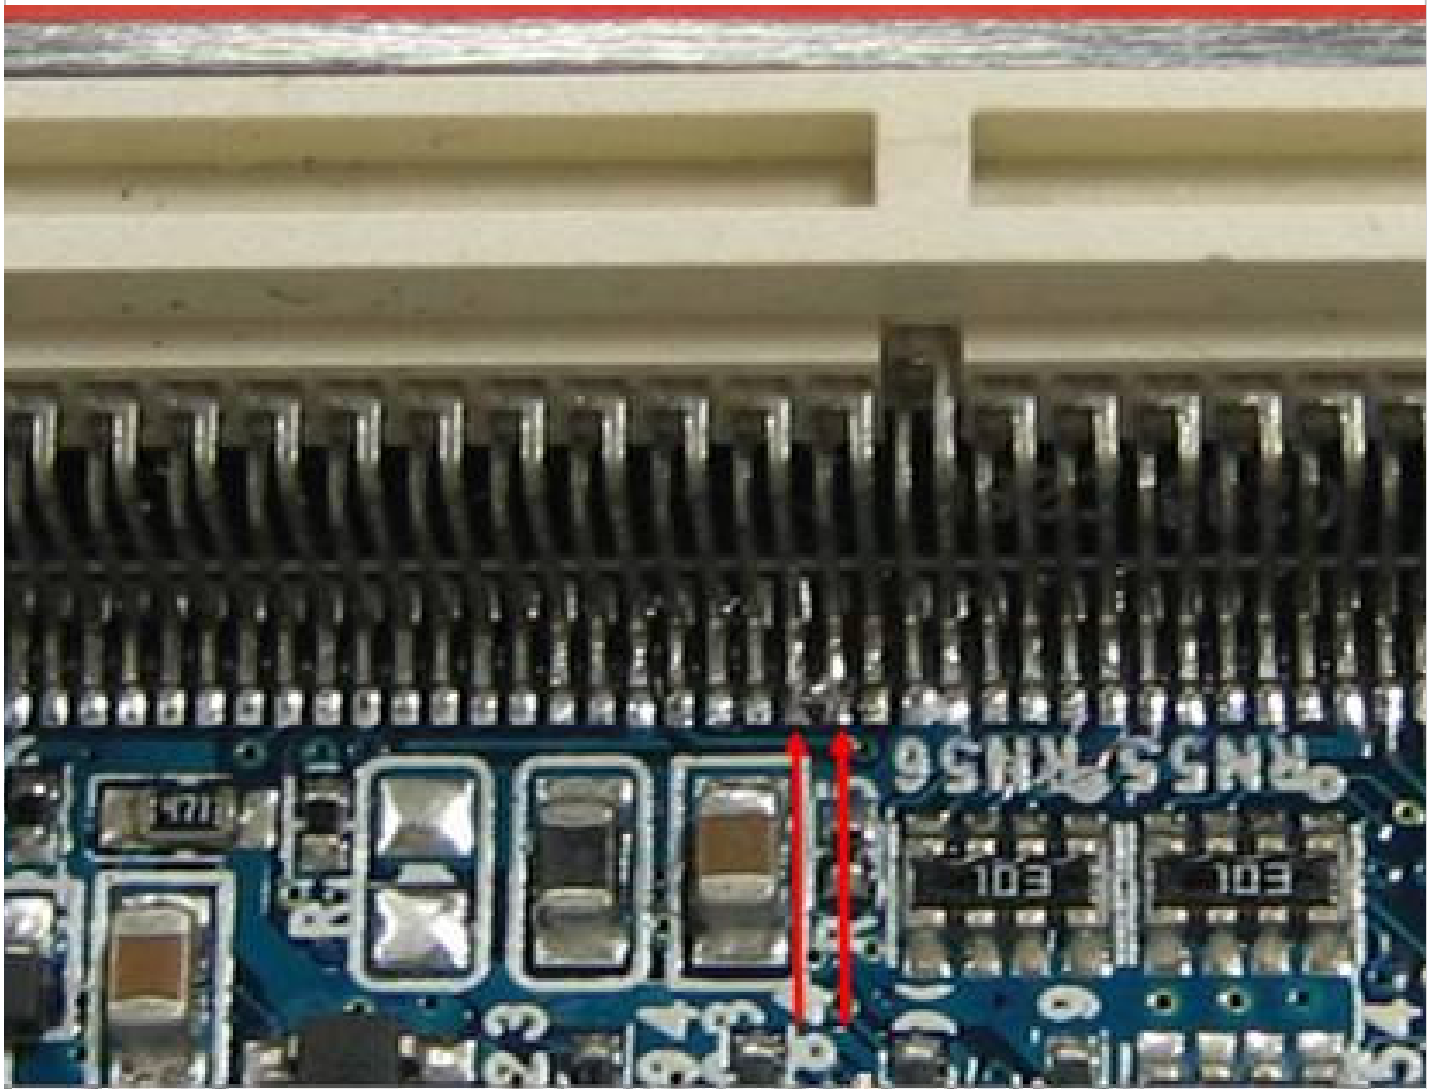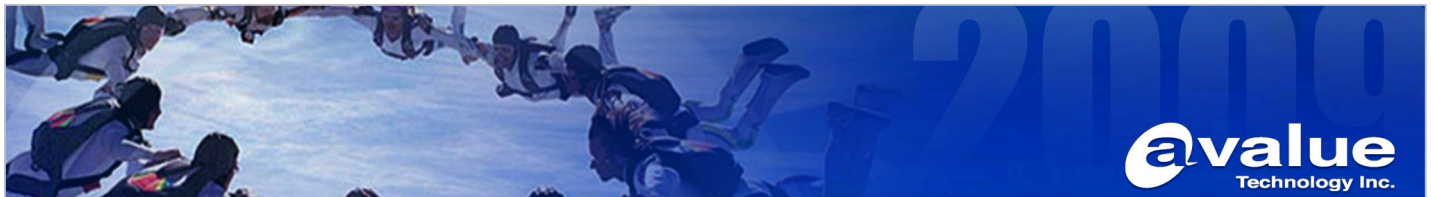

Avalue Technology Inc.

www.avalue.com.tw
sales@avalue.com.tw
Tel: +886-2-82262345
Fax: +886-2-82262777

Avalue Europe
sales.europe@avalue.com.tw
Tel: +45-7025-0310
Fax: +45-4975-5026

Avalue USA
sales@avalue-usa.com
Tel: +1-732-578-0200
Fax: +1-732-578-0250

BCM Advanced Research
BCMSales@bcmcom.com
Tel: +1-949-470-1888
Fax: +1-949-470-0971

Avalue China
sales.china@avalue.com.cn
Tel: +86-21-5426-3399
Fax: +86-21-6495-0370

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.

www.avalue.com.tw

5. After rework done. You could find the CF card located as IDE Primary Master.

