



FAQ / Application Note

Subject : FBRe seal will be appeared on each boot – how to disable FBWF to resolve this problem

FAQ Document No: S10006

Date: 2010 / 03/01

Model Name. Windows XP Embedded

Rev. A1

Category: ☐General ☐H/W ☒S/W ☐Others, 寫小分類

Purpose : the new Image running FBRe seal would appear on each boot, and this message would appear for 10 minutes before loading windows, if disable FBWF could solve the problem

```
C:\Documents and Settings\Administrator>FBWFMGR /disable
File-based write filter will be disabled on the next reboot.
C:\Documents and Settings\Administrator>
```

ANS. The problem is caused by FBWF, because FBWF default setting on enable

- 1) Please login "CMD" and key-in command "**FBWFMGR /disable**" then **reboot**
- 2) **After run second time FBRe seal**, please key-in command "**FBWFMGR /enable**"
- 3) **Then reboot**, finished

PS. key-in command "FBWFMGR /?" show help if you requirement

Avalue Technology Inc.

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.

www.avalu.com.tw
sales@avalu.com.tw
Tel: +886-2-82262345
Fax: +886-2-82262777

Avalue Europe
sales.europe@avalu.com.tw
Tel: +45-7025-0310
Fax: +45-4975-5026

Avalue USA
sales@avalu-usa.com
Tel: +1-732-578-0200
Fax: +1-732-578-0250

BCM Advanced Research
BCMSales@bcmcom.com
Tel: +1-949-470-1888
Fax: +1-949-470-0971

Avalue China
sales.china@avalu.com.cn
Tel: +86-21-5426-3399
Fax: +86-21-6495-0370