



FAQ / Application Note

Subject : How setting 5.1-CH High Definition Audio (ALC888) in ACP-Q45DV		
FAQ Document No: S10008	Date: 2010/07/12	
Model Name. ACP-Q45DV	Rev. A1	
Category: ☐General ☐H/W ■S/W ☐Others, <u>Installation</u>		
Purpose : Connect Lin-In/ Lin-out/ Mic-In Audio device		

The ACP-Q45DV Audio controller is Realtek ALC888 chip. That can support 5.1 + 2-CH independent audio streams

 - 1. Please connect your Audio device to AAFP1 connector.
 - A. Front Panel Audio connector AAFP1 Pin define

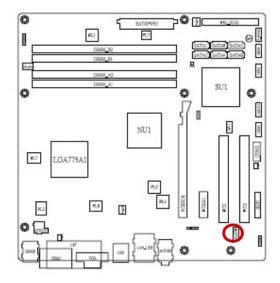



Signal	Connector
Line-In	SRTN1, SRTN2
Line-Out	Lin2_R, Lin2_L
Microphone	MIC2_R, MIC2_L

Avalue Technology Inc.

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.

www.avalue.com.tw sales@avalue.com.tw Tel:+886-2-82262345 Fax:+886-2-82262777 Avalue Europe sales.europe@avalue.com.tw Tel: +45-7025-0310 Fax: +45-4975-5026 Avalue USA sales@avalue-usa.com Tel: +1-732-578-0200 Fax: +1-732-578-0250 BCM Advanced Research BCMSales@bcmcom.com Tel: +1-949-470-1888 Fax: +1-949-470-0971 Avalue China sales.china@avalue.com.cn Tel: +86-21-5426-3399 Fax: +86-21-6495-0370



B. Or connect onboard I/O Audio connector:



Signal	Color	Device
Line-In	Blue	Tape,CD,DVD player or other audio sources.
Line-Out	Green	Connect a headphone or a speaker
Microphone	Pink	Microphone

Into the WinXP OS, install driver WDM_R225.zipYou can find Sound Manager in Message bar and start setting your device.



Avalue Technology Inc.







-End

Avalue Technology Inc.

www.avalue.com.tw sales@avalue.com.tw Tel:+886-2-82262345 Fax:+886-2-82262777 Avalue Europe sales.europe@avalue.com.tw Tel: +45-7025-0310 Fax: +45-4975-5026 Avalue USA sales@avalue-usa.com Tel: +1-732-578-0200 Fax: +1-732-578-0250 BCM Advanced Research BCMSales@bcmcom.com Tel: +1-949-470-1888 Fax: +1-949-470-0971 Avalue China sales.china@avalue.com.cn Tel: +86-21-5426-3399 Fax: +86-21-6495-0370

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.