



 
FAQ / Application Note

Subject : How to auto adjust screen of the position through OSD software for EBM-PNV board

FAQ Document No: S12003	Date: 2012/06/13
Model Name. EBM-PNV with 24bit LVDS panel	Rev. A1
Category: <input type="checkbox"/> General <input type="checkbox"/> H/W <input checked="" type="checkbox"/> S/W <input type="checkbox"/> Others, <u>Driver & Utility</u>	
Purpose: You can use OSD.exe tool to auto-tune screen in DOS or Windows.	

Before run the tool, please first check:

1. Your LVDS panel is single or dual channel 24bit and installed in JLVD2 connector.
2. BIOS: Chipset →North Bridge configuration→Video function configuration
 →Boot display device → “CRT”
 RTD-2553 chip EDID support → Enable

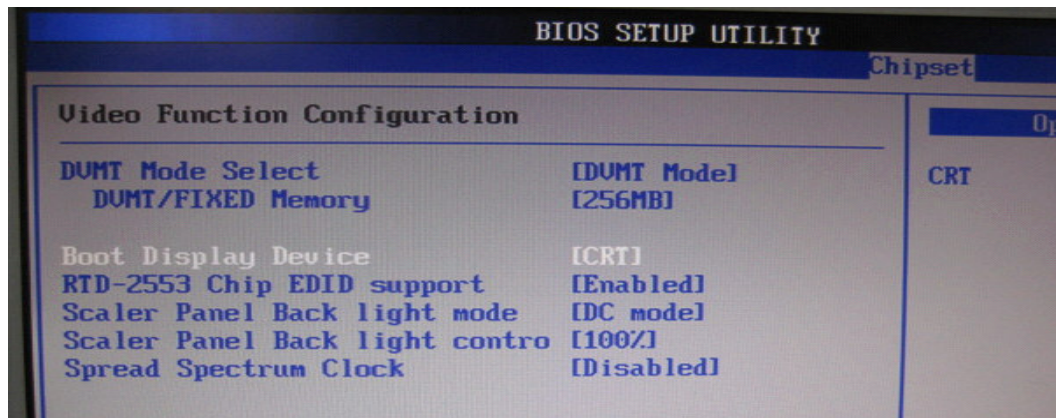

3. Have update correct firmware data to EBM-PNV board.

Avalue Technology Inc.

www.avalue.com.tw
 sales@avalue.com.tw
 Tel:+886-2-82262345
 Fax:+886-2-82262777

Avalue Europe
 sales.europe@avalue.com.tw
 Tel: +45-7025-0310
 Fax: +45-4975-5026

 
Avalue USA
 sales@avalue-usa.com
 Tel: +1-732-578-0200
 Fax: +1-732-578-0250

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.
 BCM Advanced Research
 BCM5Sales@bcmcom.com
 Tel: +1-949-470-1888
 Fax: +1-949-470-0971

Avalue China
 sales.china@avalue.com.cn
 Tel: +86-21-5426-3399
 Fax: +86-21-6495-0370


A. DOS mode:

a. Run OSD.exe for DOS

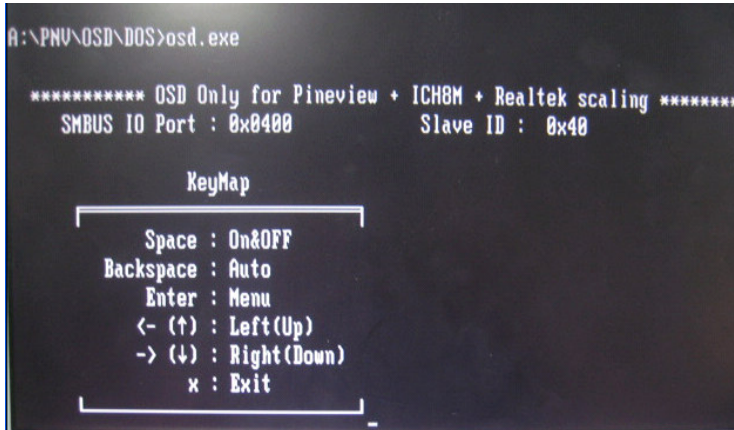


b. Press “Space” button in keyboard, it will control LVDS panel backlight ON/OFF.

 c. Press “Backspace” button in keyboard, it will Auto-tune screen.

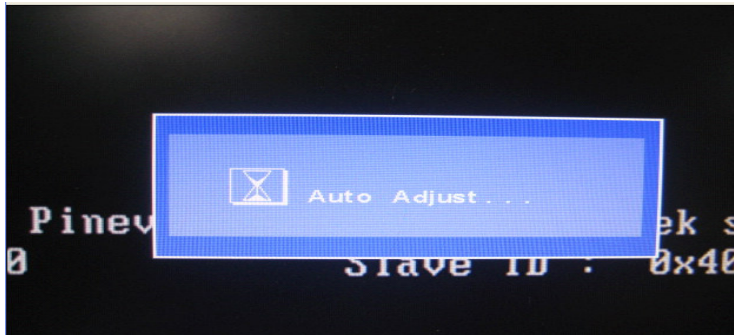


 d. Press “Enter” button in keyboard, it will display OSD menu.

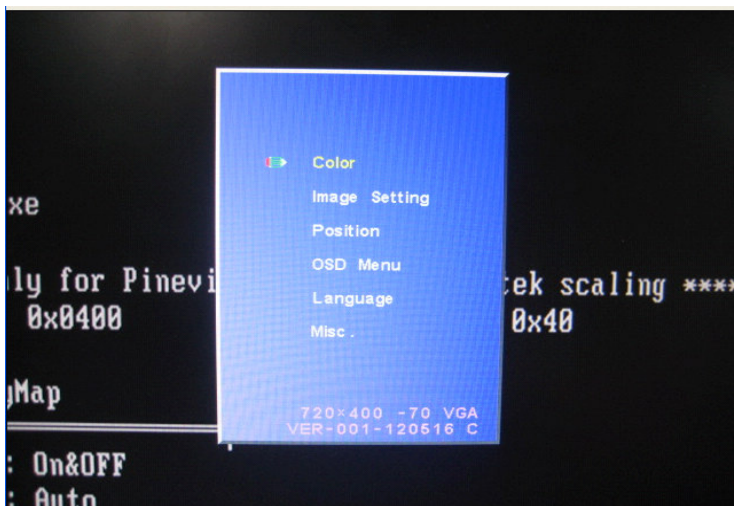


B. Windows mode :

 a. Run OSD.exe for Windows directly.

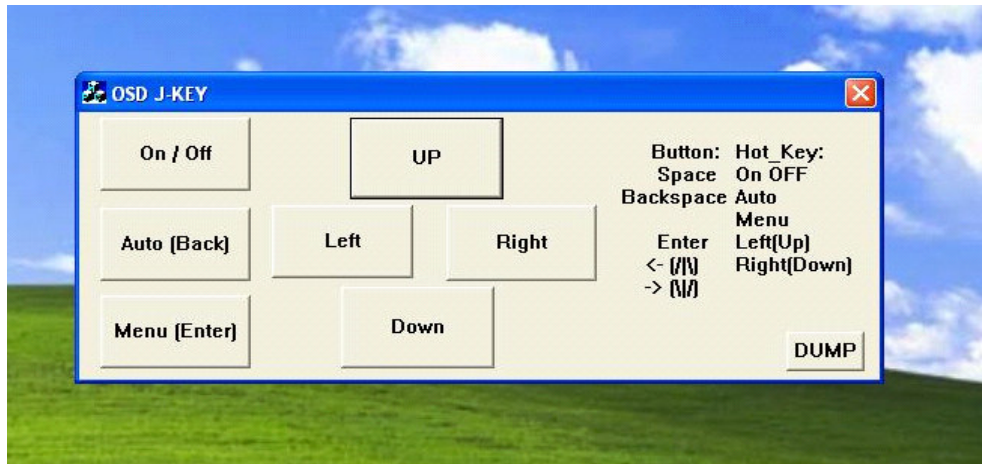

b. Hot key "space", it will control LVDS panel backlight ON or OFF.

 c. Hot key "Backspace", it will Auto-tune screen

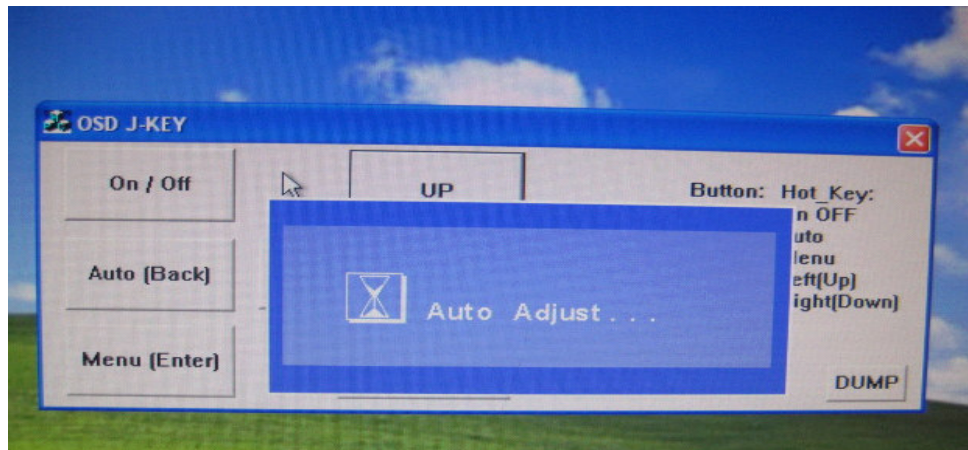

d. Hot key “Enter”, it will display OSD menu.



-End

Avalue Technology Inc.

www.avalue.com.tw
sales@avalue.com.tw
Tel:+886-2-82262345
Fax:+886-2-82262777

Avalue Europe
sales.europe@avalue.com.tw
Tel: +45-7025-0310
Fax: +45-4975-5026

Avalue USA
sales@avalue-usa.com
Tel: +1-732-578-0200
Fax: +1-732-578-0250

BCM Advanced Research
BCMSales@bcmcom.com
Tel: +1-949-470-1888
Fax: +1-949-470-0971

Avalue China
sales.china@avalue.com.cn
Tel: +86-21-5426-3399
Fax: +86-21-6495-0370

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.