

FAQ / Application Note



Subject : Set up ECM-QM57 for power ATX mode	
FAQ Document No: G13003	Date: 2013/04/19
Model Name. ECM-QM57	Rev.
Category: <input checked="" type="checkbox"/> General <input type="checkbox"/> H/W <input type="checkbox"/> S/W <input type="checkbox"/> Others, <u>Setup</u>	
Purpose: Relative hardware setting for ATX power type	

Please check configuration of PWRCON1, PWR_MSEL1, PWR_SB and JFP


Pin 1-2 in JFP is power button.

You will need to press power button to power on ECM-QM57 after you set up ECM-QM57 as power ATX mode.

 2.3.17 Miscellaneous setting connector (JFP)

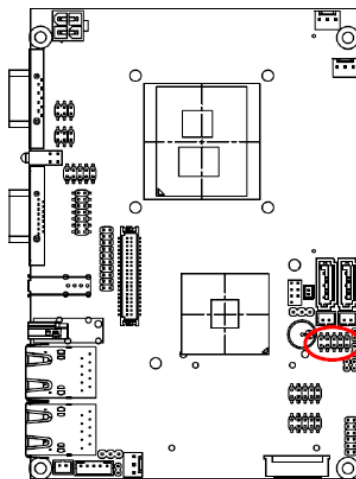

Signal	PIN
PEBT	1
	2
RST#	3
	4
PWR-LED	5
	6
HDD-LED	7
	8
COPEN#	9
	10

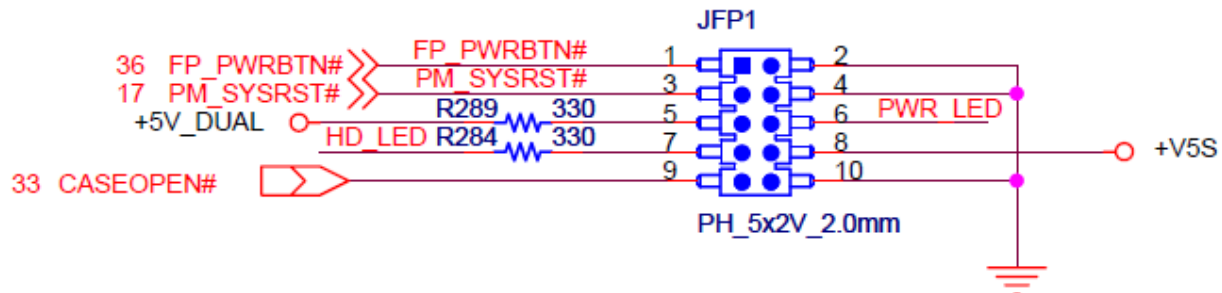

Avalue Technology Inc.

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.

www.avalue.com.tw
sales@avalue.com.tw
Tel: +886-2-82262345
Fax: +886-2-82262777


Avalue Europe
sales.europe@avalue.com.tw
Tel: +45-7025-0310
Fax: +45-4975-5026

Avalue USA
sales@avalue-usa.com
Tel: +1-732-578-0200
Fax: +1-732-578-0250

BCM Advanced Research
BCMSales@bcmcom.com
Tel: +1-949-470-1888
Fax: +1-949-470-0971


Avalue China
sales.china@avalue.com.cn
Tel: +86-21-5426-3399
Fax: +86-21-6495-0370

12V Power in

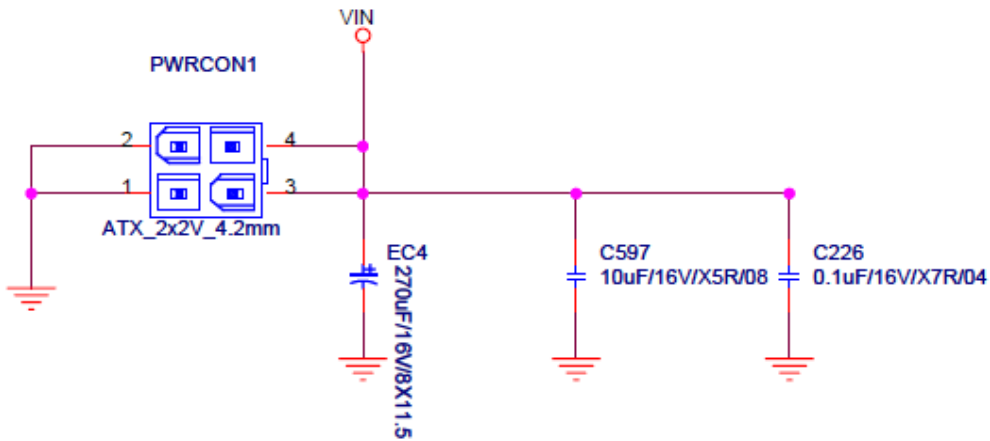

Connect **5VSB** and **PSON** signal to your ATX power supply if you want to control it.

2.3.4 5VSB connector in ATX (PWR_SB)

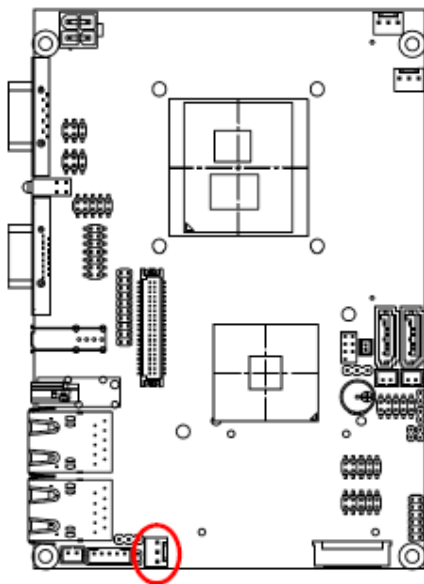

Signal	PIN
ATX5VSB	3
GND	2
PSON	1

Avalue Technology Inc.

www.avalue.com.tw
 sales@avalue.com.tw
 Tel:+886-2-82262345
 Fax:+886-2-82262777

Avalue Europe
 sales.europe@avalue.com.tw
 Tel: +45-7025-0310
 Fax: +45-4975-5026

Avalue USA
 sales@avalue-usa.com
 Tel: +1-732-578-0200
 Fax: +1-732-578-0250

BCM Advanced Research
 BCM5Sales@bcmcom.com
 Tel: +1-949-470-1888
 Fax: +1-949-470-0971


Avalue China
 sales.china@avalue.com.cn
 Tel: +86-21-5426-3399
 Fax: +86-21-6495-0370

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.

 
Power on mode select

You will need to press power button to power on ECM-QM57 after you set up ECM-QM57 as power on ATX mode.


2.3.3 AT/ ATX Input power select (PWR_MSEL1)

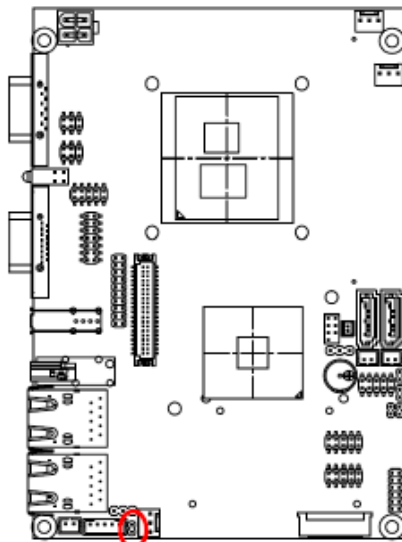






AT*

 

ATX



2.3.4.1 Signal Description –AT/ATX mode & Input power type

Input power type	Power-ON Mode	Description
AT Type	AT Mode (PWR_MSEL1) 	Use AT type power input, and set the board in AT mode.
	ATX Mode (PWR_MSEL1) 	Use AT type power input, and set the board in ATX mode.
ATX Type (PWR_SB) 	AT Mode (PWR_MSEL1) 	Use ATX type power input, and set the board in AT mode.
	ATX Mode (PWR_MSEL1) 	Use ATX type power input, and set the board in ATX mode.