

# **ARC-1532-C1**

**15" 6th Gen Intel® Core™ BGA Processor i7/i5/i3 Fanless  
Rugged Touch Panel PC with IET Expansion**

## **Quick Reference Guide**

**2<sup>nd</sup> Ed – 01 September 2020**

**Copyright Notice**

# Content

<b>1.</b>	<b>Getting Started .....</b>	<b>6</b>
1.1	Safety Precautions .....	6
1.2	Packing List.....	6
1.3	System Specifications .....	7
1.4	System Overview .....	11
1.4.1	I/O View .....	11
1.5	System Dimensions .....	12
<b>2.</b>	<b>Hardware Configuration .....</b>	<b>13</b>
2.1	ARC-1532-C1 connector mapping .....	14
2.1.1	Serial port 1 connector (COM1).....	14
2.1.2	Serial port 2 connector (COM2).....	14
2.2	Installing Hard Disk & Memory .....	15
2.3	Installing ARC-BYT DB .....	17
2.4	ARC-SKLU Overviews .....	19
2.5	ARC-SKLU Jumper and Connector list .....	20
2.6	ARC-SKLU Jumpers & Connectors settings .....	21
2.6.1	Clear CMOS (JCOMS1) .....	21
2.6.2	Serial port 1/2 pin9 signal select (JRI1/JRI2) .....	21
2.6.3	LCD backlight brightness adjustment (JBKLSEL1) .....	22
2.6.4	AT/ATX Input power select (JAT1) .....	22
2.6.5	Serial port 1 in RS-232/422/485 mode (JCOM1_SEL1).....	23
2.6.6	LCD Inverter connector (JBKL1) .....	23
2.6.7	On-board header for USB2.0 (JUSB1).....	24
2.6.8	On-board header for USB2.0 (JUSB2).....	24
2.6.9	Battery connector (JBAT1) .....	25
2.6.10	LCD backlight brightness adjustment (JBLK_CTRL1) .....	25
2.6.11	LVDS connector (JLVDIS1).....	26
2.6.12	AMPLIFIER_R (JSPIR1) .....	27
2.6.13	AMPLIFIER_L (JSPL1).....	27
2.6.14	SPI connector (JSPI1) .....	28
2.6.15	EC Debug connector (JEC1) .....	28
2.6.16	B2B connector (JB2B1) .....	29
2.6.17	Touch panel connector (JTP1) .....	30
2.6.18	General purpose I/O connector (JGPIO1).....	30

2.6.19 SATA Power connector (SATAPW1).....	31
<b>2.7 ARC-BYT DB-A/B/C/D/E/F/G/H/K Overviews .....</b>	<b>32</b>
2.7.1 ARC-BYT DB-A .....	32
2.7.2 ARC-BYT DB-B .....	32
2.7.3 ARC-BYT DB-C .....	32
2.7.4 ARC-BYT DB-D .....	33
2.7.5 ARC-BYT DB-E .....	33
2.7.6 ARC-BYT DB-F.....	33
2.7.7 ARC-BYT DB-G .....	34
2.7.8 ARC-BYT DB-H .....	34
2.7.9 ARC-BYT DB-K .....	34
<b>2.8 ARC-BYT DB-A/B/C/D/E/F/G/H/K Connector list .....</b>	<b>35</b>
2.8.1 ARC-BYT DB-A .....	35
2.8.2 ARC-BYT DB-B .....	35
2.8.3 ARC-BYT DB-C .....	35
2.8.4 ARC-BYT DB-D .....	35
2.8.5 ARC-BYT DB-E .....	35
2.8.6 ARC-BYT DB-F.....	36
2.8.7 ARC-BYT DB-G .....	36
2.8.8 ARC-BYT DB-H .....	36
2.8.9 ARC-BYT DB-K .....	36
<b>2.9 ARC-BYT DB-D Connectors settings .....</b>	<b>38</b>
2.9.1 Serial Port 1 connector (D_COM1).....	38
2.9.2 Serial Port 2 connector (D_COM2).....	38
<b>2.10ARC-BYT DB-E Jumpers &amp; Connectors settings .....</b>	<b>39</b>
2.10.1 CAN2.0 Switch (E_JCAN20) .....	39
2.10.2 For user update FW (E_JBOOT0).....	39
2.10.3 For user update FW (E_JIAP1) .....	40
<b>2.11ARC-BYT DB-F Connectors settings .....</b>	<b>42</b>
<b>2.12ARC-BYT DB-G Connectors settings .....</b>	<b>43</b>
2.12.1 Serial Port 1 connector (G_COM1) .....	43
2.12.2 Serial Port 2 connector (G_COM2) .....	43
2.12.3 Serial Port 3 connector (G_COM3) .....	44
<b>2.13ARC-BYT DB-H Jumpers settings.....</b>	<b>44</b>
2.13.1 USB Power selector (H_USB_PWR_SEL1).....	44
<b>2.14ARC-BYT DB-H Connectors settings .....</b>	<b>45</b>
2.14.1 Serial Port 1 connector (H_COM1).....	45
2.14.2 Serial Port 2 connector (H_COM2).....	45
<b>2.15ARC-BYT DB-K Connectors settings .....</b>	<b>46</b>
2.15.1 Serial Port 1 connector (I_COM1) .....	46

2.15.2 Serial Port 2 connector (I_COM2) .....	46
<b>3.BIOS Setup .....</b>	<b>47</b>
3.1 Introduction .....	48
3.2 Starting Setup .....	48
3.3 Using Setup .....	49
3.4 Getting Help .....	50
3.5 In Case of Problems.....	50
3.6 BIOS setup.....	51
3.6.1 Main Menu .....	51
3.6.1.1 System Language.....	52
3.6.1.2 System Date .....	52
3.6.1.3 System Time.....	52
3.6.2 Advanced Menu.....	52
3.6.2.1 Trusted Computing .....	53
3.6.2.2 APCI Settings .....	53
3.6.2.3 AMT Configuration.....	55
3.6.2.4 PCH-FW Configuration .....	56
3.6.2.5 IT8528 Super IO Configuration .....	56
3.6.2.5.1 Serial Port 1 Configuration.....	57
3.6.2.5.2 Serial Port 2 Configuration.....	58
3.6.2.5.3 Serial Port 3 Configuration.....	58
3.6.2.5.4 Serial Port 4 Configuration.....	59
3.6.2.5.5 Serial Port 5 Configuration.....	59
3.6.2.6 H/W Monitor .....	60
3.6.2.7 S5 RTC Wake Settings .....	60
3.6.2.8 Serial Port Console Redirection .....	61
3.6.2.8.1 Legacy Console Redirection Settings .....	61
3.6.2.9 CPU Configuration.....	62
3.6.2.10 Intel TXT Configuration .....	62
3.6.2.11 SATA Configuration .....	63
3.6.2.12 Network Stack Configuration .....	64
3.6.2.13 CSM Configuration.....	64
3.6.2.14 USB Configuration .....	65
3.6.3 Chipset.....	66
3.6.3.1 System Agent (SA) Configuration .....	66
3.6.3.1.1 Graphics Configuration .....	67
3.6.3.1.2 Memory Configuration.....	68
3.6.3.2 PCH-IO Configuration .....	69
3.6.3.2.1 PCI Express Configuration.....	69
3.6.3.2.1.1 PCI Express Root Port5 (i210/211) .....	70

## Quick Reference Guide

3.6.3.2.1.2 PCI Express Root Port8 (B2B mPCIe) .....	71
3.6.3.2.1.3 PCI Express Root Port12 (mPCIe) .....	72
3.6.3.2.2 USB Configuration .....	73
3.6.3.2.3 HD Audio Configuration .....	73
3.6.4 Security .....	74
3.6.4.1 Secure Boot menu .....	75
3.6.4.1.1 Key Management.....	76
3.6.5 Boot.....	76
3.6.6 Save and exit .....	77
3.6.6.1 Save Changes and Reset.....	78
3.6.6.2 Discard Changes and Reset.....	78
3.6.6.3 Restore Defaults .....	78
3.6.6.4 Launch EFI Shell from filesystem device .....	78

# 1. Getting Started

## 1.1 Safety Precautions

### Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

### Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

## 1.2 Packing List

- 1 x ARC-1532-C1
- 1 x Power Adapter
- 4 x screws for VESA



If any of the above items is damaged or missing, contact your retailer.

## 1.3 System Specifications

Component	
<b>Mother Board</b>	ARC-SKLU
<b>CPU</b>	6th Gen Intel® Core™ i5-6300U, 2-Core, 2.4GHz processor
<b>CPU Cooler (Type)</b>	Fanless Heatsink
<b>Memory</b>	One 260-pin SODIMM Socket Up to 16GB DDR4 2133 SDRAM
<b>Power Supply</b>	DC in
<b>Adapter</b>	60W power adaptor
<b>Speaker</b>	0.6 W*2
<b>Wireless LAN</b>	Optional USB or MPCIE module
<b>Bluetooth</b>	Optional
<b>Operating System</b>	Linux, Ubuntu, Windows 7/10
<b>Expansion Card</b>	Compatible to all ARC-BYT DB modules (BIOS auto adjusted)
<b>Other Component</b>	Logitech detect BD
Storage	
<b>Hard Disk Drive</b>	1 x 2.5" Drive Bay, HDD
<b>Solid State Drive</b>	1 x 2.5" Drive Bay, HDD
<b>Other Storage Device</b>	1 x mSATA supports on the 1st Mini PCIe slot, Auto switch for mSATA or Mini PCIe
Panel	
<b>LCD Panel</b>	15", 1024 X 768
<b>B/L Inverter/Converter</b>	LCD built in
<b>Touch Screen</b>	PCAP
<b>Touch Controller</b>	EETI
External I/O	
<b>Serial Port</b>	2 x DB-9 COM(COM1 for RS-232/422/485, selectable by BIOS, RS-485 supports Auto Flow, Pin-9 selected by Ring/+5V/+12V)( COM2 for RS232, Pin-9 selected by Ring/+5V/+12V)
<b>USB Port</b>	4 x USB3.0 (2 x Double deck)
<b>DIO Port</b>	16-bit GPIO
<b>Video Port</b>	1 x HDMI (by ARC-BYT DB-C)
<b>Audio Port</b>	Realtek ALC892 HD codec
<b>LAN Port</b>	1 x I219LM PHY, 1 x Intel I211AT GbE controller
<b>Wireless LAN Antenna</b>	3 x Antenna
<b>Indicator Light</b>	HDD LED, Power LED (Green for Power, Yellow for HDD)
<b>Expansion Slots</b>	2* mini PCIe full size (support half size) 1 x mSATA supports on the 1st Mini PCIe slot, Auto switch for mSATA or Mini PCIe

## ARC-1532-C1

	PCIe
<b>Internal I/O</b>	1 x SATA connector & 1 x 2-pin wafer SATA power connector 1 x 2 x 20-pin Hirose connector for 2 x 24-bit LVDS 1 x 5-pin lockable connector for inverter backlight control with dimming (PWM/DC mode & backlight brightness selected by BIOS as standard) 2 x 3-pin header for LCD backlight brightness adjustment (dimming) (as ECM-BYT2 w/ light/dark, VR, DC/PWM) 1 x 3-pin header for CMOS (protect*Clear) 1 x 2 x 3-pin header for COM1/ 2 pin 9 signal selection (+5, +12, Ring, selected by jumper) 1 x 2 x 3-Pin header for SPI 1 x 2 x 6-pin wafer for front panel 1 x 3-pin header for Power mode(AT/ATX) 1 x Buzzer 2 x 2-pin wafer for speaker out (as ARC-SKLU) 1 x 5-pin 90 degree pin header for touch connector 1 x 1 x 5 pin wafer for 1 USB 2.0 (For USB WiFi) 2 x 6 pin wafer for SM bus (Reserved for smart battery)and 8bit GPIO  1 x 80-pin board to board connector for Expansion board (Hirose FX18-80P-0.8SH & FX18-80S-0.8SH)
<b>Mechanical</b>	
<b>Power Type</b>	AT/ATX
<b>Power Requirement</b>	DC +12V ~ +26V, wide voltage single power input TVS component for surge protection Reverse current/voltage protection
<b>ACPI</b>	Single power ATX Support S0, S3, S4, S5 and ACPI 3.0 Compliant
<b>Power Connector Type</b>	2.5mm Lockable DC Jack, co-lay with phoenix connector
<b>Dimension</b>	350 x 274 x 49.8mm
<b>Weight</b>	3.7 Kgs
<b>Color</b>	Front: Die-Casting with Cover lens; Rear: Black Casting-Aluminum
<b>Fanless</b>	Yes
<b>OS Support</b>	Linux, Ubuntu, Windows 7/10
<b>Reliability</b>	
<b>EMI Test</b>	CE/ FCC class B
<b>Dust and Rain Test</b>	Front Panel IP65, Rear IP41 except I/O
<b>Vibration Test</b>	Random Vibration Operation: 1. PSD: 0.03622G <sup>2</sup> /Hz , 2.0 Grms 2. operation mode

	<p>3. Test Frequency : 5-500Hz          4. Test Axis : X,Y and Z axis          5. 30 minutes per each axis          6. IEC 60068-2-64 Test:Fh          7. Storage : CF or HDD</p> <p>Sine Vibration test (Non-operation)          1 Test Acceleration : 2G          2 Test frequency : 5~500 Hz          3 Sweep : 1 Oct/ per one minute. (logarithmic)          4 Test Axis : X,Y and Z axis          5 Test time :10 min. each axis          6 System condition : Non-Operating mode          7. Reference IEC 60068-2-6 Testing procedures</p> <p>Package vibration test          1. PSD: 0.026G<sup>2</sup>/Hz , 2.16 Grms          2. Non-operation mode          3. Test Frequency : 5-500Hz          4. Test Axis : X,Y and Z axis          5. 30 min. per each axis          6. IEC 60068-2-64 Test:Fh</p>
<b>Mechanical Shock Test</b>	<p>1. Wave form : Half Sine wave          2. Acceleration Rate : 20g for operation mode          3. Duration Time : 11ms          4. No. of Shock : +/- X,Y,Z axis 3 times          5. Test Axis: +/- X,Y,Z axis          6. Operation mode          7. Reference IEC 60068-2-27 Testing procedures Test Eb : Shock Test</p>
<b>Drop Test</b>	<p>Package drop test          1 One corner , three edges, six faces          2 ISTA 2A, IEC-60068-2-32 Test:Ed</p>
<b>Operating Temperature</b>	-10 ~ +50 degree C SSD 0 ~ 40 degree C HDD
<b>Operating Humidity</b>	0 ~ 90% Relative Humidity, Non-condensing
<b>Storage Temperature</b>	-20 ~ 60 degree
<b>Compliant with following Flexible Expansion Modules</b>	
<b>ARC-BYT DB-A</b>	4 x USB3.0 module

## ARC-1532-C1



<b>ARC-BYT DB-B</b>	3 x Audio Jack (Line in/Line out/Mic in)+HDMI
<b>ARC-BYT DB-C</b>	HDMI + Mini PCIe (w/ SIM slot)
<b>ARC-BYT DB-D</b>	2 x COM Isolation module
<b>ARC-BYT DB-G</b>	3 x COM (w/o isolation, RS-232 only)
<b>ARC-BYT DB-H</b>	2COM (RS-232) + 1USB 2.0
<b>ARC-BYT DB-K</b>	2COM (RS-232) + 1LAN
<b>ARC-BYT DB-E</b>	12-bit GPIO+CAN Bus
<b>ARC-BYT DB-F</b>	CAN Bus for OBDII



**Note:** Specifications are subject to change without notice.

## 1.4 System Overview


### 1.4.1 I/O View

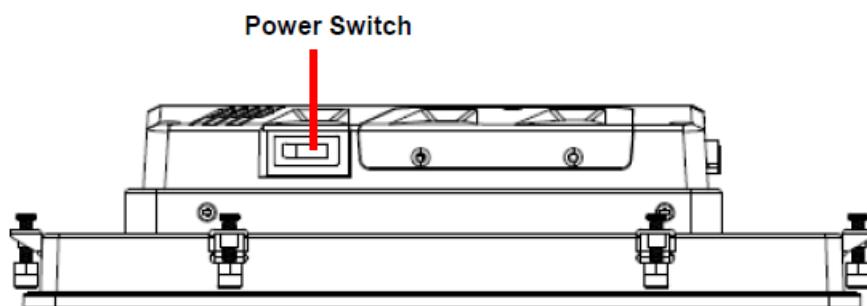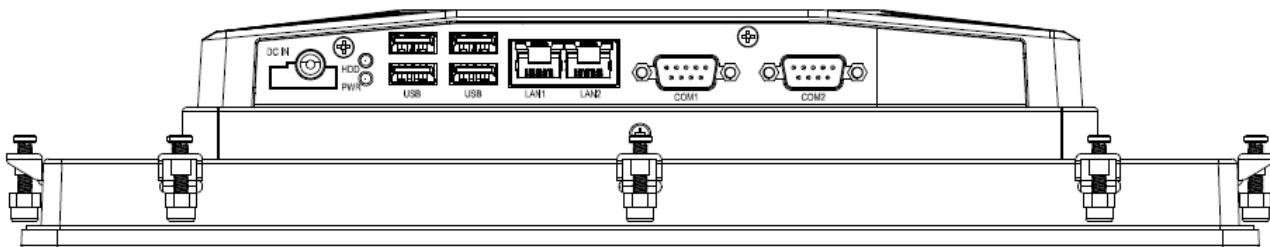

## Connectors

Label	Function	Note
DC IN	DC Power-in connector	
COM1/2	Serial port 1/2 connector	DB-9 male connector
USB	4 x USB 3.0 connector	
LAN1/2	RJ-45 Ethernet 1/2	
HDD	HDD indicator	
PWR	System power indicator	
<b>Power Switch</b>	Power on button	

## 1.5 System Dimensions

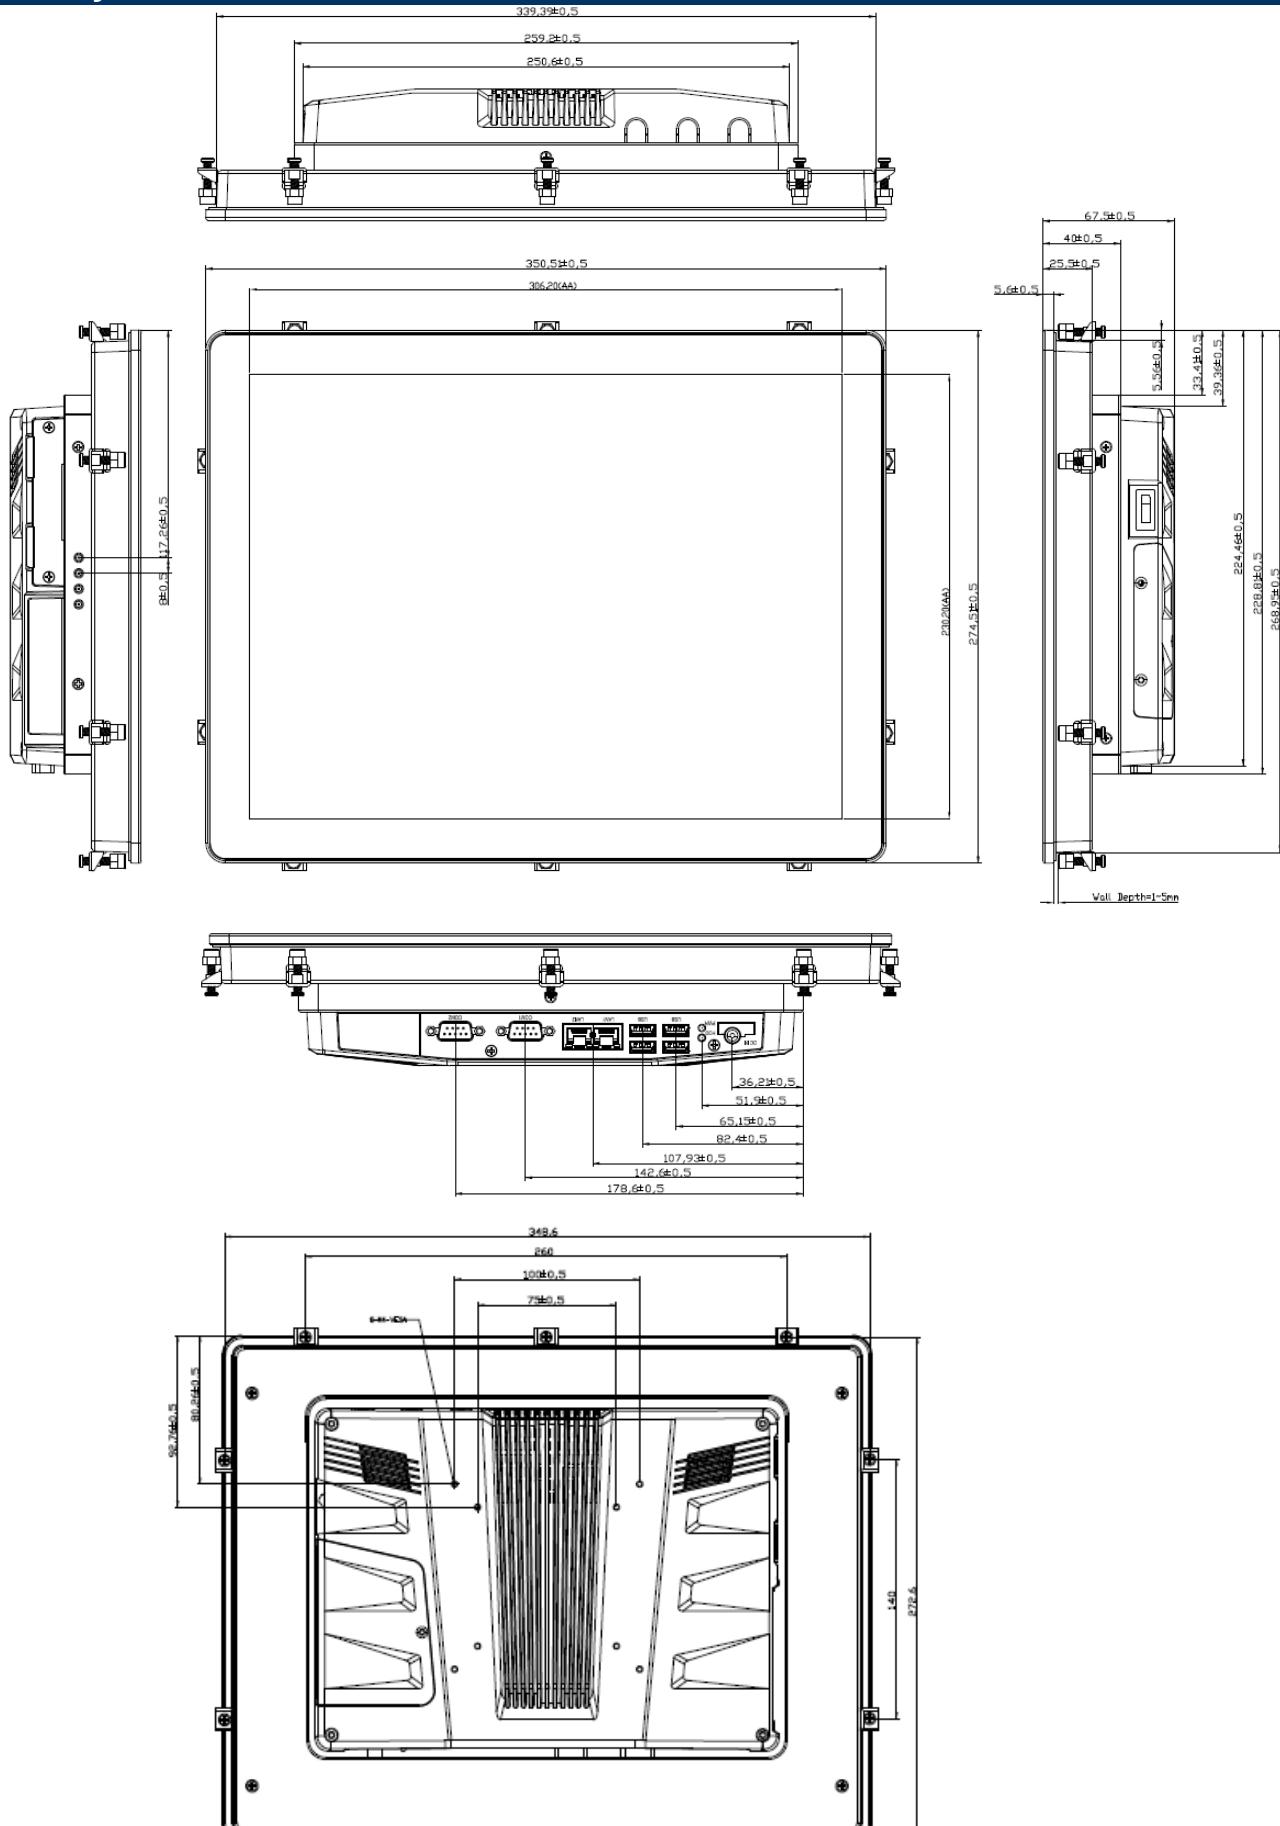

(Unit: mm)


## 2. Hardware Configuration

For advanced information, please refer to:

- 1- ARC-SKLU, ARC-BYT DB-A/B/C/D/E/F/G/H/K included in this manual.


## 2.1 ARC-1532-C1 connector mapping

### 2.1.1 Serial port 1 connector (COM1)

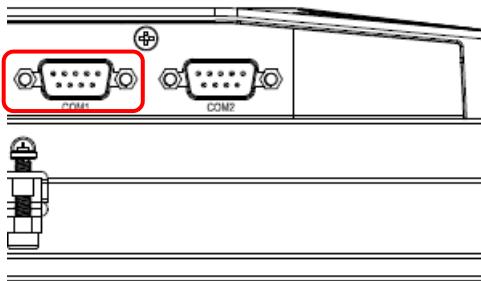

Signal	PIN	PIN	Signal
DATA-	1	6	NC
DATA+	2	7	NC
NC	3	8	NC
NC	4	9	NC
GND	5		

Please set BIOS & JCOM2\_SEL2

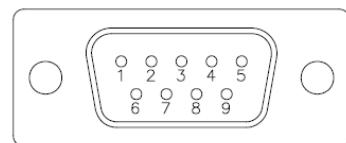

RS-232



Signal	PIN	PIN	Signal
NDCDA#	1	6	NDSRA#
NRXDA	2	7	NRTSA#
NTXDA	3	8	NCTSA#
NDTRA#	4	9	NRIA#
GND	5		

RS-422

Signal	PIN	PIN	Signal
TxD-	1	6	NC
TxD+	2	7	NC
RxD+	3	8	NC
RxD-	4	9	NC
GND	5		

Please set BIOS & JCOM2\_SEL2



### 2.1.2 Serial port 2 connector (COM2)

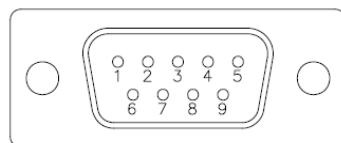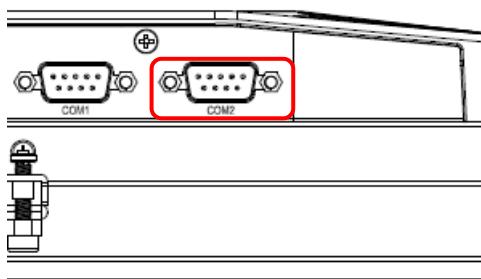

Signal	PIN	PIN	Signal
NDCDB#	1	6	NDSRB#
NRXDB	2	7	NRTSB#
NTXDB	3	8	NCTS#
NDTRB#	4	9	NRIB#
GND	5		


## 2.2 Installing Hard Disk & Memory

**Step 1. Memory Installation:** Remove 3 screws to release the chassis cover, and remove it.

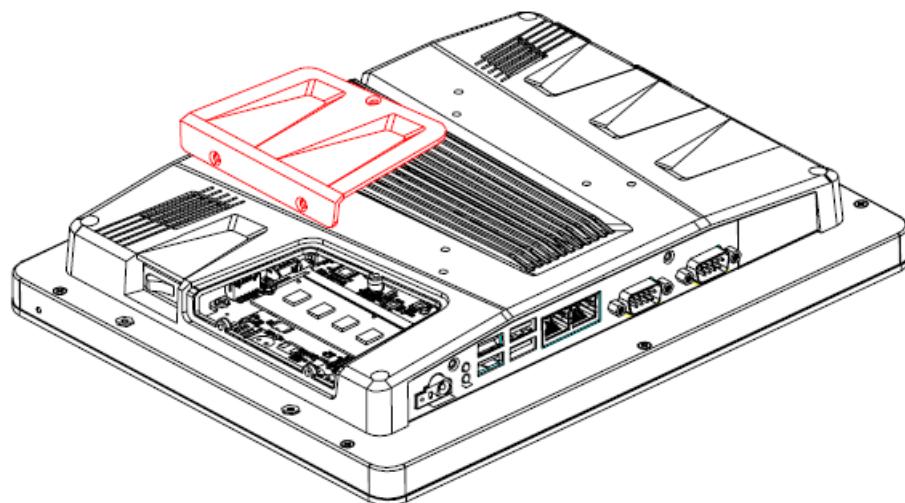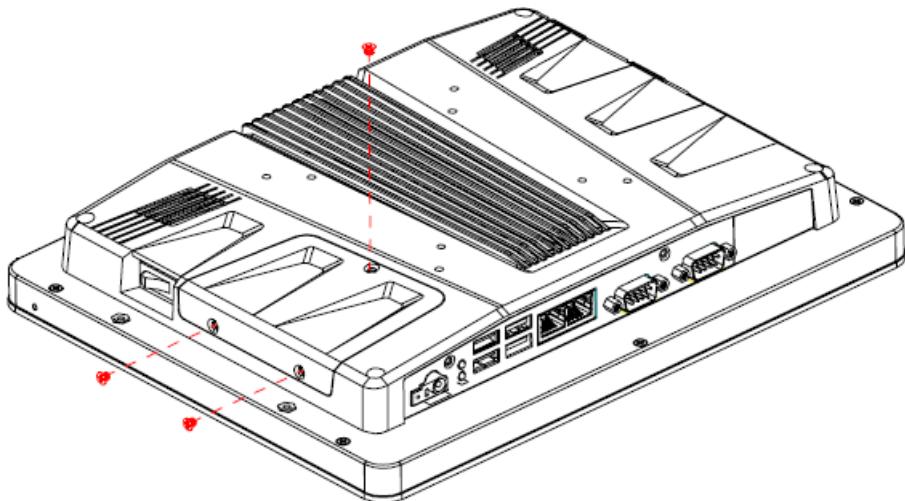


**Step 2.1** Insert the SODIMM into the memory socket.

**Step 2.2** Re-assemble your system back through previous steps to complete the installation.

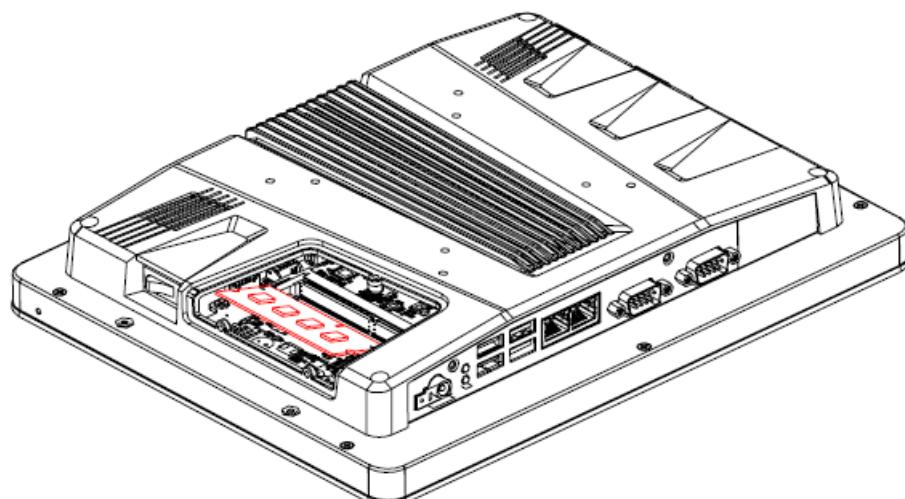


**Step 3. HDD Installation:** Insert the HDD into the Drive Bay and fasten 2 screws.

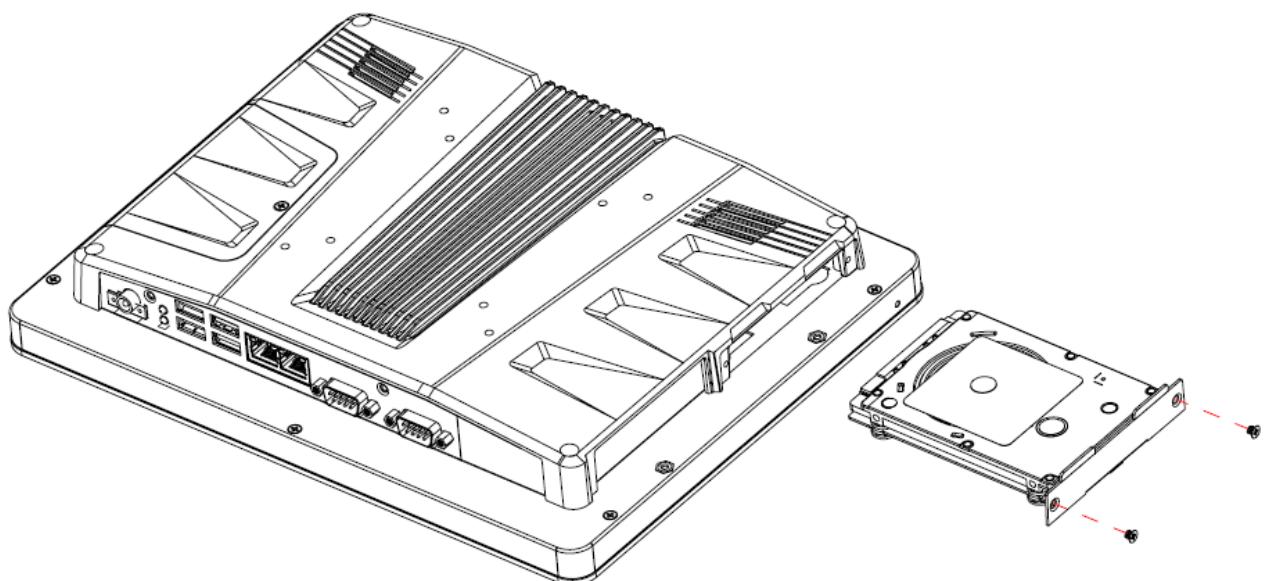


## 2.3 Installing ARC-BYT DB

**Step 1.** Unfasten 2 screws of the HDD bracket and take it off.



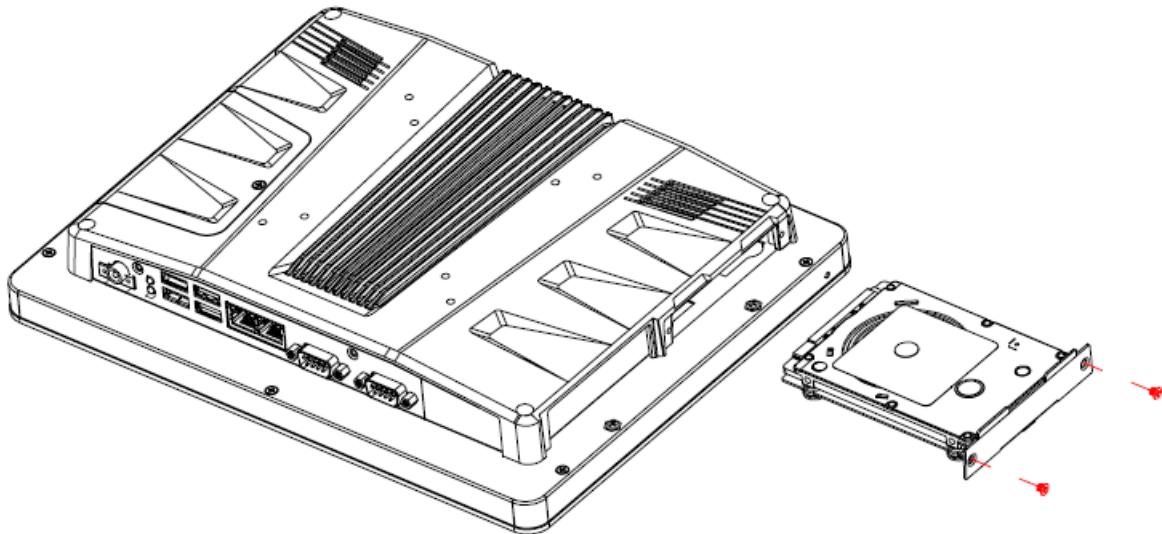


**Step 2.** Remove 4 screws to release the chassis cover, and remove it.

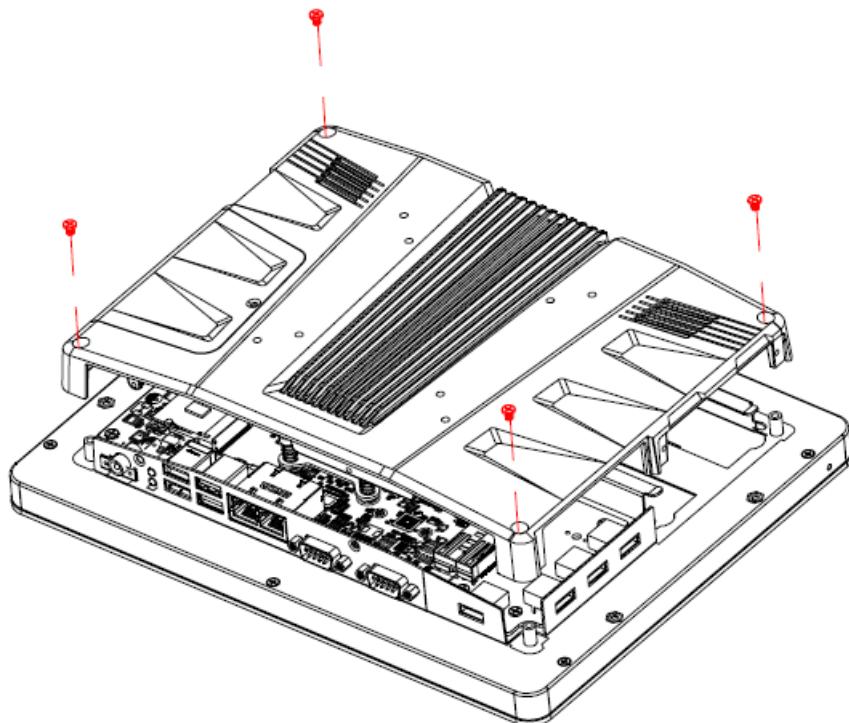


**Step 2.1** Insert the ARC-BYT DB into the socket and fasten 3 screws.

**Step 2.2** Re-assemble your system back through previous steps to complete the installation

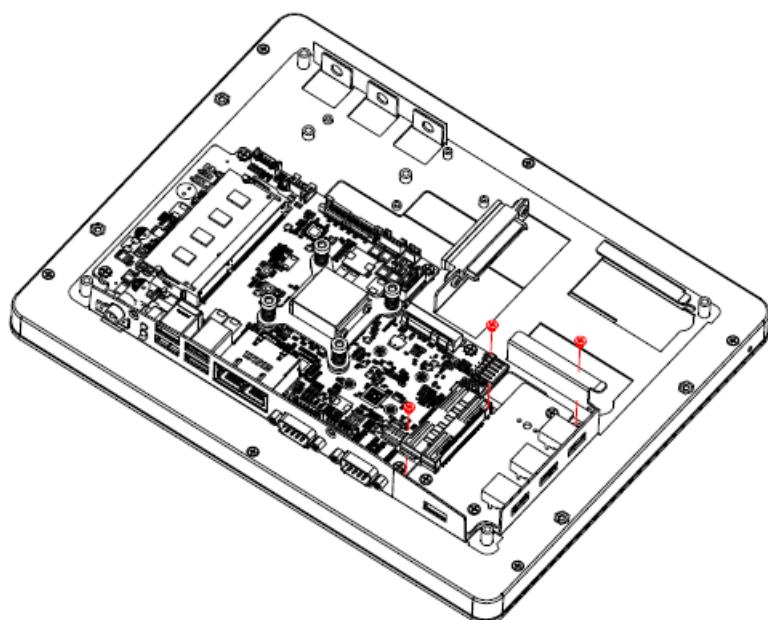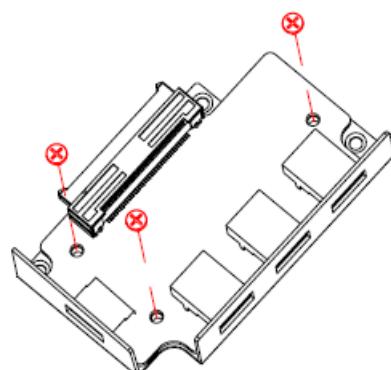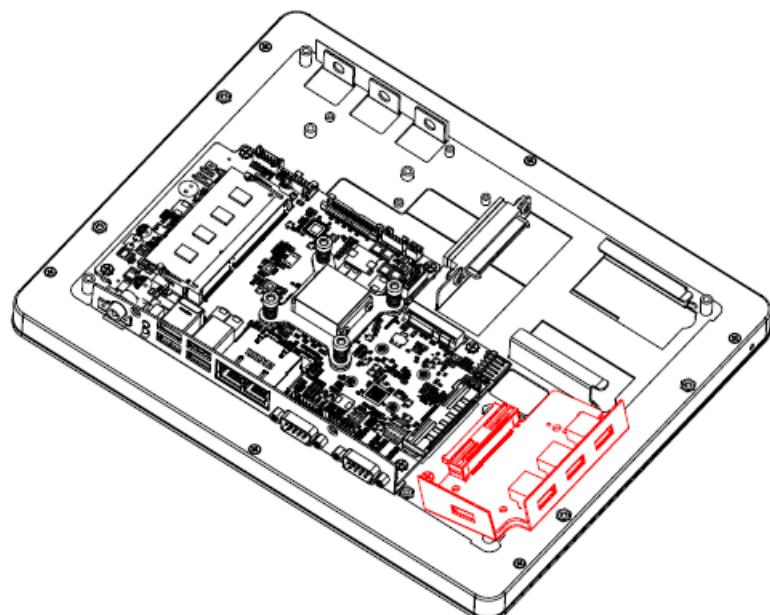

## 2.4 ARC-SKLU Overviews

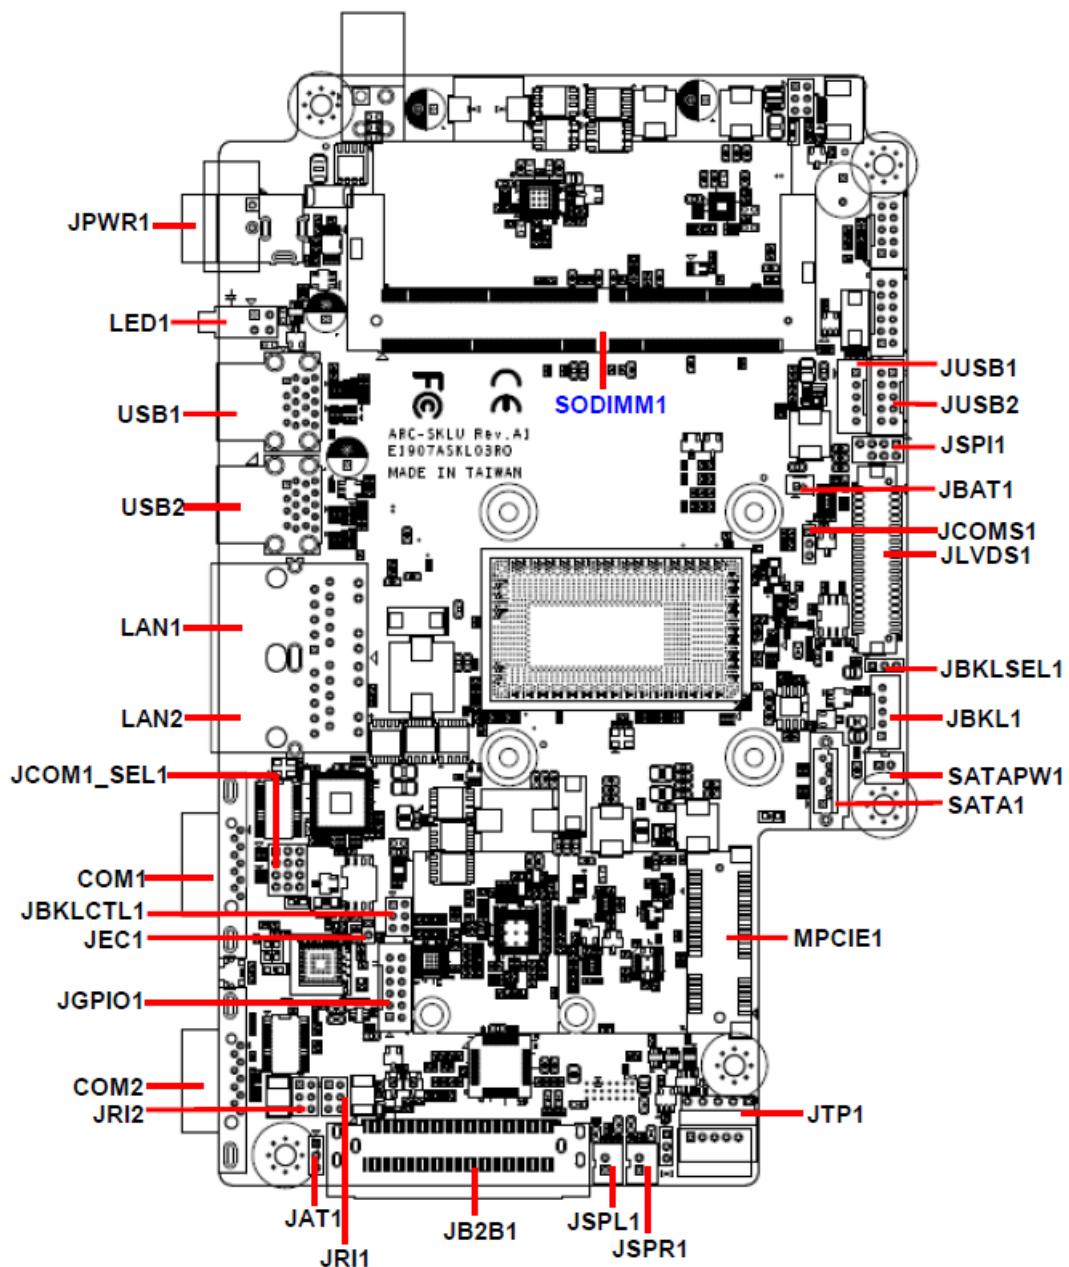

## 2.5 ARC-SKLU Jumper and Connector list

### Jumper


Label	Function	Note
<b>JCOMS1</b>	Clear CMOS	3 x 1 header, pitch 2.00mm
<b>JRI1/2</b>	Serial port 1/2 pin9 signal select	3 x 2 header, pitch 2.00mm
<b>JCOM1_SEL1</b>	Serial port 1 in RS-232/422/485 mode	4 x 3 header, pitch 2.00mm
<b>JBKLSEL1</b>	LCD backlight brightness adjustment	3 x 1 header, pitch 2.00mm
<b>JAT1</b>	AT/ATX Input power select	3 x 1 header, pitch 2.00mm

### Connectors


Label	Function	Note
<b>SODIMM1</b>	1 x 260-Pin DDR4 2133MHz SO-DIMM	
<b>JBKL1</b>	LCD Inverter connector	5 x 1 wafer, pitch 2.00mm
<b>COM1/2</b>	Serial Port 1/2 connector	D-sub 9 pin, male
<b>JTP1</b>	Touch panel connector	5 x 1 header, pitch 2.54mm
<b>JSPR1</b>	AMPLIFIER_R	2 x 1 wafer, pitch 2.00mm
<b>JSPL1</b>	AMPLIFIER_L	2 x 1 wafer, pitch 2.00mm
<b>JB2B1</b>	B2B connector	40 x 2 wafer, pitch 0.80mm
<b>JBKLCTL1</b>	LCD backlight brightness adjustment	3 x 2 header, pitch 2.00mm
<b>LED1</b>	HDD/Power LED indicator	
<b>JLVDS1</b>	LVDS connector	DIN 40-pin wafer, pitch 1.25mm
<b>USB1/2</b>	USB connector 1/2	
<b>JUSB1</b>	On-board header for USB2.0	5 x 1 wafer, pitch 2.00mm
<b>JUSB2</b>	On-board header for USB2.0	5 x 2 wafer, pitch 2.00mm
<b>LAN1/2</b>	RJ-45 Ethernet 1/2	
<b>MPCIE1</b>	Mini-PCIe connector	
<b>JBAT1</b>	Battery connector	2 x 1 wafer, pitch 1.25mm
<b>JGPIO1</b>	General purpose I/O connector	6 x 2 wafer, pitch 2.00mm
<b>JPWR1</b>	Power connector	
<b>JSPI1</b>	SPI connector	4 x 2 header, pitch 2.00mm
<b>JEC1</b>	EC Debug connector	2 x 1 header, pitch 2.00 mm
<b>SATA1</b>	Serial ATA connector	
<b>SATAPW1</b>	SATA Power connector	2 x 1 wafer, pitch 2.00mm

## 2.6 ARC-SKLU Jumpers & Connectors settings


### 2.6.1 Clear CMOS (JCOMS1)

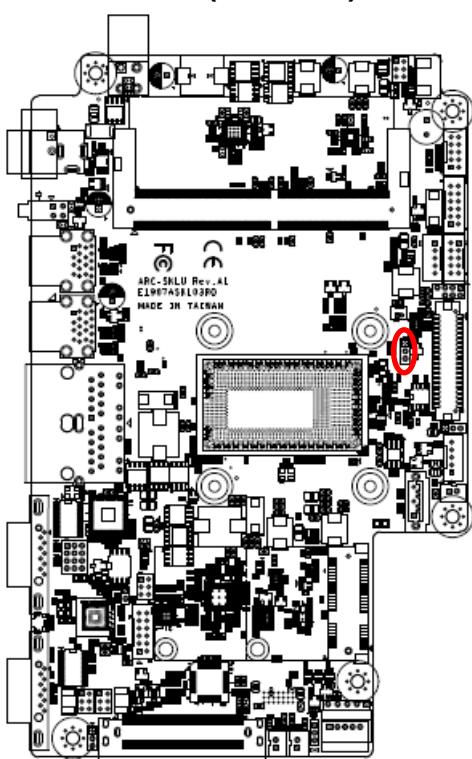

Protect\*

 


Clear CMOS

 


\*Default


### 2.6.2 Serial port 1/2 pin9 signal select (JRI1/JRI2)

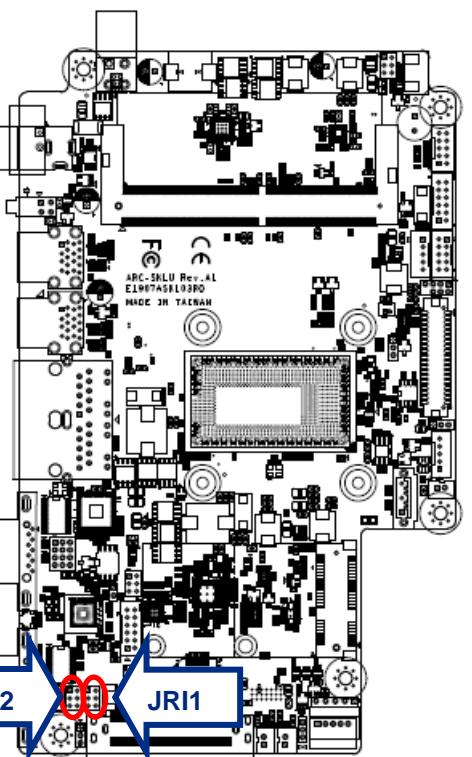


Ring\*

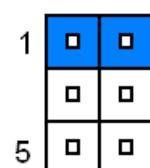

+12V

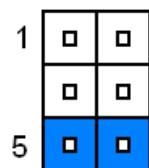


+5V

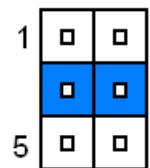


\* Default


### 2.6.3 LCD backlight brightness adjustment (JBLKSEL1)

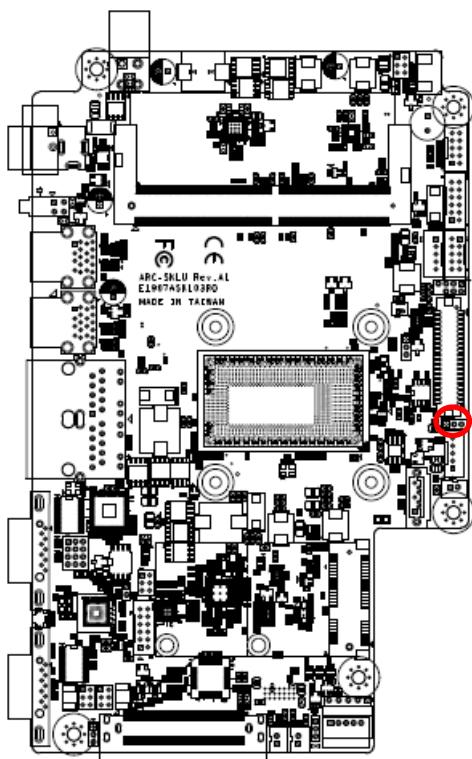

**PWM Mode\***

 


**DC Mode**

 


\* Default


### 2.6.4 AT/ATX Input power select (JAT1)

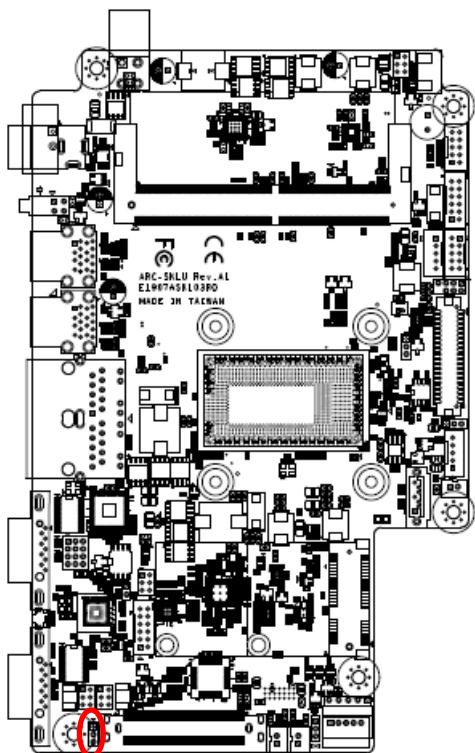

**ATX\***

 


**AT**

 

\* Default


## 2.6.5 Serial port 1 in RS-232/422/485 mode (JCOM1\_SEL1)

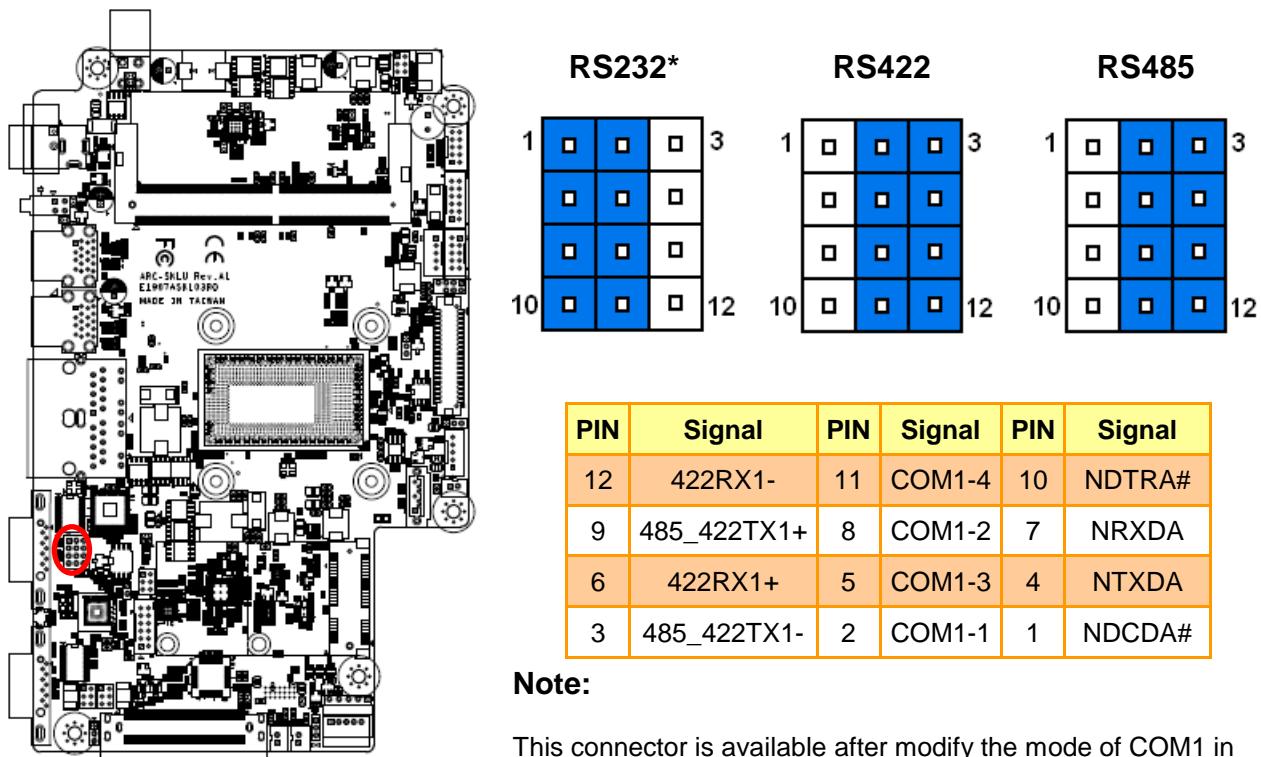



**Note:**

This connector is available after modify the mode of COM1 in BIOS setting.

## 2.6.6 LCD Inverter connector (JBKL1)


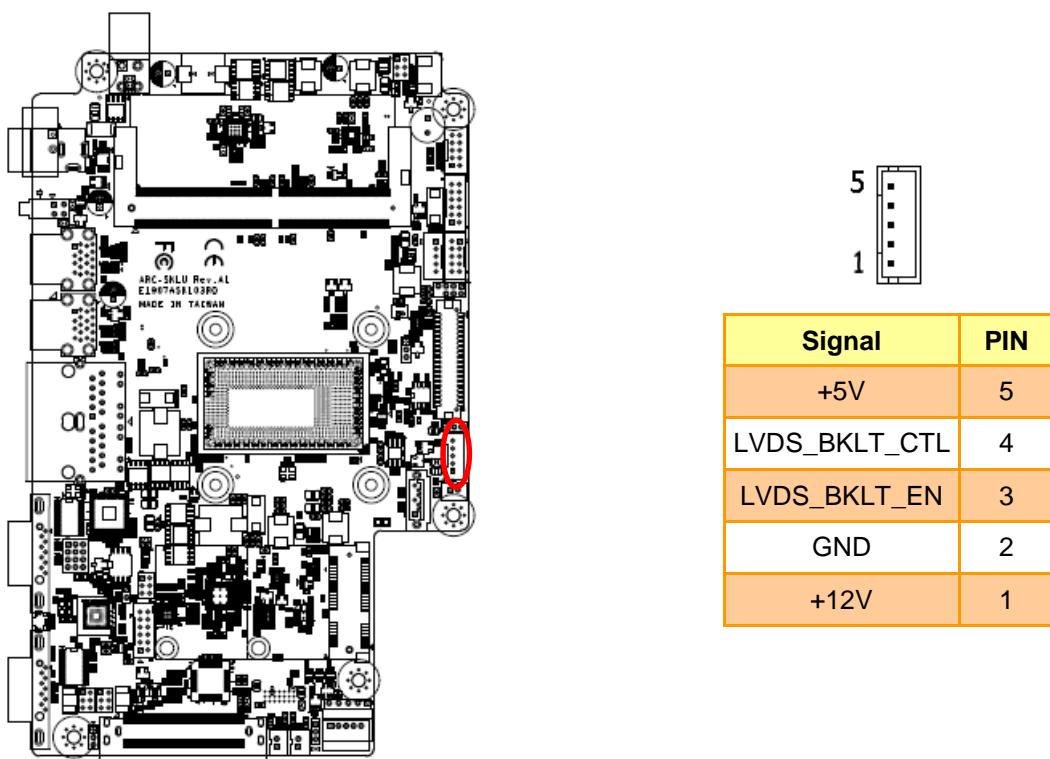


### 2.6.7 On-board header for USB2.0 (JUSB1)

 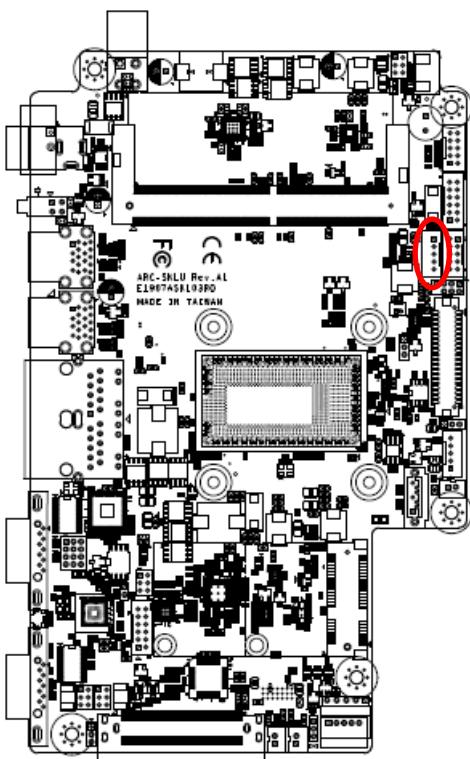



Signal	PIN
+5VSB	1
USB_z_PN10	2
USB_z_PP10	3
GND	4
GND	5

### 2.6.8 On-board header for USB2.0 (JUSB2)

 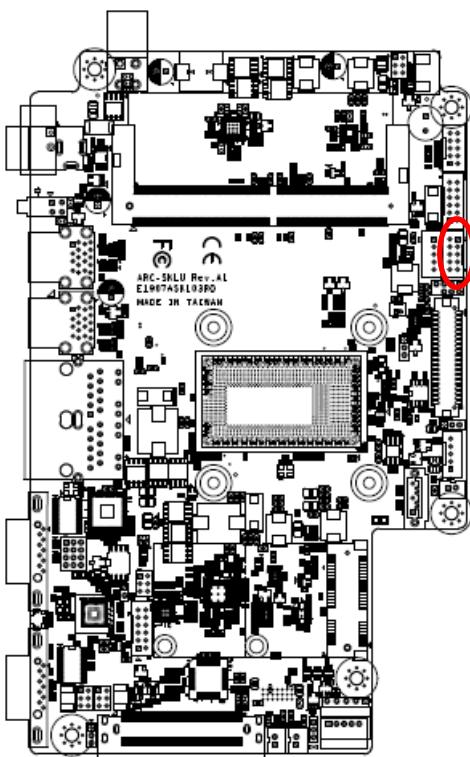



Signal	PIN	PIN	Signal
+5VSB	2	1	+5VSB
USB_z_PN6	4	3	USB_z_PN5
USB_z_PP6	6	5	USB_z_PP5
GND	8	7	GND
GND	10	9	GND

### 2.6.9 Battery connector (JBAT1)

 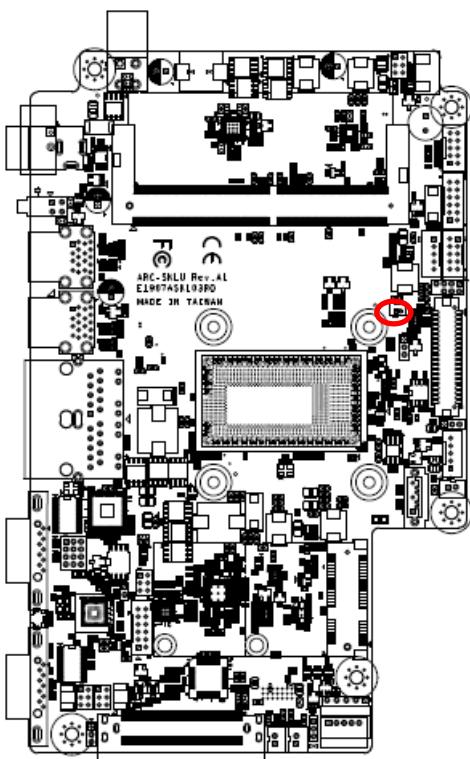



Signal	PIN
+RTCBAT	1
GND	2

### 2.6.10 LCD backlight brightness adjustment (JBLK\_CTRL1)

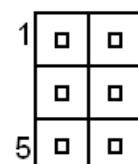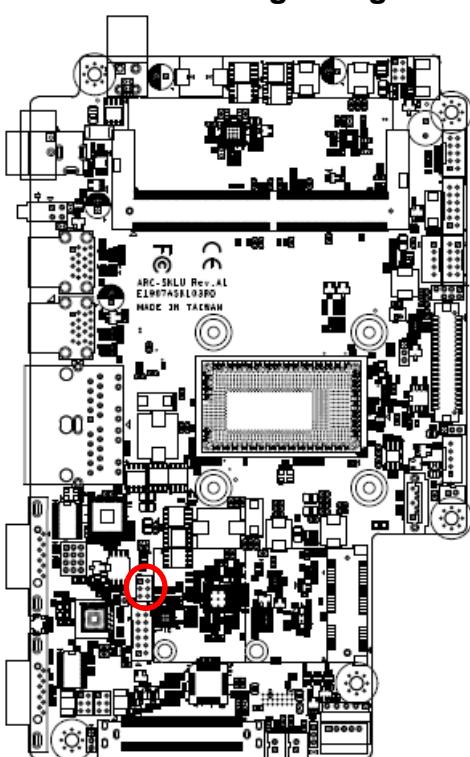



PIN	Signal	Note
1-2	BLK_VR_MOD	VR must select 10K/1%
3-4	BLK_BRI_UP	Low pulse button for backlight brighter
5-6	BLK_BRI_DN	Low pulse button for backlight dim

## 2.6.11 LVDS connector (JLVDS1)

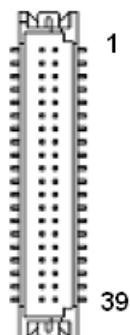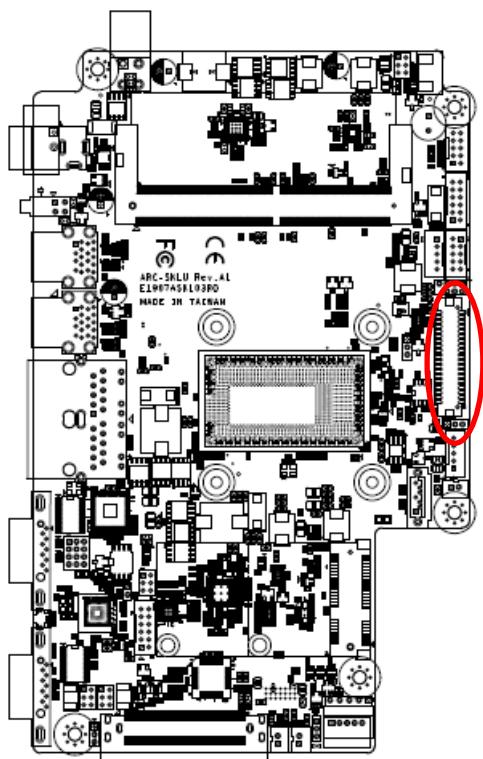


Signal	PIN	PIN	Signal
+5V	2	1	+3.3V
+5V	4	3	+3.3V
NC	6	5	NC
GND	8	7	GND
LVDS_DATA0_P	10	9	LVDS_DATA1_P
LVDS_DATA0_N	12	11	LVDS_DATA1_N
GND	14	13	GND
LVDS_DATA2_P	16	15	LVDS_DATA3_P
LVDS_DATA2_N	18	17	LVDS_DATA3_N
GND	20	19	GND
LVDS_DATA4_P	22	21	LVDS_DATA5_P
LVDS_DATA4_N	24	23	LVDS_DATA5_N
GND	26	25	GND
LVDS_DATA6_P	28	27	LVDS_DATA7_P
LVDS_DATA6_N	30	29	LVDS_DATA7_N
GND	32	31	GND
LVDS_CLK1_P	34	33	LVDS_CLK2_P
LVDS_CLK1_N	36	35	LVDS_CLK2_N
GND	38	37	GND
+12V	40	39	+12V

### 2.6.12 AMPLIFIER\_R (JSPR1)

 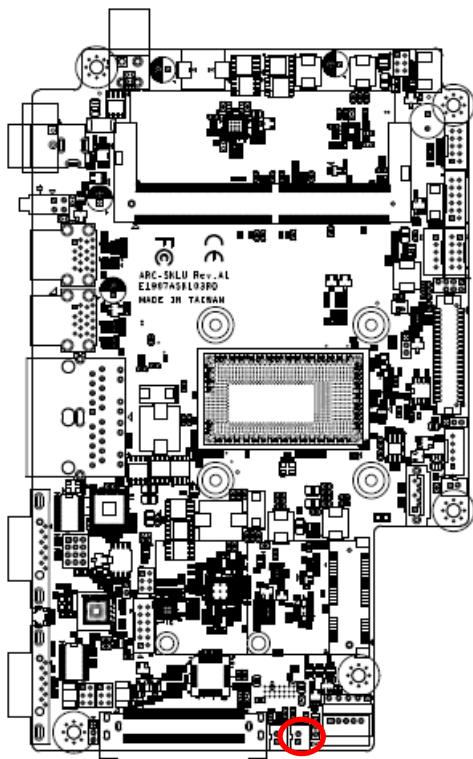



Signal	PIN
SPK_R-	2
SPK_R+	1

### 2.6.13 AMPLIFIER\_L (JSPL1)

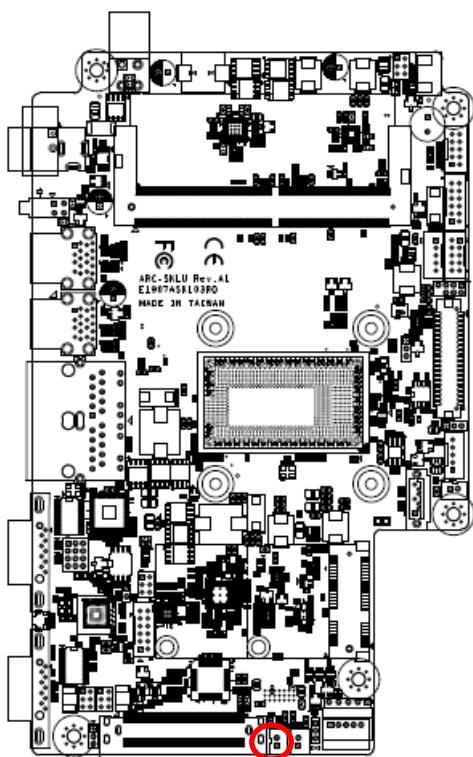



Signal	PIN
SPK_L-	2
SPK_L+	1

### 2.6.14 SPI connector (JSPI1)

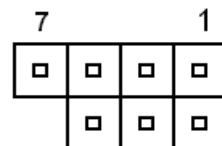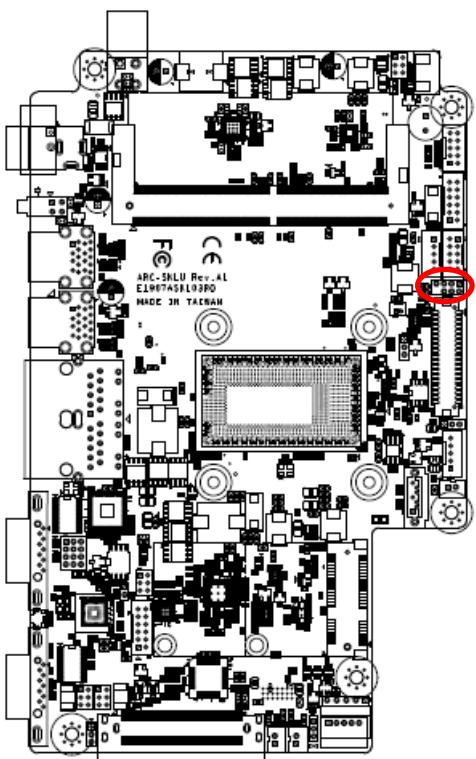



Signal	PIN	PIN	Signal
+3.3VSB	1	2	GND
SPI0_CS0#	3	4	SPI_CLK
SPI_SO	5	6	SPI_SI
HOLD#	7		

### 2.6.15 EC Debug connector (JEC1)

 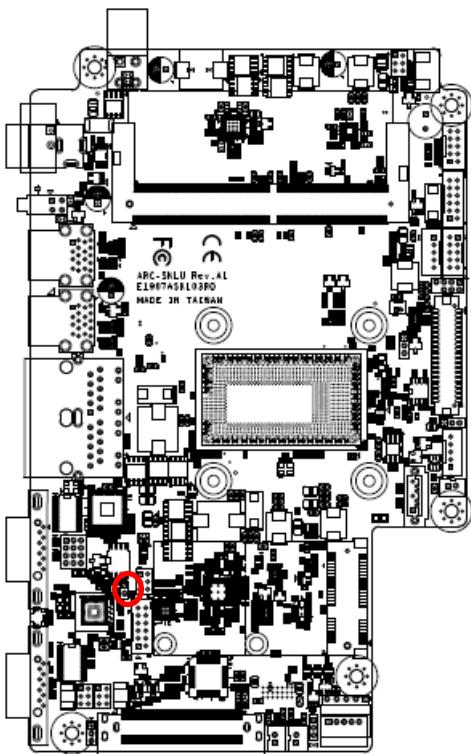

Signal	PIN
EC_SMCLK_DEBUG	1
EC_SMDAT_DEBUG	2



## 2.6.16 B2B connector (JB2B1)

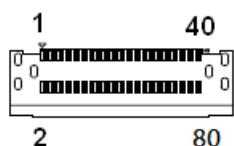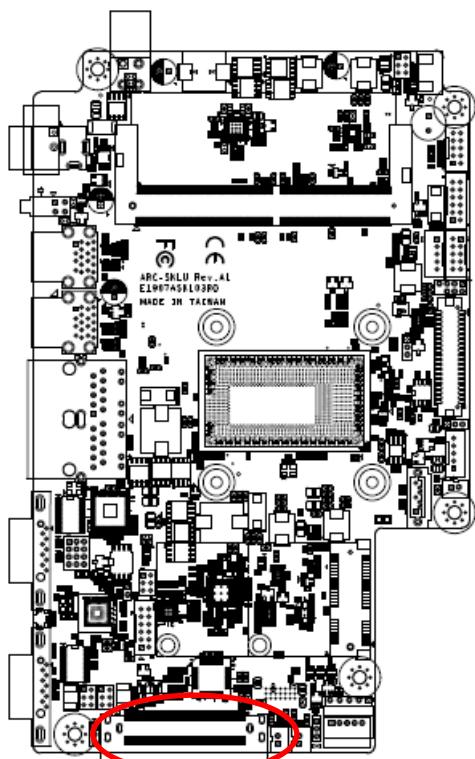

Signal	PIN	PIN	Signal
GND	1	41	GND
GND	2	42	GND
+12V	3	43	GND
+12V	4	44	GND
GND	5	45	GND
LPC_SERIRQ	6	46	+5VSB
LPC_LFRAME#	7	47	+5VSB
CLK3_LPC_B2B	8	48	+5VSB
LPC_ADO	9	49	+5VSB
LPC_AD1	10	50	+5VSB



Signal	PIN	PIN	Signal
LPC_AD2	11	51	GND
LPC_AD3	12	52	USB_PP8
PS_ON_B2B	13	53	USB_PN8
PLT_RST#	14	54	GND
PCH_SLP_S3#	15	55	SMBCLK
HDMI_HPD	16	56	SMBDATA
GND	17	57	GND
HDMI1_CTRL_CLK	18	58	BOARD_ID
HDMI1_CTRL_DAT	19	59	PCIEUSB3_PONRSTB
GND	20	60	PCIEUSB3_SMIB_INT#
HDMI1_TXN_2	21	61	B2BPCIE_WAKE#
HDMI1_TXP_2	22	62	RST_B2BPCIE#
GND	23	63	B2BPCIE_CLK_REQ#
HDMI1_TXN_1	24	64	GND
HDMI1_TXP_1	25	65	PCIE_TXN8
GND	26	66	PCIE_TXP8
HDMI1_TXN_0	27	67	GND
HDMI1_TXP_0	28	68	PCIE_RXN8
GND	29	69	PCIE_RXP8
HDMI1_CLKN	30	70	GND
HDMI1_CLKP	31	71	CLK_B2BPCIE_N2
GND	32	72	CLK_B2BPCIE_P2
GND	33	73	GND
MIC_RIN	34	74	GND
MIC_LIN	35	75	MIC1_JD
GND	36	76	GND
LINEOUT1_JD	37	77	LINE1_JD
LINEOUT_R	38	78	LINE1_RIN
LINEOUT_L	39	79	LNE1_LIN
GND	40	80	GND

### 2.6.17 Touch panel connector (JTP1)

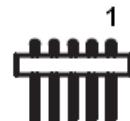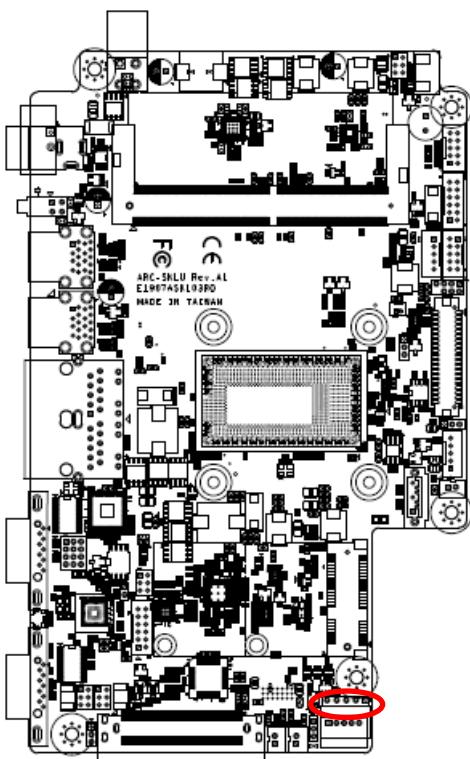


Signal	PIN
Y-	1
Y+	2
SENSE	3
X-	4
X+	5

### 2.6.18 General purpose I/O connector (JGPIO1)

 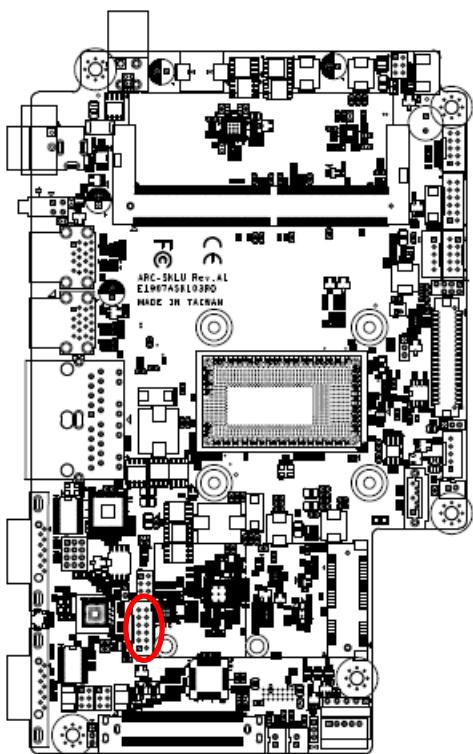

Signal	PIN	PIN	Signal
+3.3V	11	12	GND
SMB_DATA	9	10	SMB_CLK
DIO_GP23	7	8	DIO_GP13
DIO_GP22	5	6	DIO_GP12
DIO_GP21	3	4	DIO_GP11
DIO_GP20	1	2	DIO_GP10


### 2.6.19 SATA Power connector (SATAPW1)

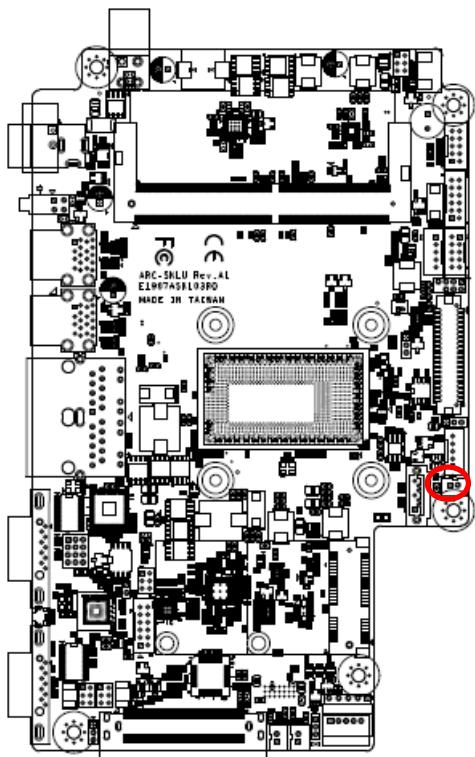


Signal	PIN
GND	1
+5V	2

## 2.7 ARC-BYT DB-A/B/C/D/E/F/G/H/K Overviews


### 2.7.1 ARC-BYT DB-A

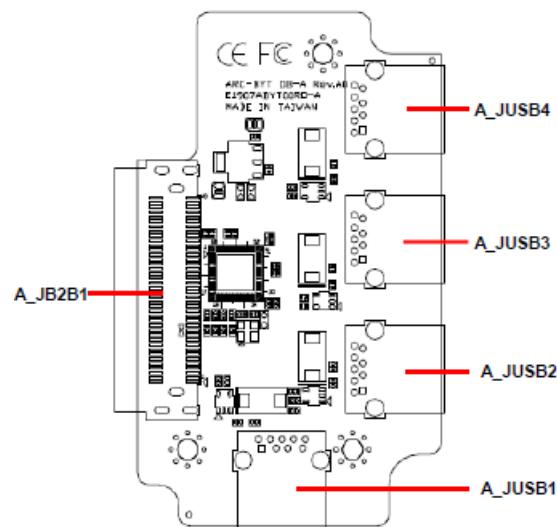


### 2.7.2 ARC-BYT DB-B

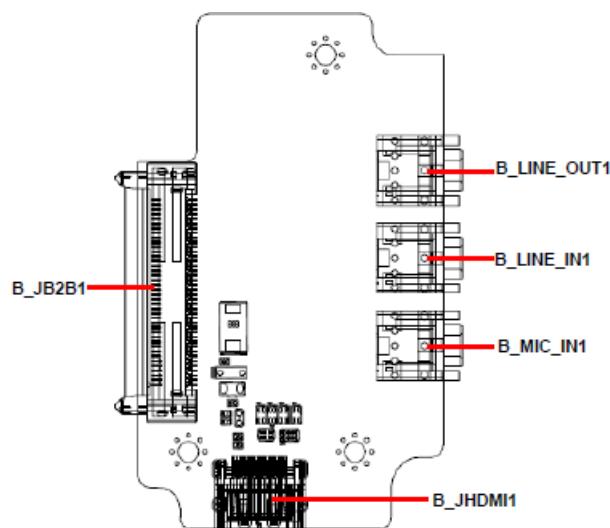


### 2.7.3 ARC-BYT DB-C

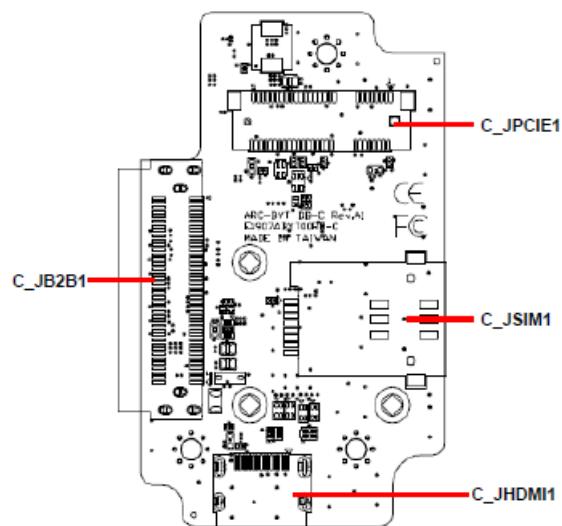


### 2.7.4 ARC-BYT DB-D

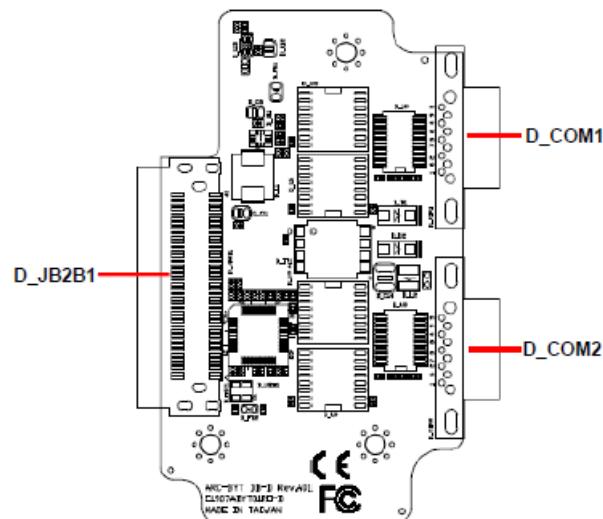

### 2.7.5 ARC-BYT DB-E

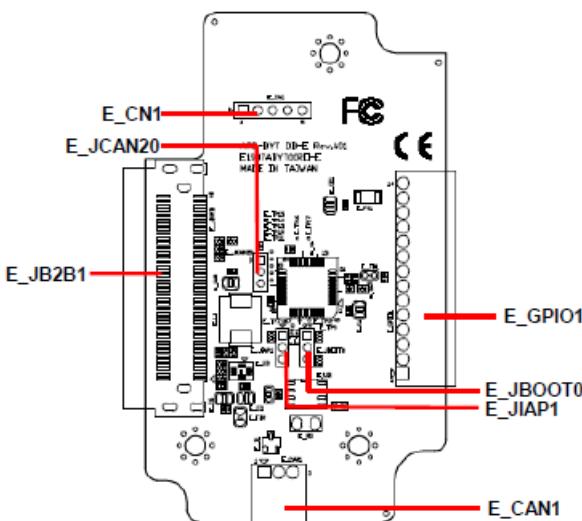


### 2.7.6 ARC-BYT DB-F

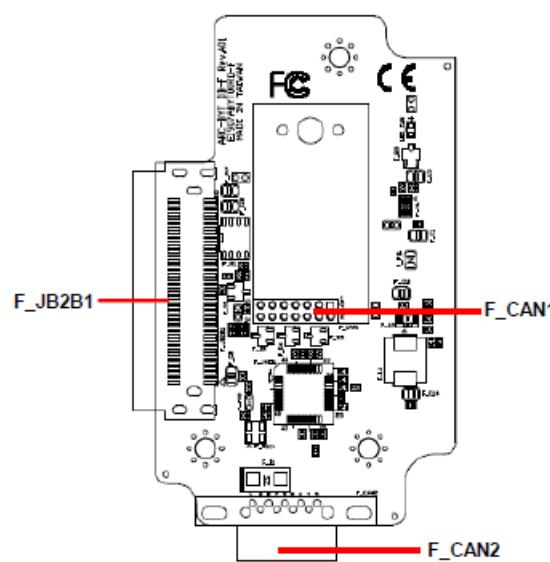


## ARC-1532-C1


### 2.7.7 ARC-BYT DB-G

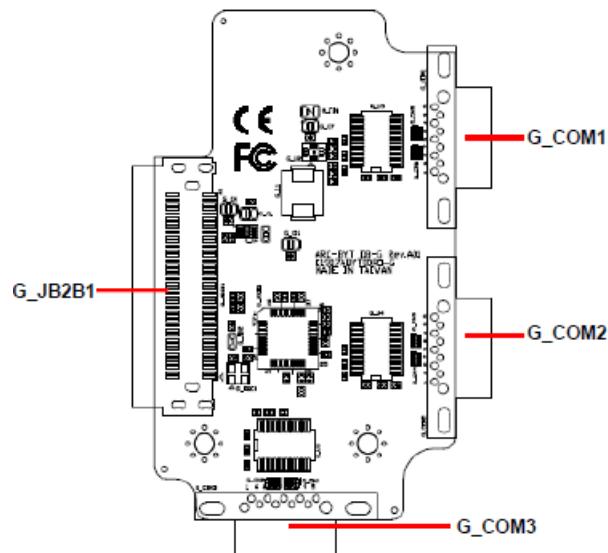

### 2.7.8 ARC-BYT DB-H

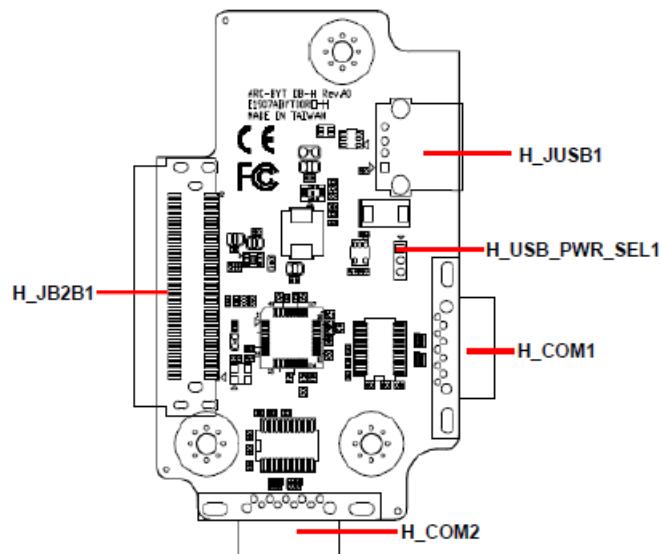

### 2.7.9 ARC-BYT DB-K

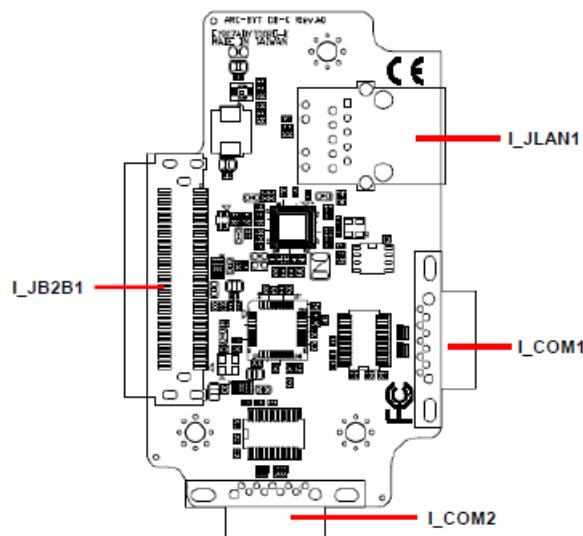

## 2.8 ARC-BYT DB-A/B/C/D/E/F/G/H/K Connector list

### 2.8.1 ARC-BYT DB-A

#### Connectors

Label	Function	Note
A_JUSB1~4	USB3.0 connector 1~4	
A_JB2B1	B2B connector	

### 2.8.2 ARC-BYT DB-B

#### Connectors

Label	Function	Note
B_LINE_OUT1	Line-out audio jack	
B_LINE_IN1	Line-in audio jack	
B_MIC_IN1	Mic-in audio jack	
B_JHDMI1	HDMI connector	
B_JB2B1	B2B connector	

### 2.8.3 ARC-BYT DB-C

#### Connectors

Label	Function	Note
C_JPCIE1	Mini PCI Express connector	
C_JSIM1	SIM card slot (Push-push)	
C_JHDMI1	HDMI connector	
C_JB2B1	B2B connector	

### 2.8.4 ARC-BYT DB-D

#### Connectors

Label	Function	Note
D_COM1/2	Serial Port 1/2 connector	DB-9 male connector
D_JB2B1	B2B connector	

### 2.8.5 ARC-BYT DB-E

#### Jumpers

Label	Function	Note
E_JCAN20	CAN2.0 Switch	3 x 1 header, pitch 2.00mm
E_JIAP1	For user update FW	3 x 1 header, pitch 2.00mm

## ARC-1532-C1

E_JBOOT0	For user update FW	3 x 1 header, pitch 2.00mm
----------	--------------------	----------------------------

### Connectors

Label	Function	Note
E_GPIO1	General purpose I/O connector	14 x 1 terminal, pitch 2.50mm
E_CN1	For user update FW	5 x 1 header, pitch 2.54mm
E_CAN1	CAN Bus connector	3 x 1 terminal, pitch 2.50mm
E_JB2B1	B2B connector	

## 2.8.6 ARC-BYT DB-F

### Connectors

Label	Function	Note
F_CAN1	CAN Bus connector 1	7 x 2 header, pitch 2.00mm
F_CAN2	CAN Bus connector 2	
F_JB2B1	B2B connector	

## 2.8.7 ARC-BYT DB-G

### Connectors

Label	Function	Note
G_COM1/2/3	Serial Port 1/2/3 connector	DB-9 male connector
G_JB2B1	B2B connector	

## 2.8.8 ARC-BYT DB-H

### Jumpers

Label	Function	Note
H_USB_PWR_SEL1	USB Power selector	3 x 1 header, pitch 2.00mm

### Connectors

Label	Function	Note
H_JUSB1	USB3.0 connector	
H_COM1/2	Serial Port 1/2 connector	DB-9 male connector
H_JB2B1	B2B connector	

## 2.8.9 ARC-BYT DB-K

### Connectors



Label	Function	Note
-------	----------	------

## Quick Reference Guide

I_JLAN1	RJ-45 Ethernet	
I_COM1/2	Serial Port 1/2 connector	DB-9 male connector
I_JB2B1	B2B connector	



## 2.9 ARC-BYT DB-D Connectors settings

### 2.9.1 Serial Port 1 connector (D\_COM1)

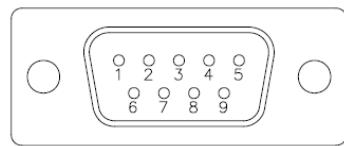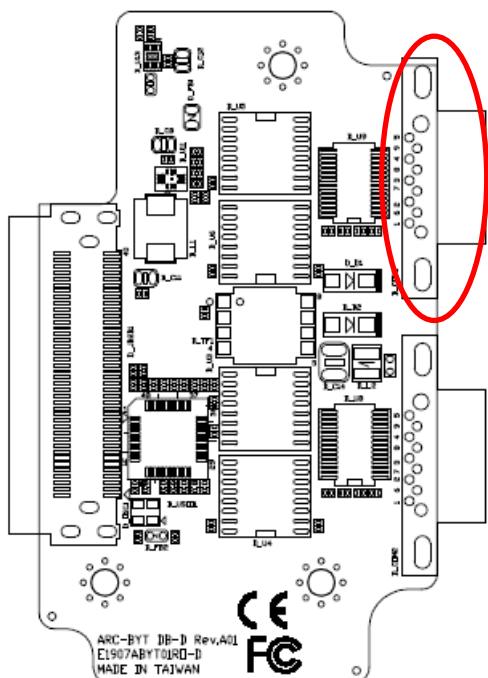

Signal	PIN	PIN	Signal
NDCD#_3_D	1	6	NDSR#_3_D
NRXD_3_D	2	7	NRTS#_3_D
NTXD_3_D	3	8	NCTS#_3_D
NDTR#_3_D	4	9	NRI#_3_D
GND	5		


### 2.9.2 Serial Port 2 connector (D\_COM2)

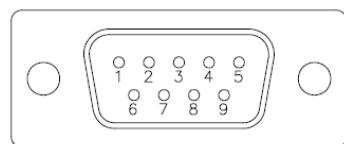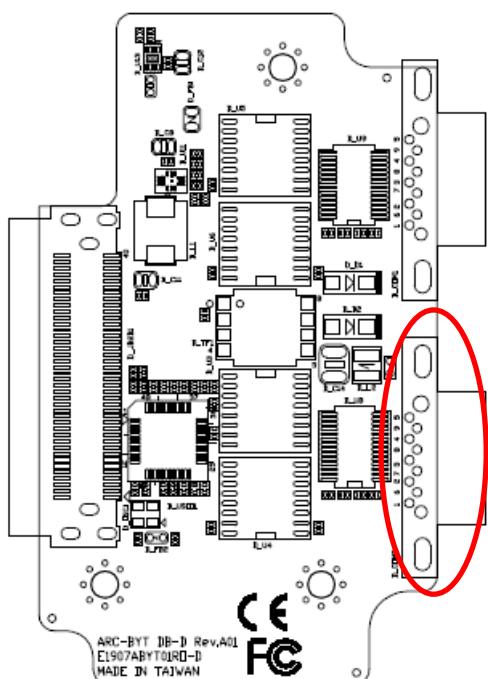


Signal	PIN	PIN	Signal
NDCD#_2_D	1	6	NDSR#_2_D
NRXD_2_D	2	7	NRTS#_2_D
NTXD_2_D	3	8	NCTS#_2_D
NDTR#_2_D	4	9	NRI#_2_D
GND	5		

## 2.10 ARC-BYT DB-E Jumpers & Connectors settings


### 2.10.1 CAN2.0 Switch (E\_JCAN20)

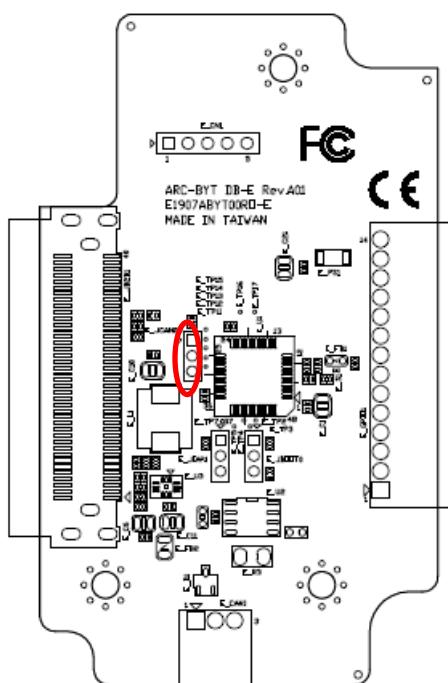

**CAN2.0A (11-bit)\***

 


**CAN2.0B (29-bit)**

 


\*Default


### 2.10.2 For user update FW (E\_JBOOT0)

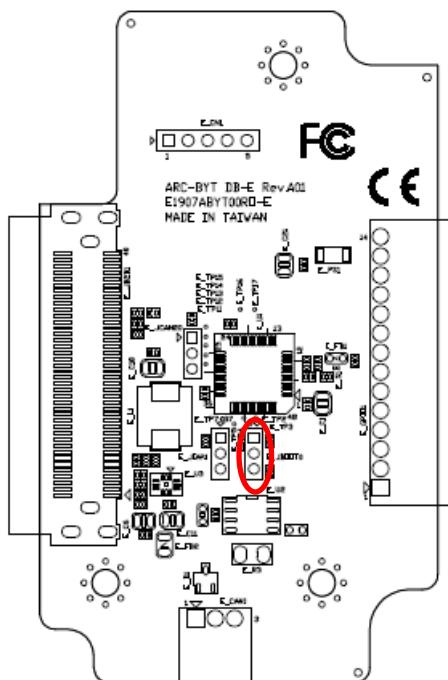

**Default\***

 


**For user update FW**

 


\*Default

### 2.10.3 For user update FW (E\_JIAP1)

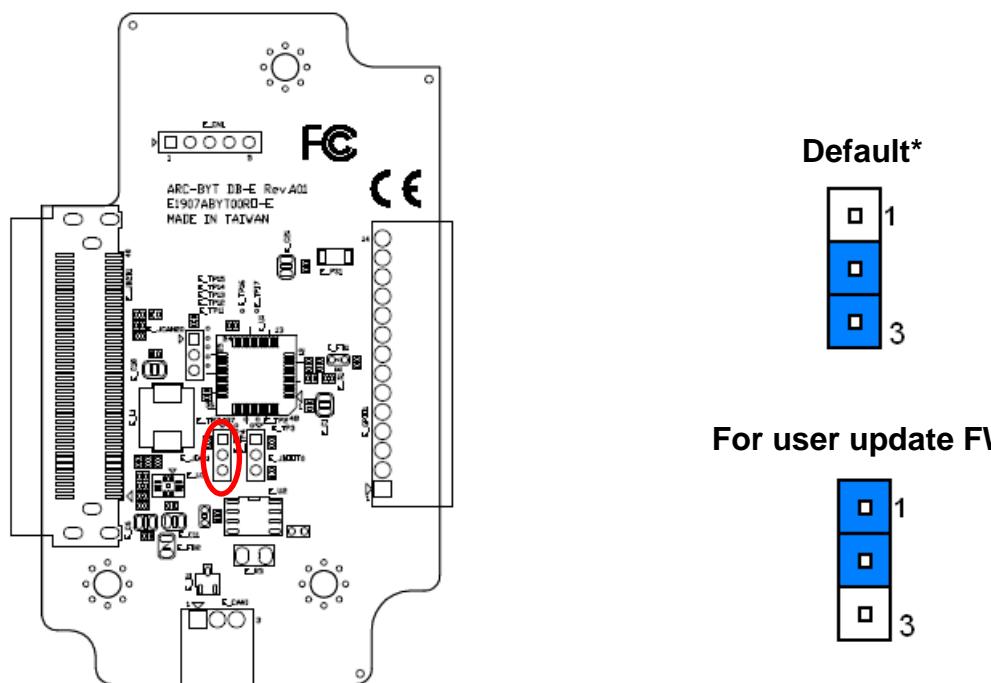


\*Default

### 2.10.4 For user update FW (E\_CN1)

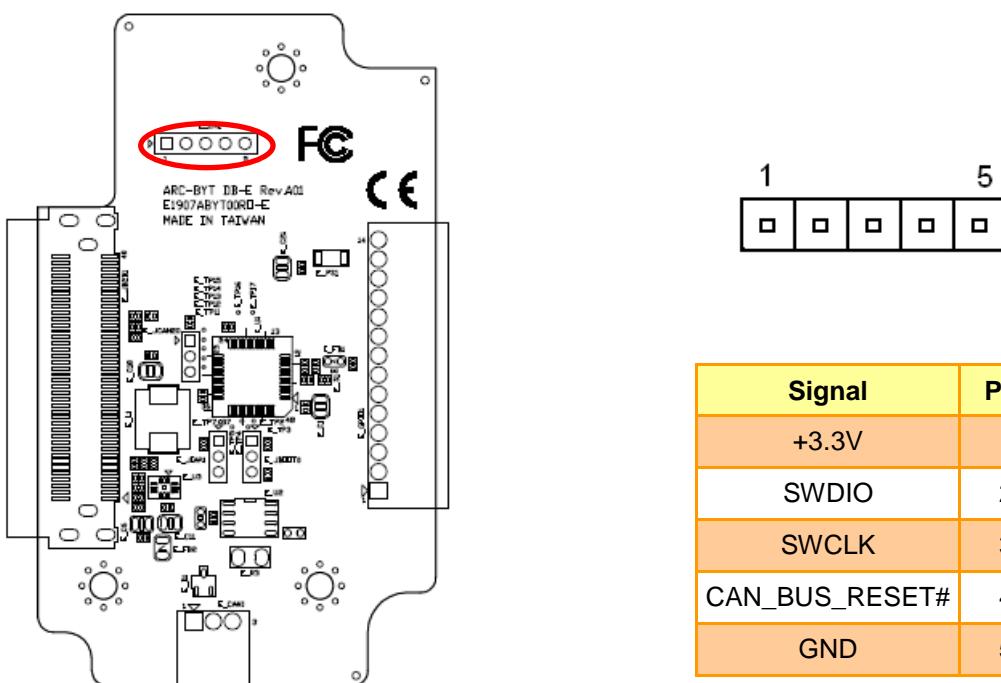


### 2.10.5 General purpose I/O connector (E\_GPIO1)

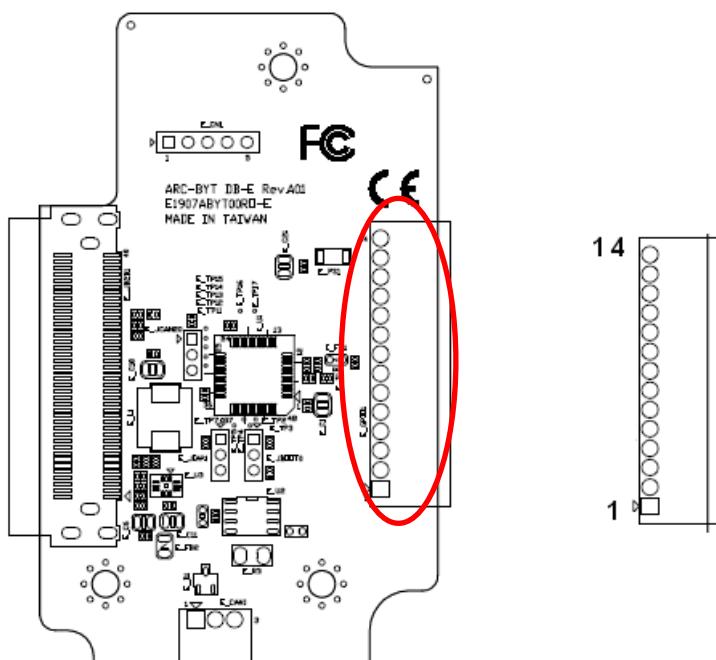

Signal	PIN
GND	14
+3.3V	13
DO5	12
DO4	11
DO3	10
DO2	9
DO1	8
DO0	7
DI5	6
DI4	5
DI3	4
DI2	3
DI1	2
DI0	1



### 2.10.6 CAN Bus connector (E\_CAN1)

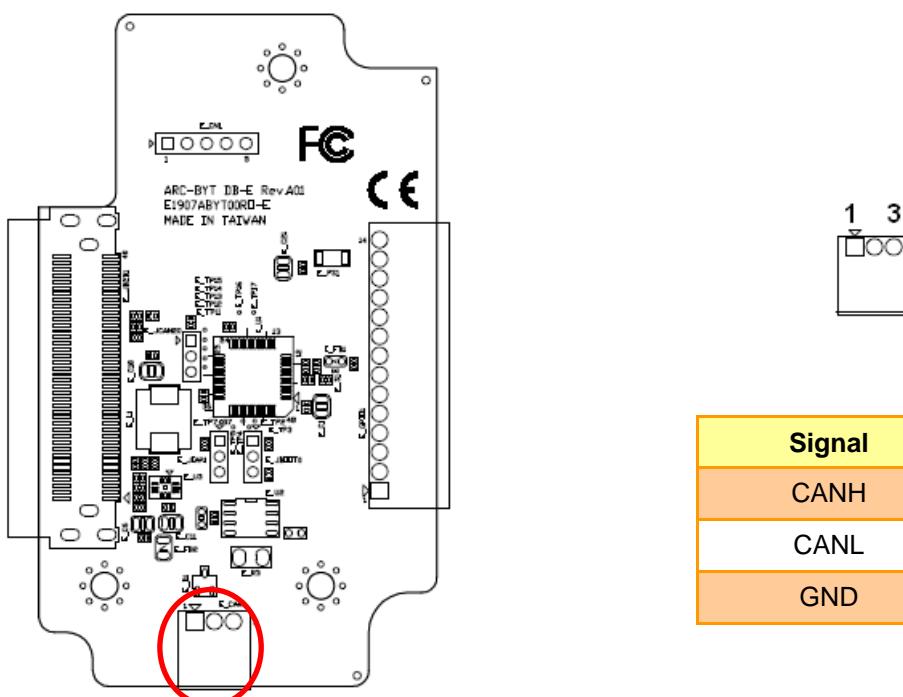

Signal	PIN
CANH	1
CANL	2
GND	3



## 2.11 ARC-BYT DB-F Connectors settings

### 2.11.1 CAN Bus connector 1 (F\_CAN1)

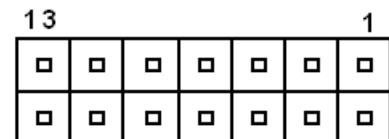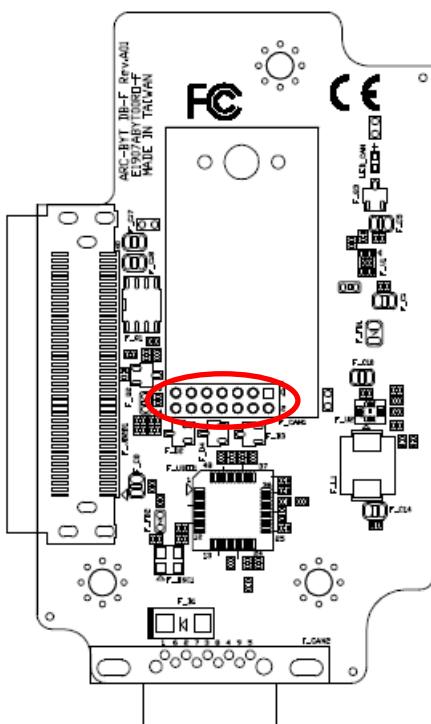

Signal	PIN	PIN	Signal
CAN_PWR	1	2	CAN_8
CAN_IND	3	4	CAN_9
GND	5	6	BAT_GND
CAN_WAKE	7	8	CAN_11
UART_RXD_1_F	9	10	CAN_12
UART_TXD_1_F	11	12	CAN_13
+5V	13	14	CAN_14



### 2.11.2 CAN Bus connector 2 (F\_CAN2)

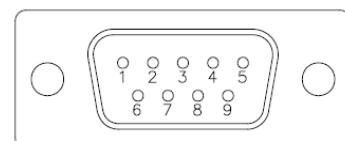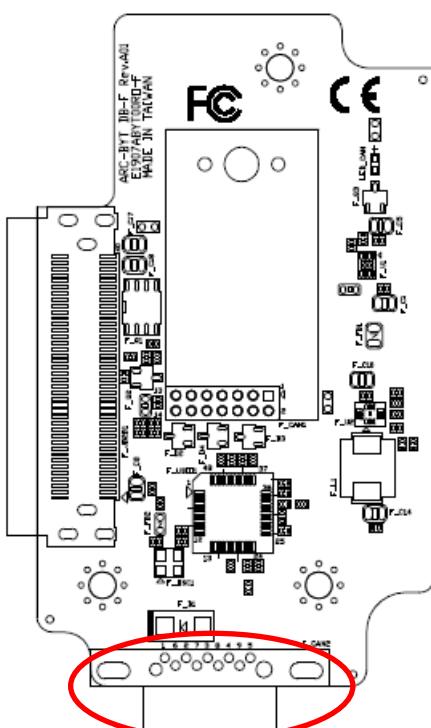

Signal	PIN	PIN	Signal
BAT_PWR	1	6	CAN_12
CAN_8	2	7	CAN_13
CAN_9	3	8	CAN_14
BAT_GND	4	9	NC
CAN_11	5		



## 2.12 ARC-BYT DB-G Connectors settings

### 2.12.1 Serial Port 1 connector (G\_COM1)

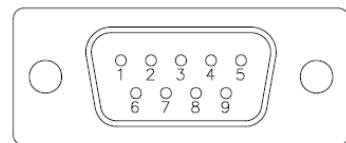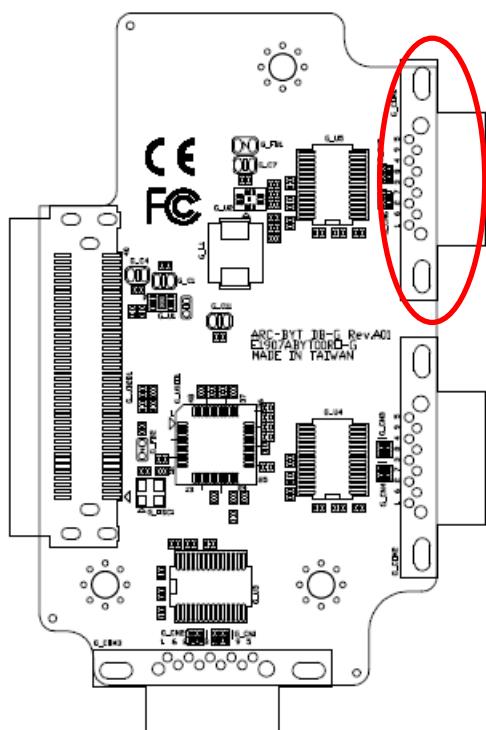



Signal	PIN	PIN	Signal
NDCD#_3_G	1	6	NDSR#_3_G
NRXD_3_G	2	7	NRTS#_3_G
NTXD_3_G	3	8	NCTS#_3_G
NDTR#_3_G	4	9	NRI#_3_G
GND	5		

### 2.12.2 Serial Port 2 connector (G\_COM2)

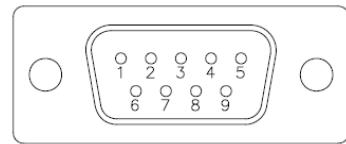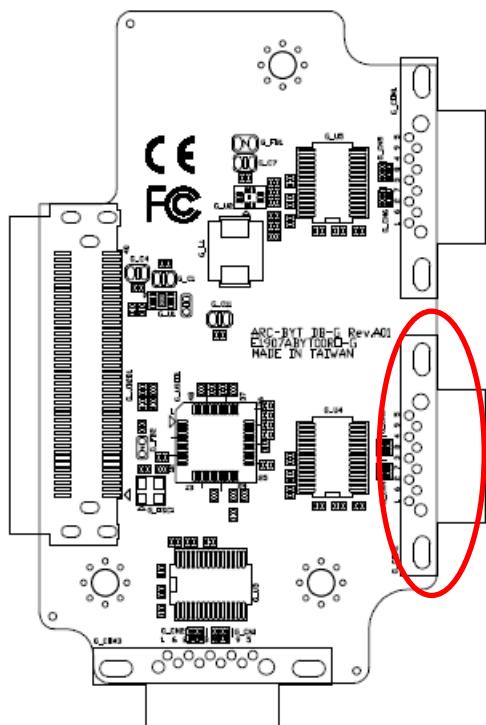

Signal	PIN	PIN	Signal
NDCD#_2_G	1	6	NDSR#_2_G
NRXD_2_G	2	7	NRTS#_2_G
NTXD_2_G	3	8	NCTS#_2_G
NDTR#_2_G	4	9	NRI#_2_G
GND	5		


### 2.12.3 Serial Port 3 connector (G\_COM3)

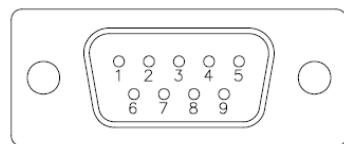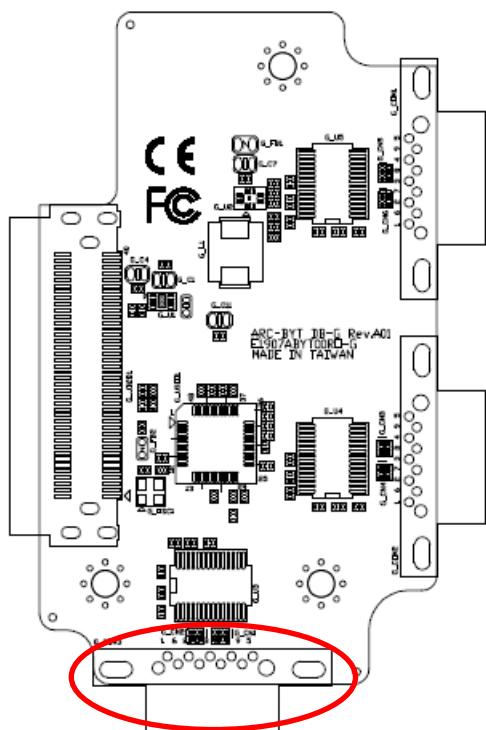


Signal	PIN	PIN	Signal
NDCD#_1_G	1	6	NDSR#_1_G
NRXD_1_G	2	7	NRTS#_1_G
NTXD_1_G	3	8	NCTS#_1_G
NDTR#_1_G	4	9	NRI#_1_G
GND	5		

## 2.13 ARC-BYT DB-H Jumpers settings


### 2.13.1 USB Power selector (H\_USB\_PWR\_SEL1)

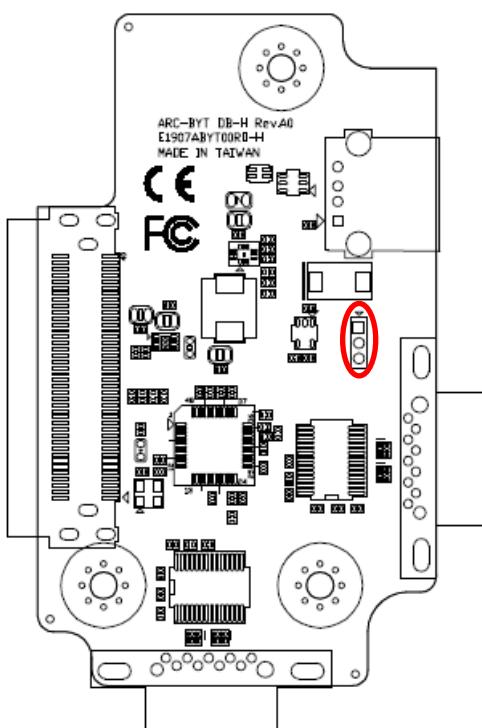

+5VSB\*

 



+5V

 

\*Default



## 2.14 ARC-BYT DB-H Connectors settings

### 2.14.1 Serial Port 1 connector (H\_COM1)

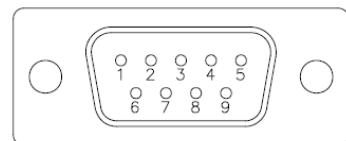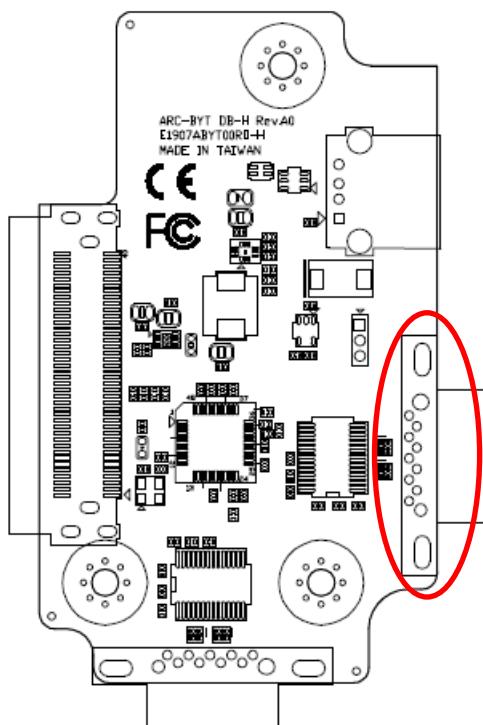

Signal	PIN	PIN	Signal
NDCD#_1_H	1	6	NDSR#_1_H
NRXD_1_H	2	7	NRTS#_1_H
NTXD_1_H	3	8	NCTS#_1_H
NDTR#_1_H	4	9	NRI#_1_H
GND	5		



### 2.14.2 Serial Port 2 connector (H\_COM2)

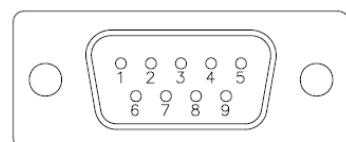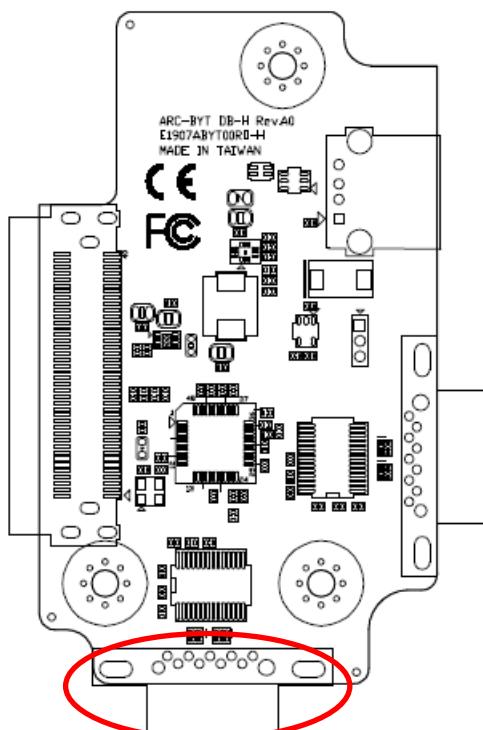

Signal	PIN	PIN	Signal
NDCD#_2_H	1	6	NDSR#_2_H
NRXD_2_H	2	7	NRTS#_2_H
NTXD_2_H	3	8	NCTS#_2_H
NDTR#_2_H	4	9	NRI#_2_H
GND	5		



## 2.15 ARC-BYT DB-K Connectors settings

### 2.15.1 Serial Port 1 connector (I\_COM1)

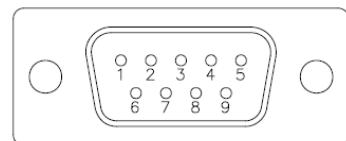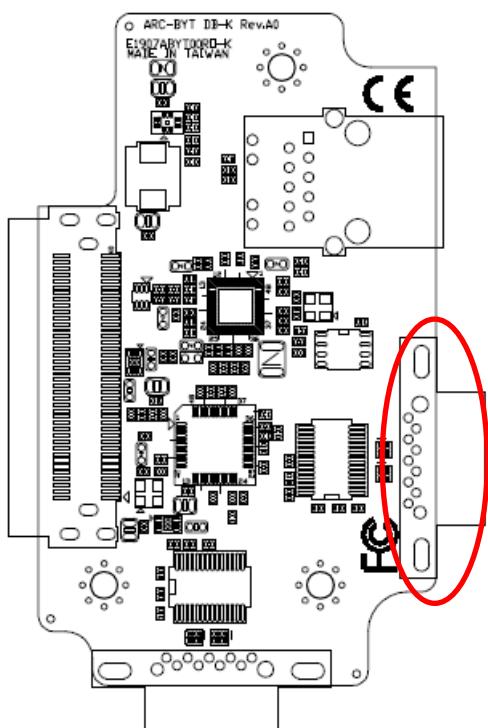

Signal	PIN	PIN	Signal
NDCD#_1_I	1	6	NDSR#_1_I
NRXD_1_I	2	7	NRTS#_1_I
NTXD_1_I	3	8	NCTS#_1_I
NDTR#_1_I	4	9	NRI#_1_I
GND	5		

### 2.15.2 Serial Port 2 connector (I\_COM2)

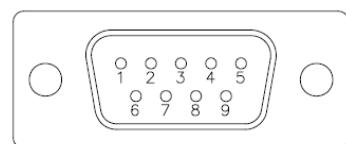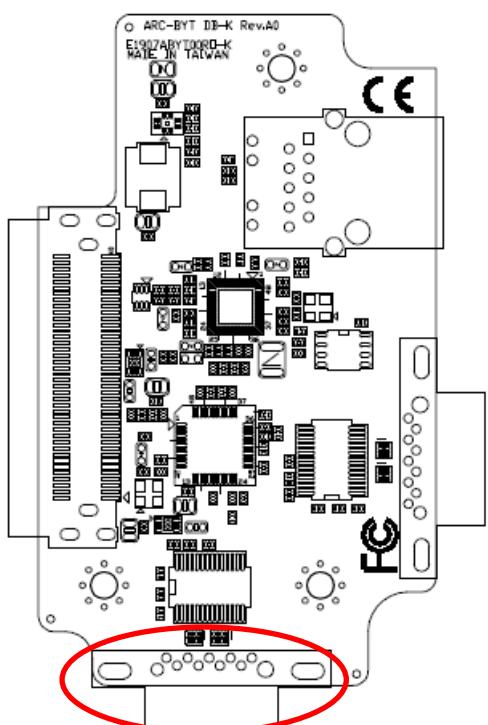

Signal	PIN	PIN	Signal
NDCD#_2_I	1	6	NDSR#_2_I
NRXD_2_I	2	7	NRTS#_2_I
NTXD_2_I	3	8	NCTS#_2_I
NDTR#_2_I	4	9	NRI#_2_I
GND	5		

# 3.BIOS Setup

### **3.1 Introduction**

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

### **3.2 Starting Setup**

AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing <F2> or <Del> immediately after switching the system on, or

By pressing the <F2> or <Del> key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

**Press <F2> or <Del> to enter SETUP**

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

### 3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



**Note:** Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “➤” pointer marks all sub menus.

### **3.4 Getting Help**

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the F1 key again.

### **3.5 In Case of Problems**

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.



The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

## 3.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

### 3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

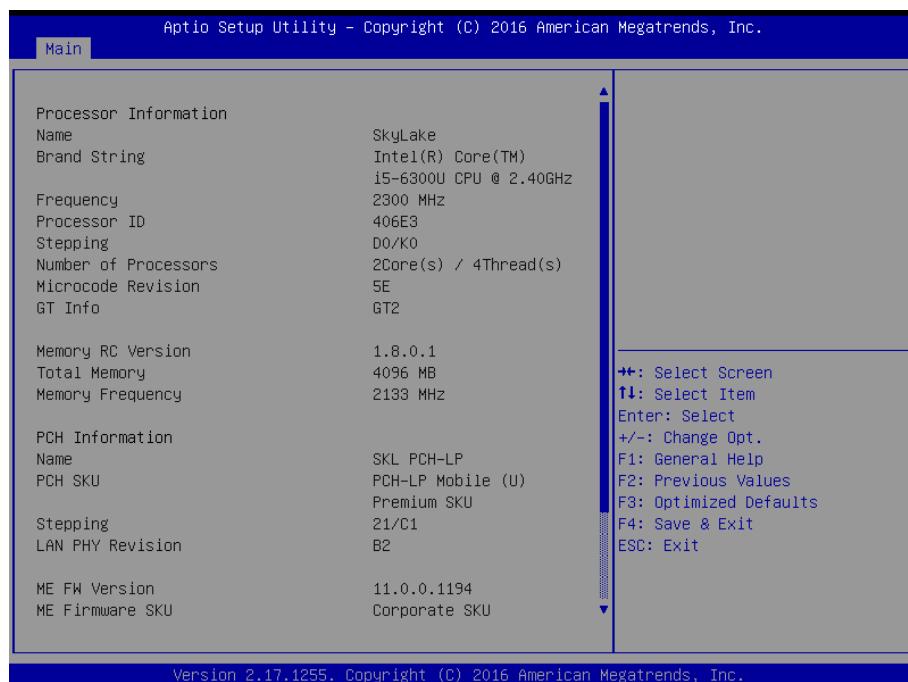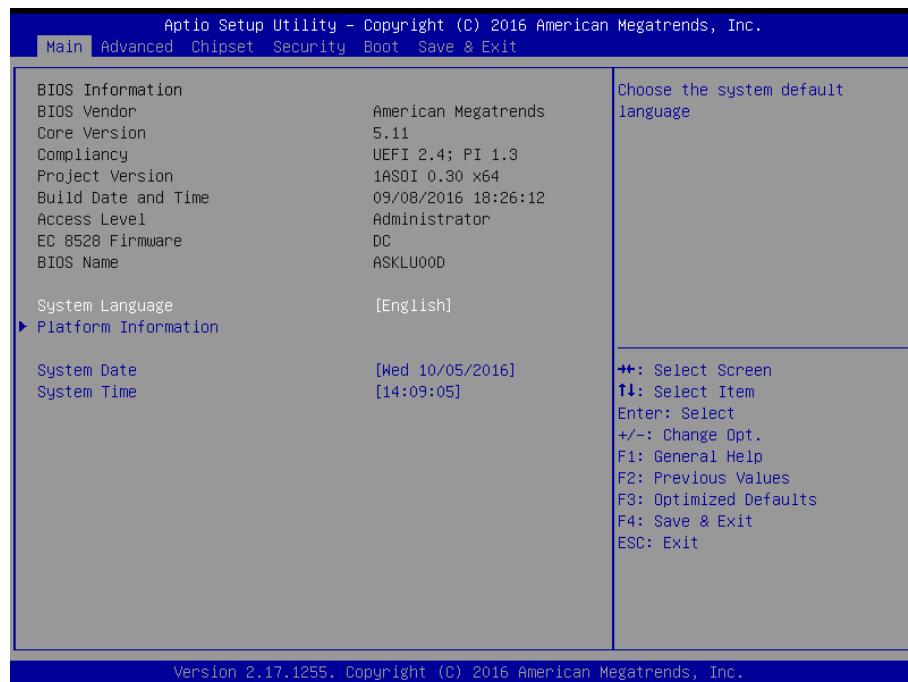

### **3.6.1.1 System Language**

This option allows choosing the system default language.

### **3.6.1.2 System Date**


Use the system date option to set the system date. Manually enter the day, month and year.

### **3.6.1.3 System Time**


Use the system time option to set the system time. Manually enter the hours, minutes and seconds.

## **3.6.2 Advanced Menu**

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.

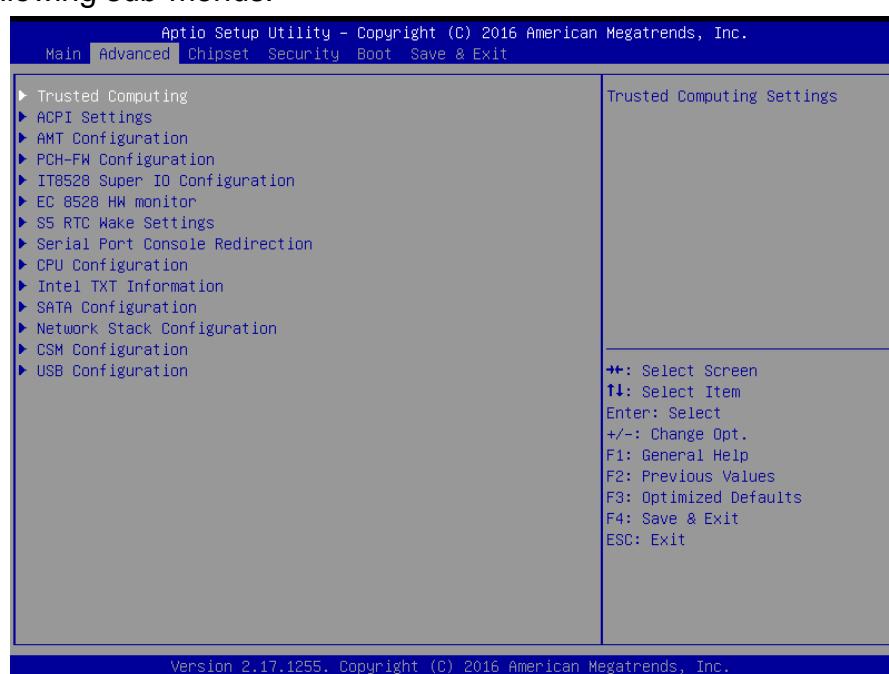


### 3.6.2.1 Trusted Computing

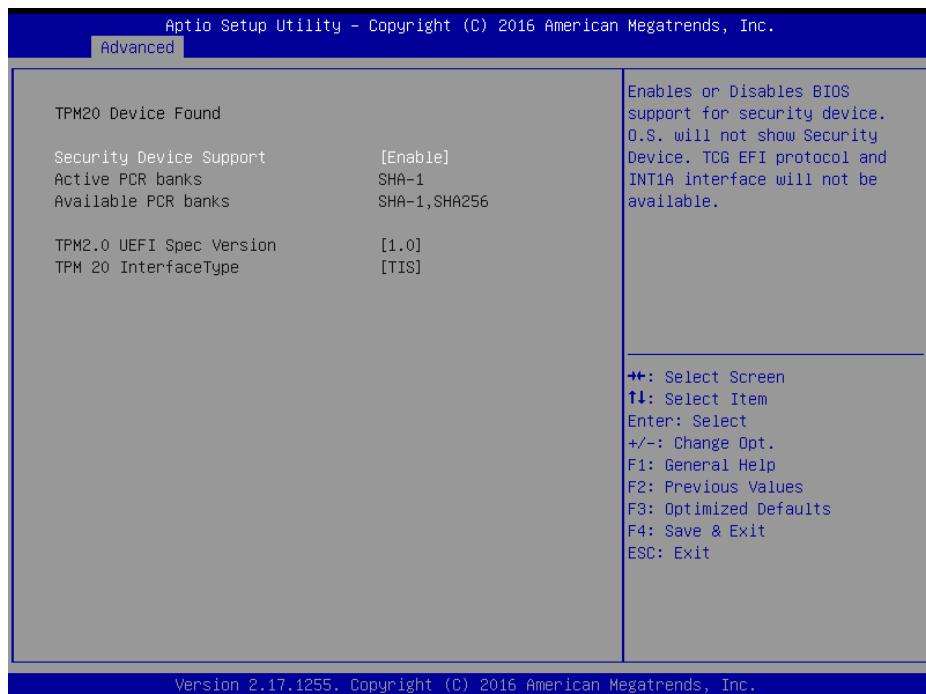


Item	Options	Description
<b>Security Device Support</b>	Disable, Enable <b>[Default]</b>	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

### 3.6.2.2 APCI Settings

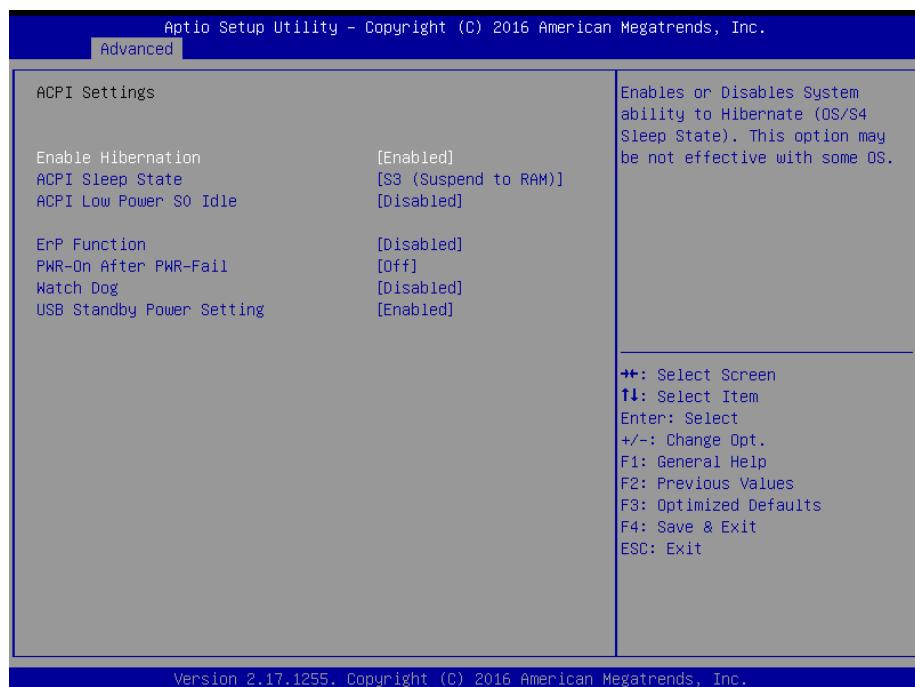


Item	Options	Description
<b>Enable Hibernation</b>	Disabled Enabled <b>[Default]</b> ,	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.
<b>ACPI Sleep State</b>	Suspend Disabled, S3 (Suspend to RAM) <b>[Default]</b>	Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.
<b>ACPI Low Power S0 Idle</b>	Disabled <b>[Default]</b> , Enabled	Enable or Disable ACPI Low Power S0 Idle Support.
<b>ErP Function</b>	Disabled <b>[Default]</b> , Enabled	ErP Function (Deep S5).
<b>PWR-On After PWR-Fail</b>	Off <b>[Default]</b> On Last state	AC loss resume.
<b>Watch Dog</b>	Disabled <b>[Default]</b> , 30 sec 40 sec 50 sec 1 min 2 min 10 min 30 min	Select WatchDog.
<b>USB Standby Power Setting</b>	Disabled Enabled <b>[Default]</b> ,	Enabled/Disabled USB Standby Power during S3/S4/S5.

### 3.6.2.3 AMT Configuration

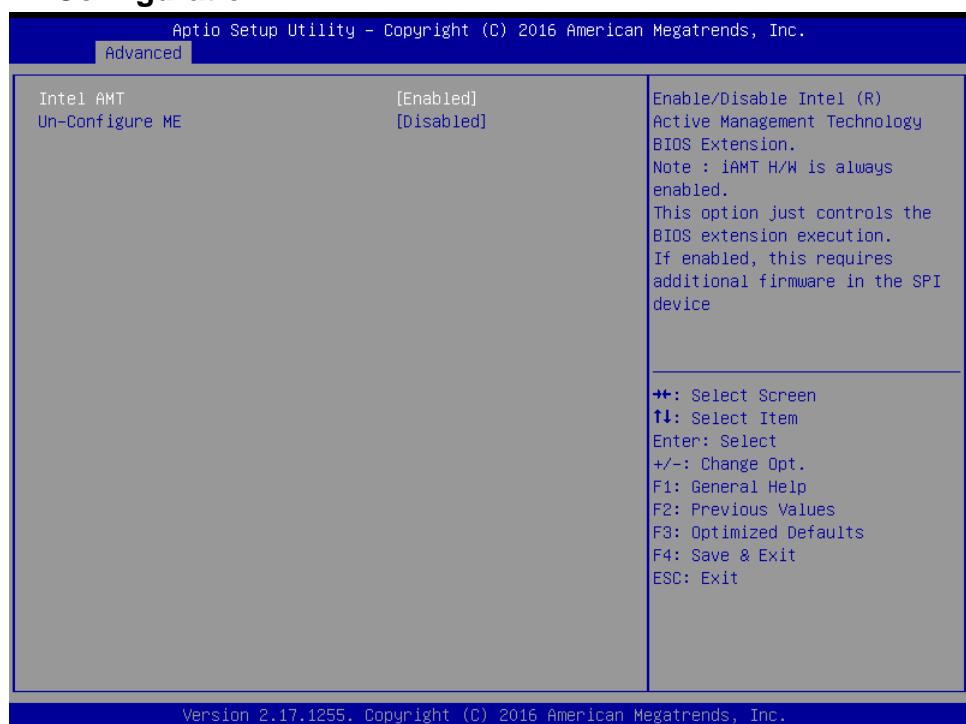


Item	Options	Description
<b>Intel AMT</b>	Disabled Enabled <b>[Default]</b> ,	Enable/Disable Intel® Active Management Technology BIOS Extension. Note: iAMT H/W is always enabled. This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device.
<b>Un-Configure ME</b>	Disabled <b>[Default]</b> Enabled,	OEMFlag Bit 15: Un-Configure ME without password.

### 3.6.2.4 PCH-FW Configuration

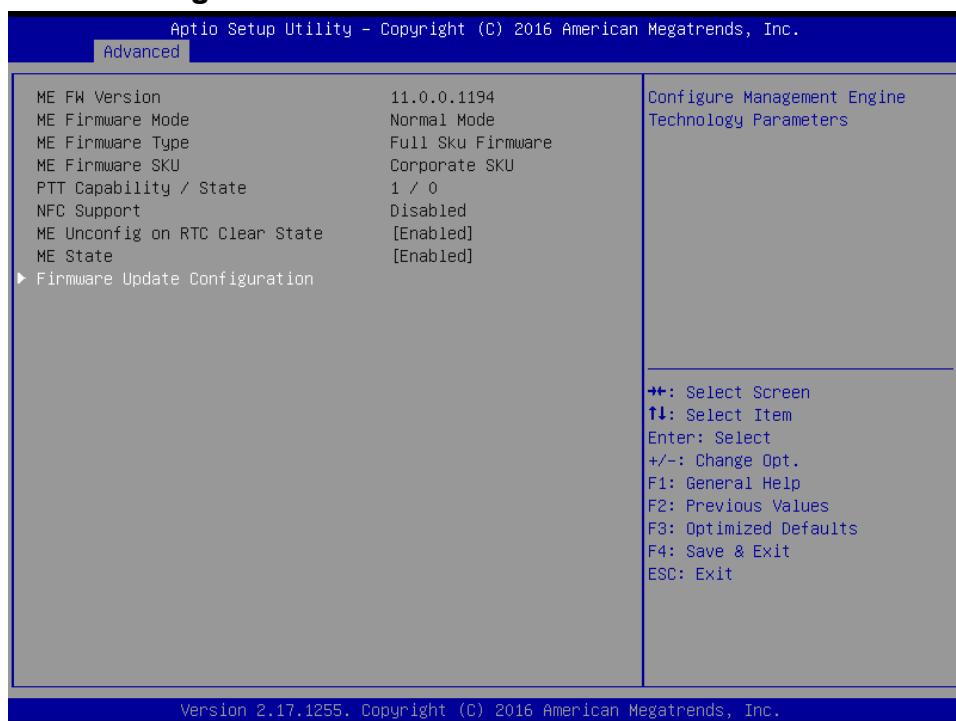

### 3.6.2.5 IT8528 Super IO Configuration


You can use this item to set up or change the IT8528 Super IO configuration for serial ports. Please refer to 3.6.2.5.1~ 3.6.2.5.5 for more information.

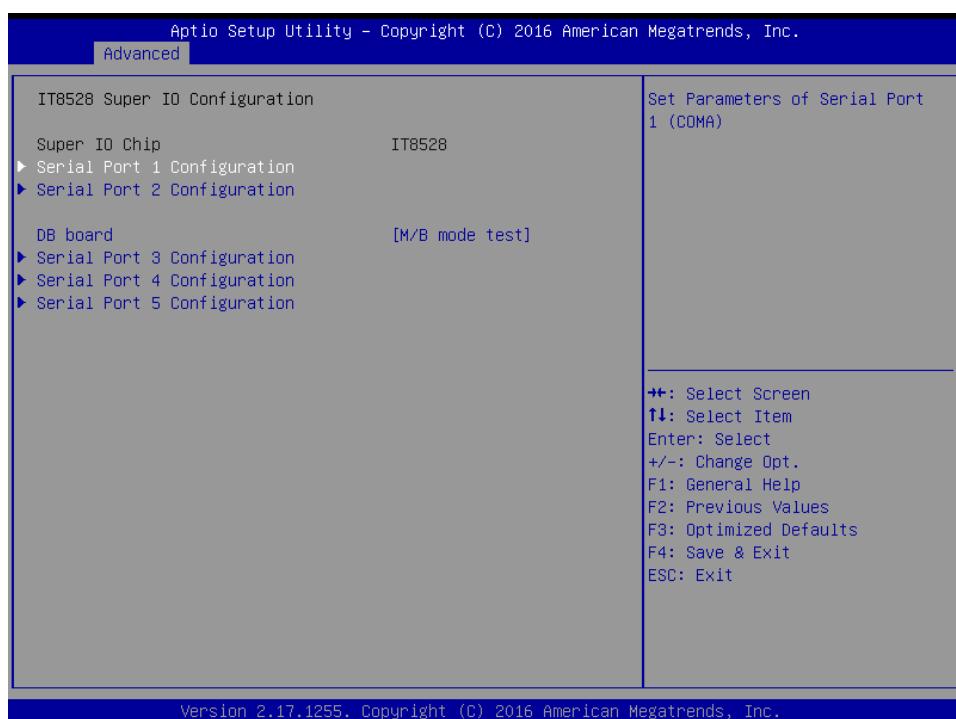

Item	Options	Description
<b>DB board</b>	DB-A/C/E/J DB-B DB-F 1COM	DB board A-K. DA-A/B/C/E/J w/o UART DB-G w/t 3UART DB-D/H/K w/t 2UART DB-F w/t 1UART.


	DB-D/H/K 2COM DB-G 3COM M/B mode test[Default],	
<b>Serial Port 1 Configuration</b>	Set Parameters of Serial Port 1 (COMA).	
<b>Serial Port 2 Configuration</b>	Set Parameters of Serial Port 2 (COMB).	
<b>Serial Port 3 Configuration</b>	Set Parameters of Serial Port 3 (COMC).	
<b>Serial Port 4 Configuration</b>	Set Parameters of Serial Port 4 (COMD).	
<b>Serial Port 5 Configuration</b>	Set Parameters of Serial Port 5 (COME).	

### 3.6.2.5.1 Serial Port 1 Configuration

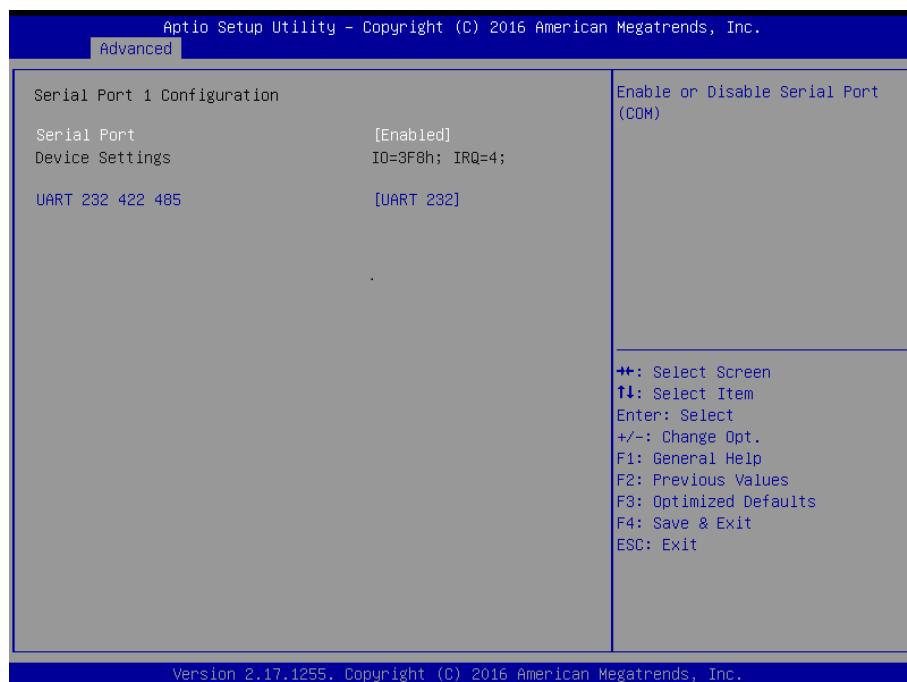


Item	Option	Description
<b>Serial Port</b>	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
<b>UART 232 422 485</b>	UART 232[Default] UART 422 UART 485	Change the Serial Port

### 3.6.2.5.2 Serial Port 2 Configuration

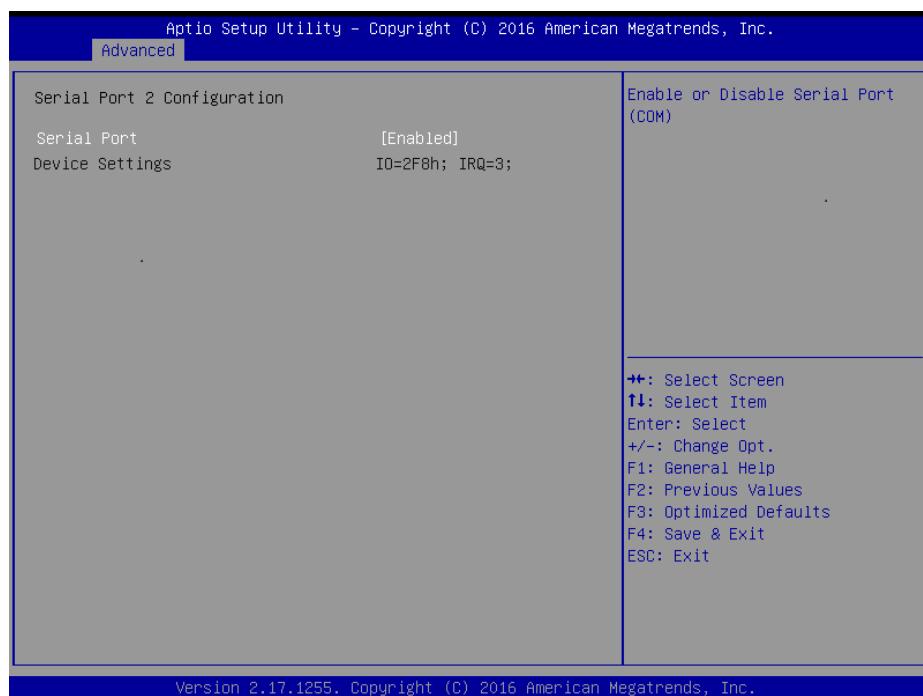


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

### 3.6.2.5.3 Serial Port 3 Configuration

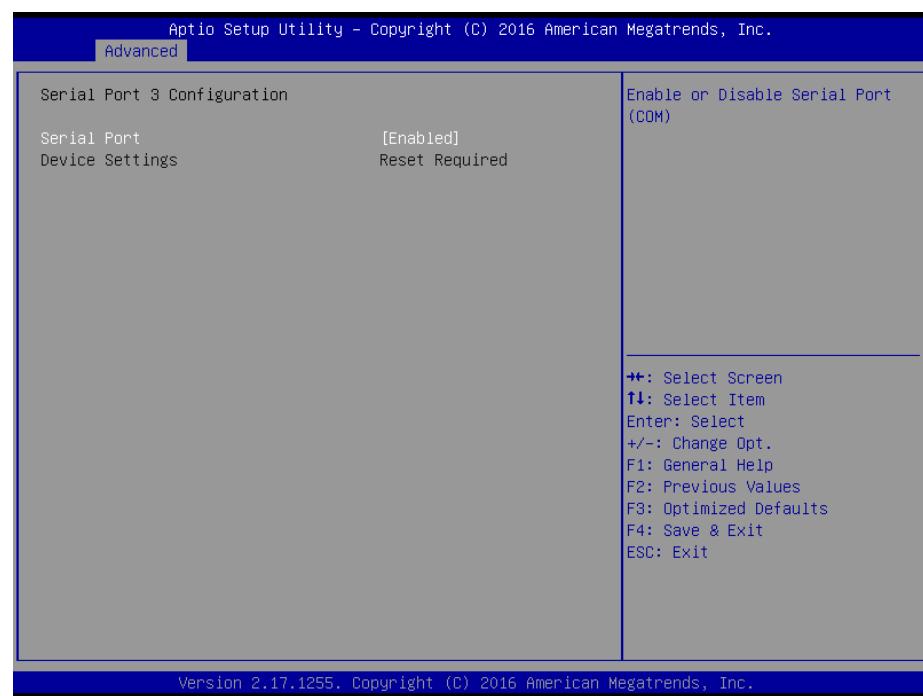


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

### 3.6.2.5.4 Serial Port 4 Configuration

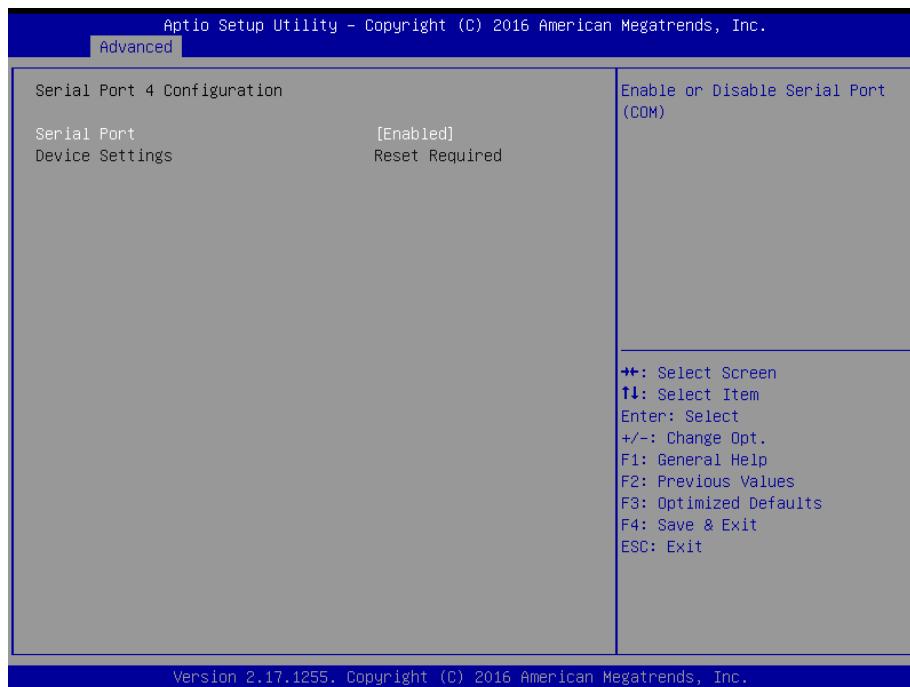


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

### 3.6.2.5.5 Serial Port 5 Configuration

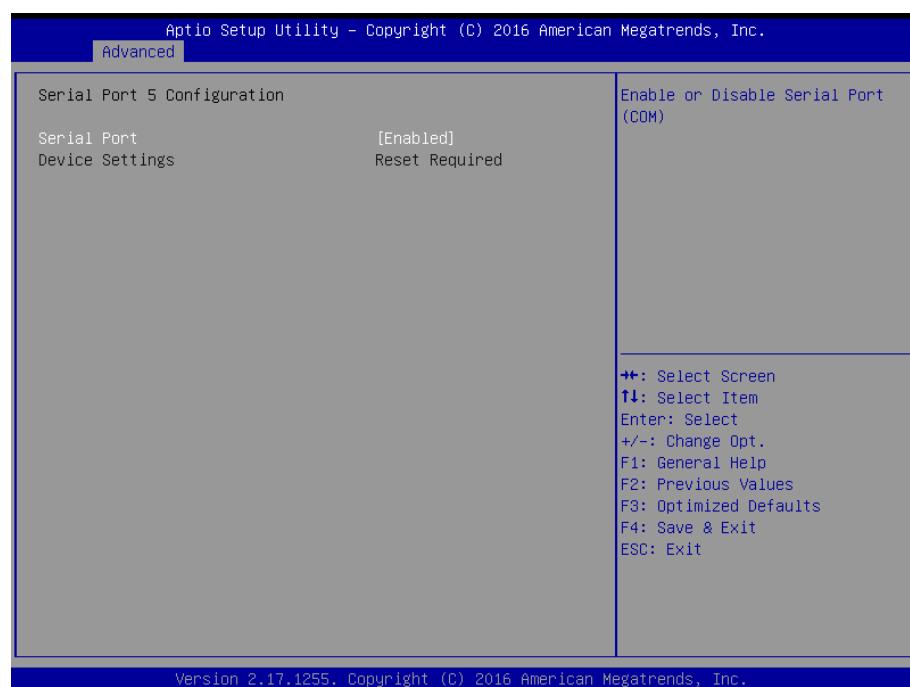


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

### 3.6.2.6 H/W Monitor

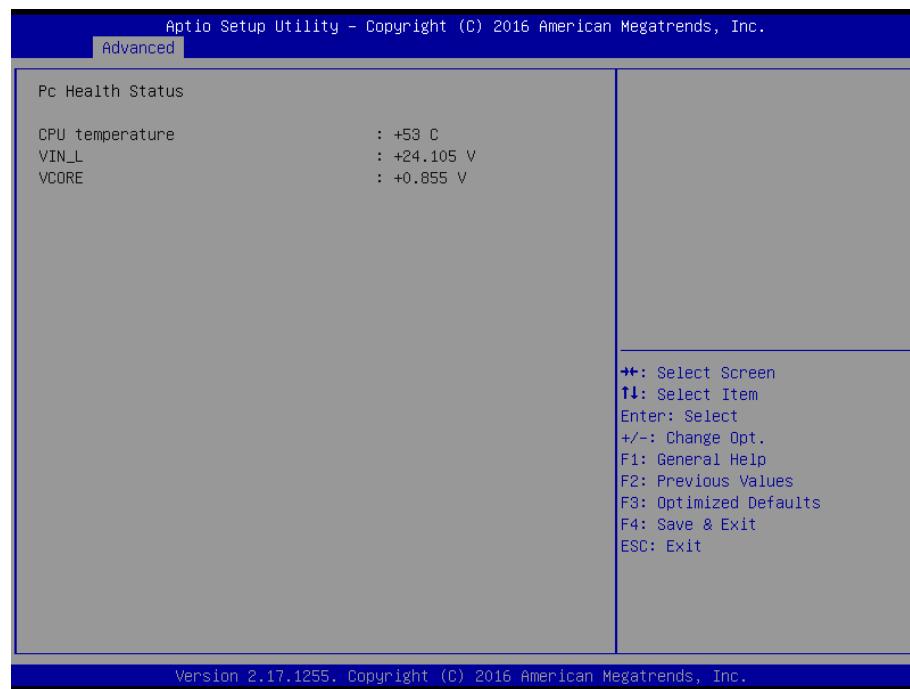


### 3.6.2.7 S5 RTC Wake Settings

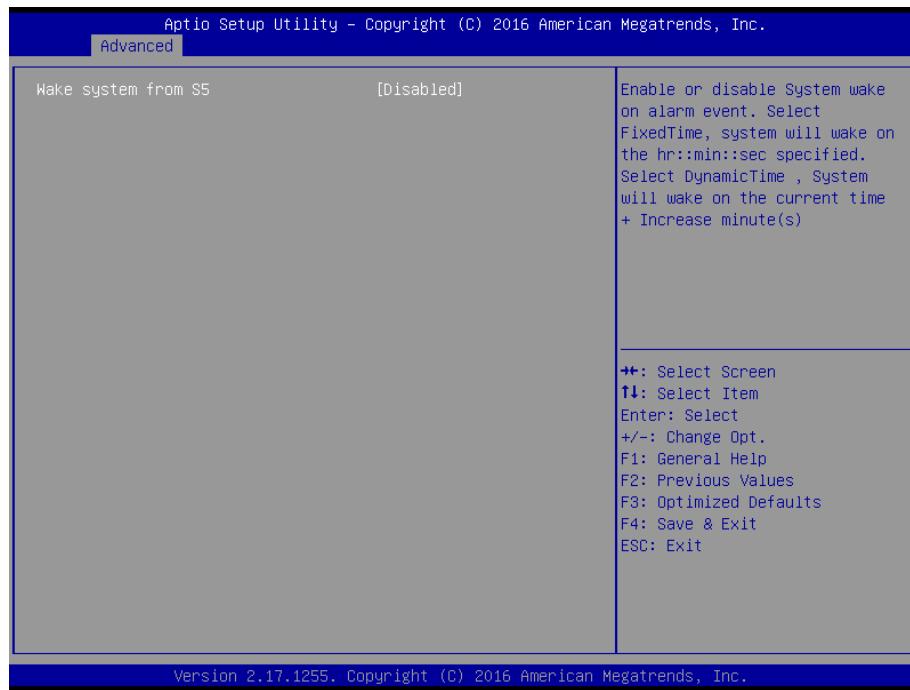


Item	Options	Description
Wake system from S5	Disabled[Default], Fixed Time Dynamic Time	Enable or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s).

### 3.6.2.8 Serial Port Console Redirection

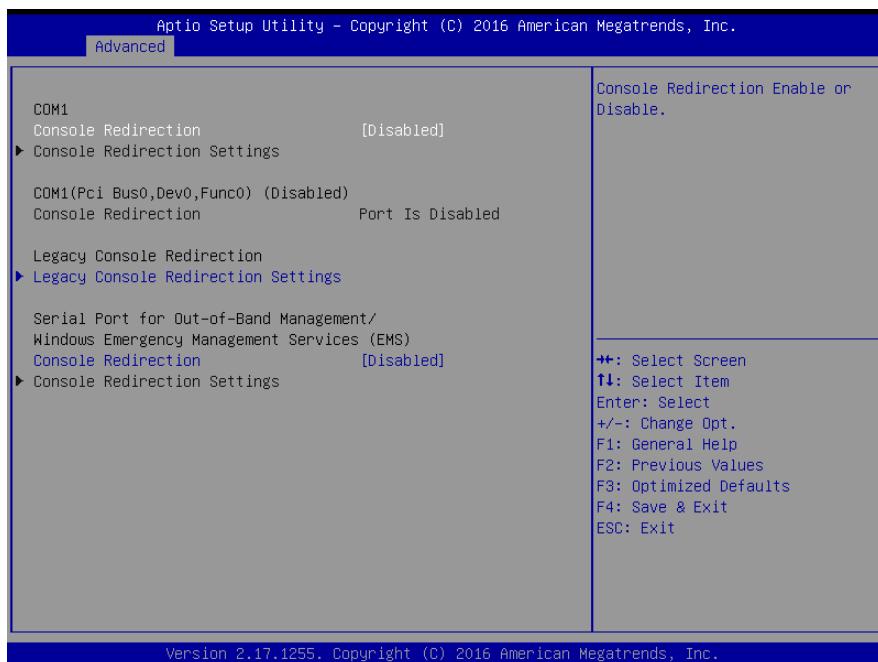

Item	Options	Description
Console Redirection	Disabled[Default], Enabled	Console Redirection Enable or Disable.


#### 3.6.2.8.1 Legacy Console Redirection Settings

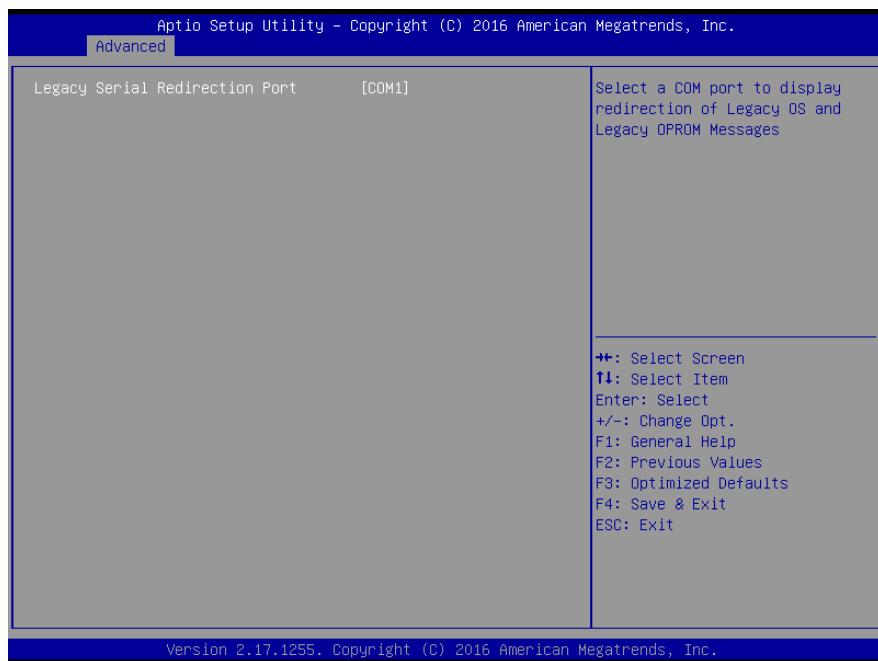


Item	Option	Description
<b>Legacy Serial Redirection Port</b>	COM1[Default],	Select a COM port to display redirection of Legacy OS and Legacy OPROM Messages.

### 3.6.2.9 CPU Configuration


Use the CPU configuration menu to view detailed CPU specification and configure the CPU.

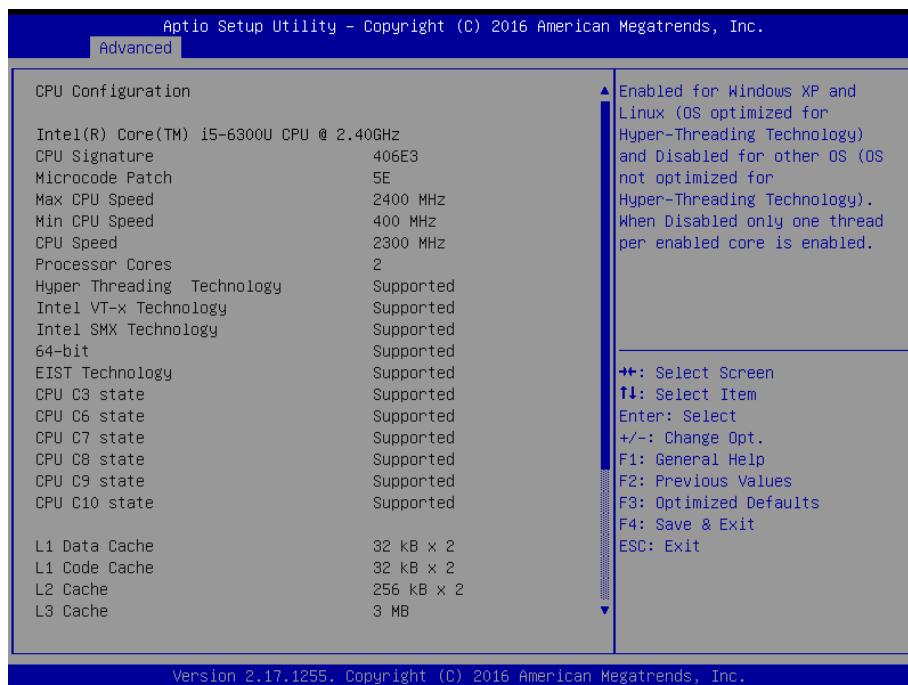

### 3.6.2.10 Intel TXT Configuration

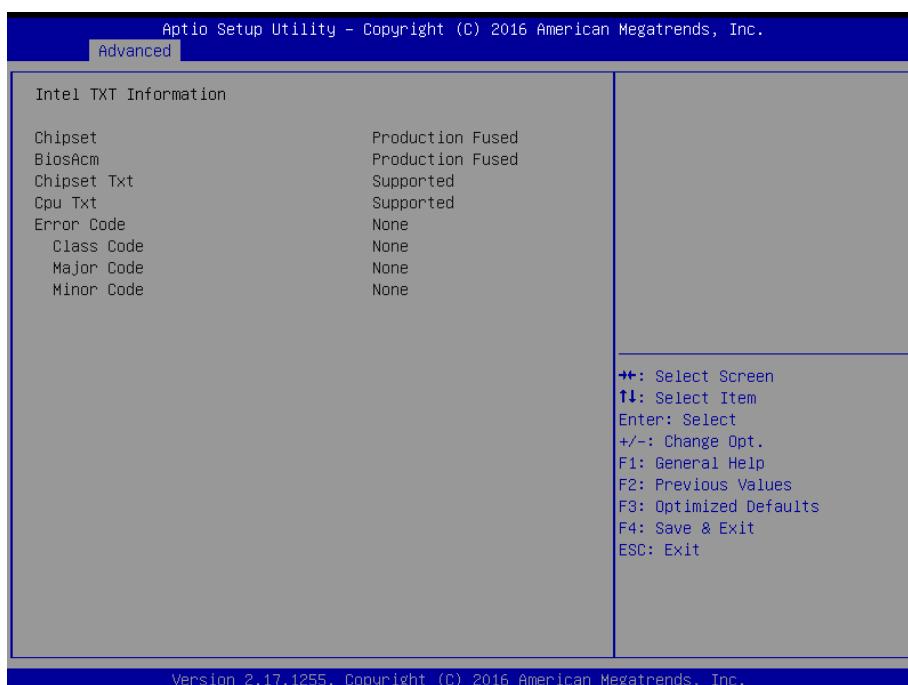

### 3.6.2.11 SATA Configuration

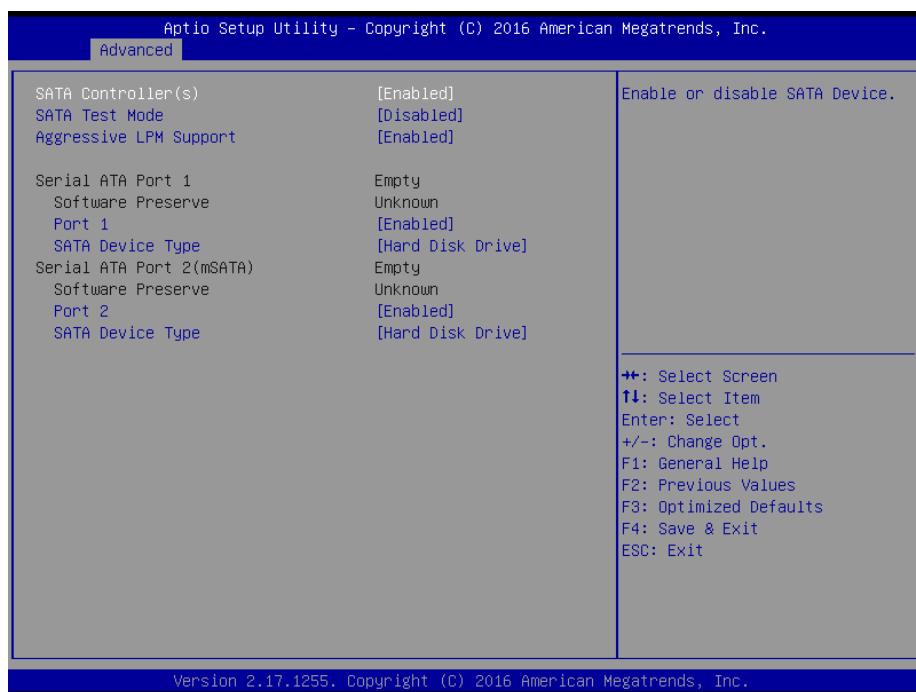


Item	Options	Description
<b>SATA Controller(s)</b>	Enabled[Default] Disabled,	Enable or disable SATA Device.
<b>SATA Test Mode</b>	Enabled Disabled[Default],	Test Mode Enable/Disable (Loop Back).
<b>Aggressive LPM Support</b>	Enabled[Default] Disabled	Enable PCH to aggressively enter link power state.
<b>Port 1/2</b>	Enabled[Default] Disabled,	Enable or Disable SATA Port.
<b>SATA Device Type</b>	Hard Disk Drive [Default] Solid State Drive	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.

### 3.6.2.12 Network Stack Configuration



Item	Options	Description
<b>Network Stack</b>	Enabled Disabled <b>[Default]</b>	Enable/Disable UEFI Network Stack.


### 3.6.2.13 CSM Configuration

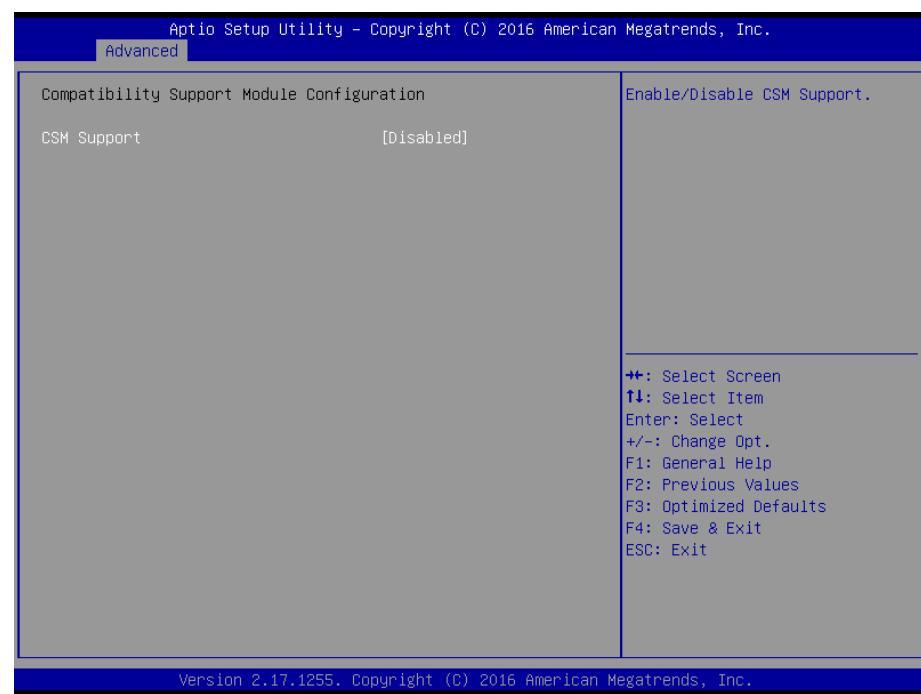

Item	Options	Description
CSM Support	Enabled Disabled[Default]	Enable/Disable CSM Support.

### 3.6.2.14 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.

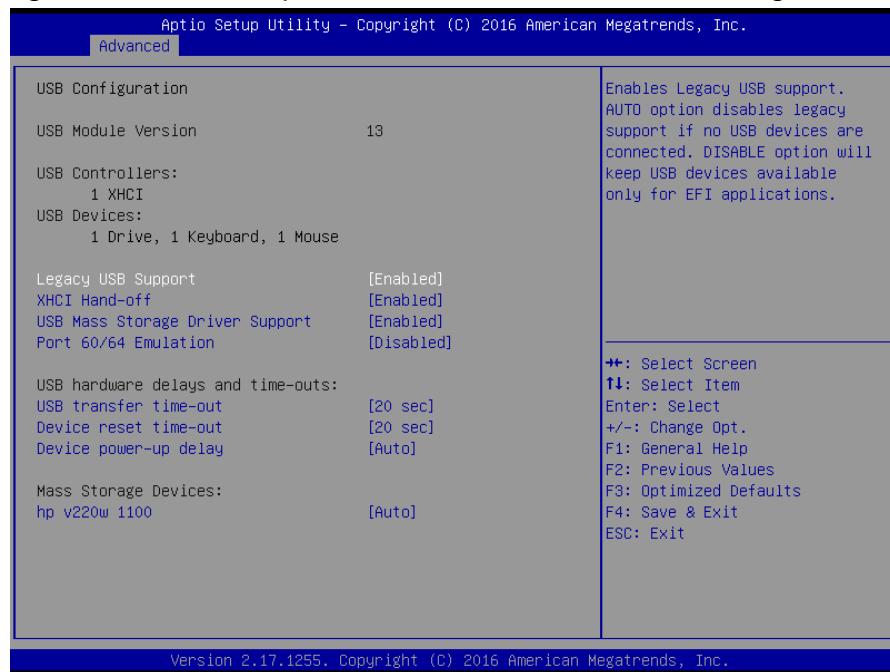


Item	Options	Description
<b>Legacy USB Support</b>	Enabled[Default] Disabled Auto	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
<b>XHCI Hand-off</b>	Enabled[Default] Disabled	This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
<b>USB Mass Storage Driver Support</b>	Enabled[Default] Disabled	Enable/Disable USB Mass Storage Driver Support.
<b>Port 60/64 Emulation</b>	Enabled Disabled[Default]	Enable I/O port 60h/64h emulation support. This should be enabled for the complete USB keyboard legacy support for non-USB aware OSes.
<b>USB transfer time-out</b>	1 sec 5 sec 10 sec 20 sec[Default]	The time-out value for Control, Bulk, and Interrupt transfers.
<b>Device reset time-out</b>	10 sec 20 sec[Default] 30 sec 40 sec	USB mass storage device Start Unit command time-out.
<b>Device power-up delay</b>	Auto[Default]	Maximum time the device will take before it

	Manual	properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.
hp v220w 1100	Auto[ <b>Default</b> ] Floppy Forced FDD Hard Disk CD-ROM	Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM', drives with no media will be emulated according to a drive type.

### 3.6.3 Chipset



#### 3.6.3.1 System Agent (SA) Configuration

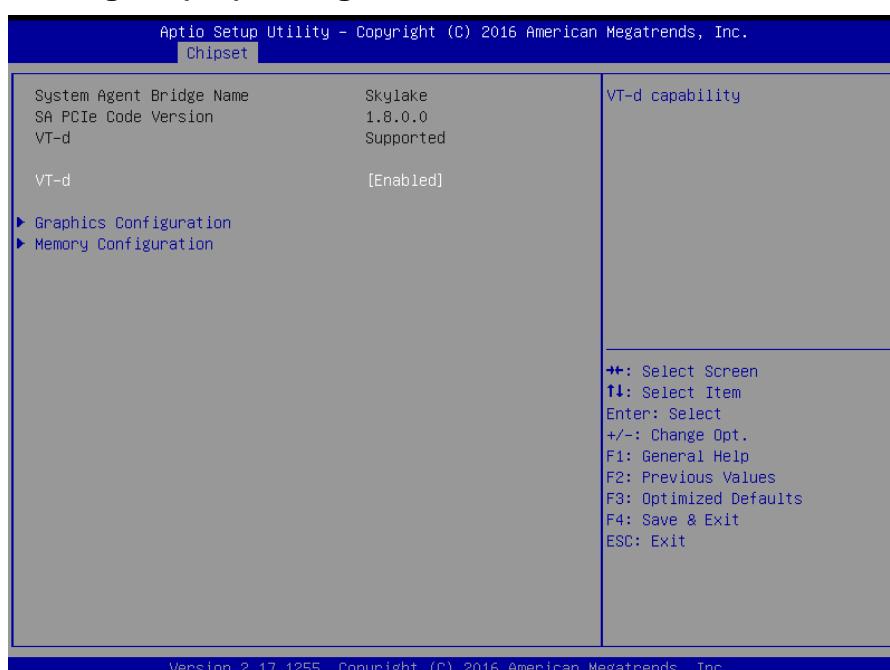

Item	Option	Description
VT-d	Enabled[ <b>Default</b> ] Disabled	VT-d capability.


### 3.6.3.1.1 Graphics Configuration



Item	Option	Description
<b>CH7511 EDID Panel Option</b>	1024x768 24/1[ <b>Default</b> ] 800x600 18/1 1024x768 18/1 1366x768 18/1 1024x600 18/1 1280x800 18/1 1920x1200 24/2 1920x1080 18/2 1280x1024 24/2 1440x900 18/2 1600x1200 24/2 1366x768 24/1 1920x1080 24/2 1680x1050 24/2	Port1-EDP to LVDS (Chrotel 7511) Panel EDID Option.
<b>Active LVDS (CH7511)</b>	Enabled[ <b>Default</b> ] Disabled	Active Internal LVDS (eDP->Ch7511-to-LVDS).
<b>Brightness Control Method</b>	BIOS[ <b>Default</b> ] BR Button VR OS Driver	LVDS Brightness Control Method. 1.BIOS 2.Brightness Button 3.Variable Resistor 4.OS Driver.
<b>LVDS Back Light PWM</b>	00% 25% 50%	Select LVDS back light PWM duty.

	75% 100%[Default]	
LVDS Back Light PWM Frequency	200[Default] 300 400 500 700 1k 2k 3k 5k 10k 20k	Select LVDS back light PWM Frequency.
Onboard Touch Setting	Enabled[Default] Disabled	Enable/Disable USB Touch.

### 3.6.3.1.2 Memory Configuration

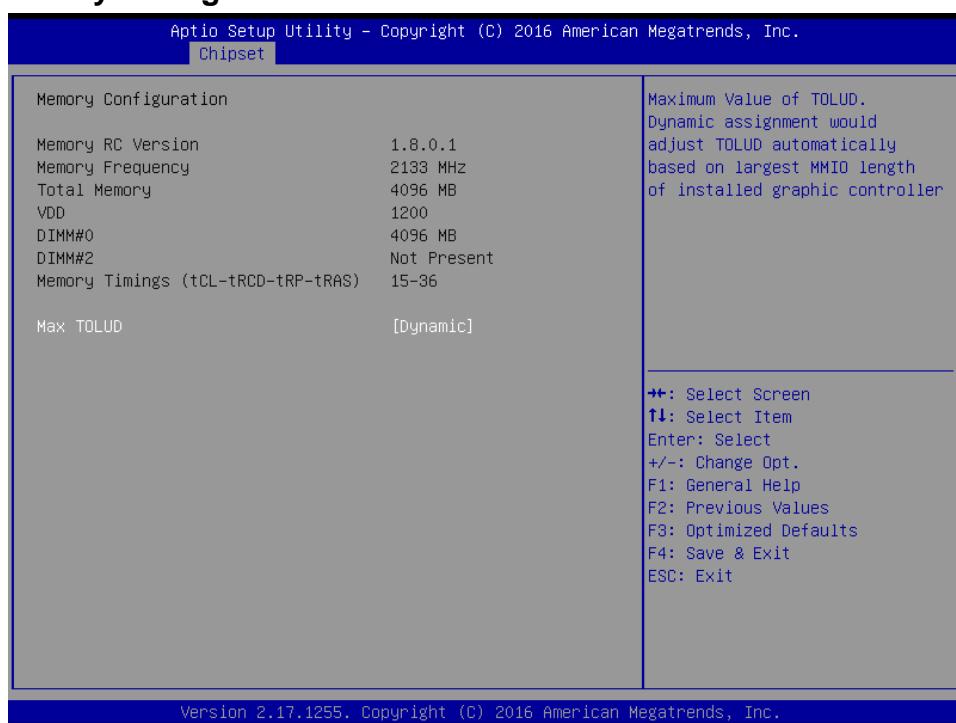


Item	Option	Description
Max TOLUD	Dynamic[Default] 1GB/1.25GB/1.5GB/1.75GB /2GB/2.25GB/2.5GB/2.75GB	Maximum Value of TOLUD. Dynamic assignment would adjust TOLUD automatically based on largest MMIO length of installed graphic controller.

### 3.6.3.2 PCH-IO Configuration




Item	Option	Description
PCH LAN Controller	Disabled Enabled[Default]	Enable or disable onboard NIC.

#### 3.6.3.2.1 PCI Express Configuration

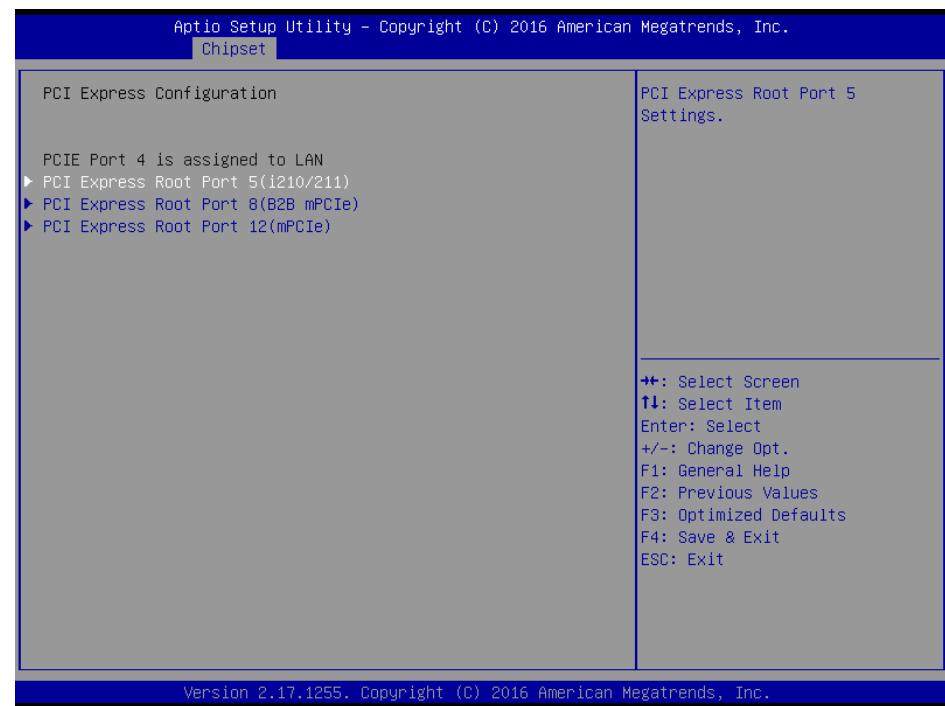


### 3.6.3.2.1.1 PCI Express Root Port5 (i210/211)

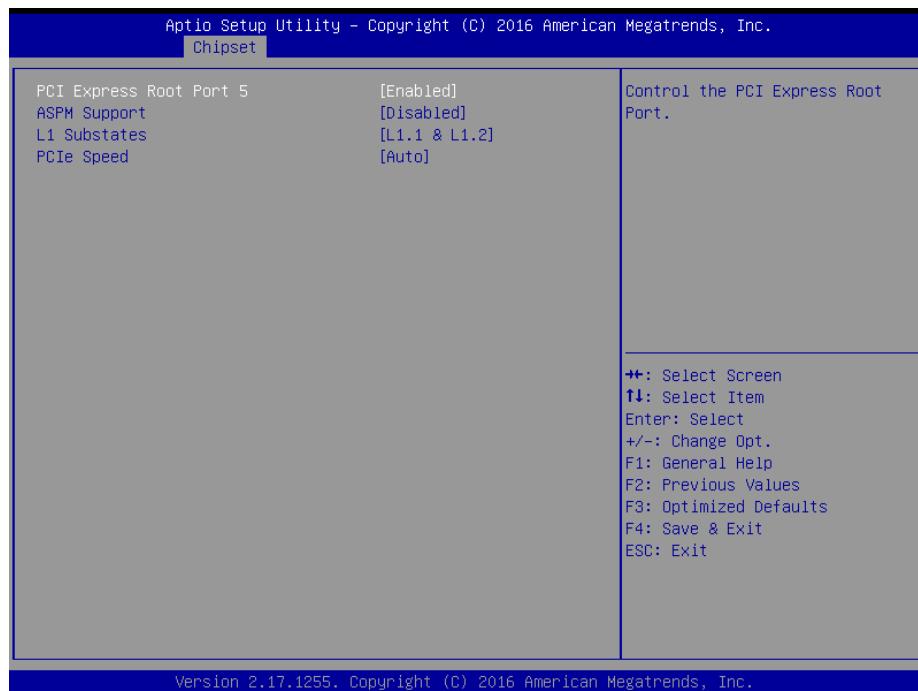


Item	Option	Description
<b>PCI Express Root Port 5</b>	Enabled [ <b>Default</b> ], Disabled	Control the PCI Express Root Port.
<b>ASPM Support</b>	Disabled [ <b>Default</b> ], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
<b>L1 Substates</b>	Disabled L1.1 L1.2 L1.1 & L1.2 [ <b>Default</b> ],	PCI Express L1 Substates settings.
<b>PCIe Speed</b>	Auto [ <b>Default</b> ] Gen1 Gen2 Gen3	Select PCI Express port speed.

### 3.6.3.2.1.2 PCI Express Root Port8 (B2B mPCIe)

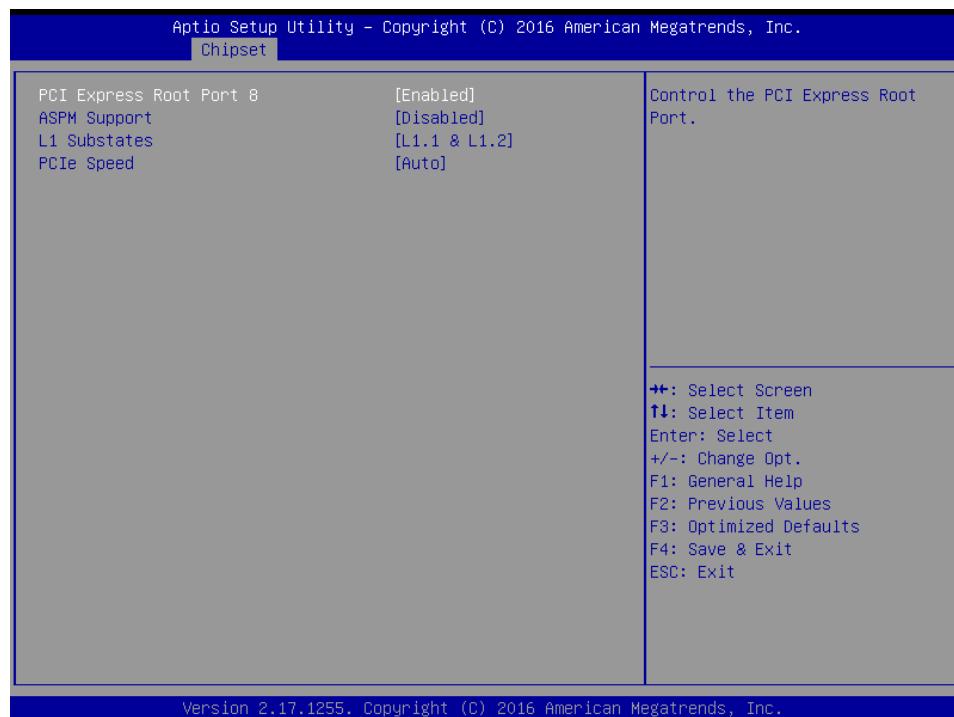

Item	Option	Description
<b>PCI Express Root Port 8</b>	Enabled[ <b>Default</b> ], Disabled	Control the PCI Express Root Port.
<b>ASPM Support</b>	Disabled [ <b>Default</b> ], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
<b>L1 Substates</b>	Disabled L1.1 L1.2 <b>L1.1 &amp; L1.2[Default]</b> ,	PCI Express L1 Substates settings.
<b>PCIe Speed</b>	Auto[ <b>Default</b> ] Gen1 Gen2 Gen3	Select PCI Express port speed.

### 3.6.3.2.1.3 PCI Express Root Port12 (mPCIe)

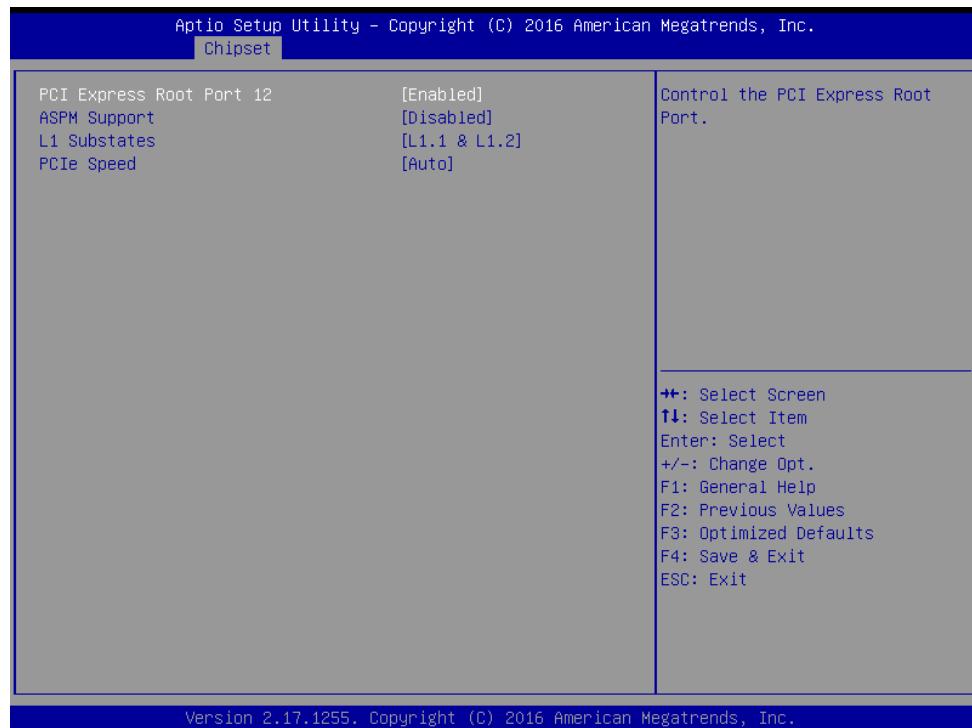


Item	Option	Description
<b>PCI Express Root Port 12</b>	Enabled [ <b>Default</b> ], Disabled	Control the PCI Express Root Port.
<b>ASPM Support</b>	Disabled [ <b>Default</b> ], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
<b>L1 Substates</b>	Disabled L1.1 L1.2 L1.1 & L1.2 [ <b>Default</b> ],	PCI Express L1 Substates settings.
<b>PCIe Speed</b>	Auto [ <b>Default</b> ] Gen1 Gen2 Gen3	Select PCI Express port speed.

### 3.6.3.2.2 USB Configuration




Item	Option	Description
<b>USB Precondition</b>	Enabled Disabled <b>[Default]</b> ,	Precondition work on USB host controller and root ports for faster enumeration.
<b>XHCI Disable Compliance Mode</b>	<b>FALSE[Default]</b> , TRUE	Option to disable Compliance Mode. Default is FALSE to not disable Compliance Mode. Set TRUE to disable Compliance Mode.

### 3.6.3.2.3 HD Audio Configuration

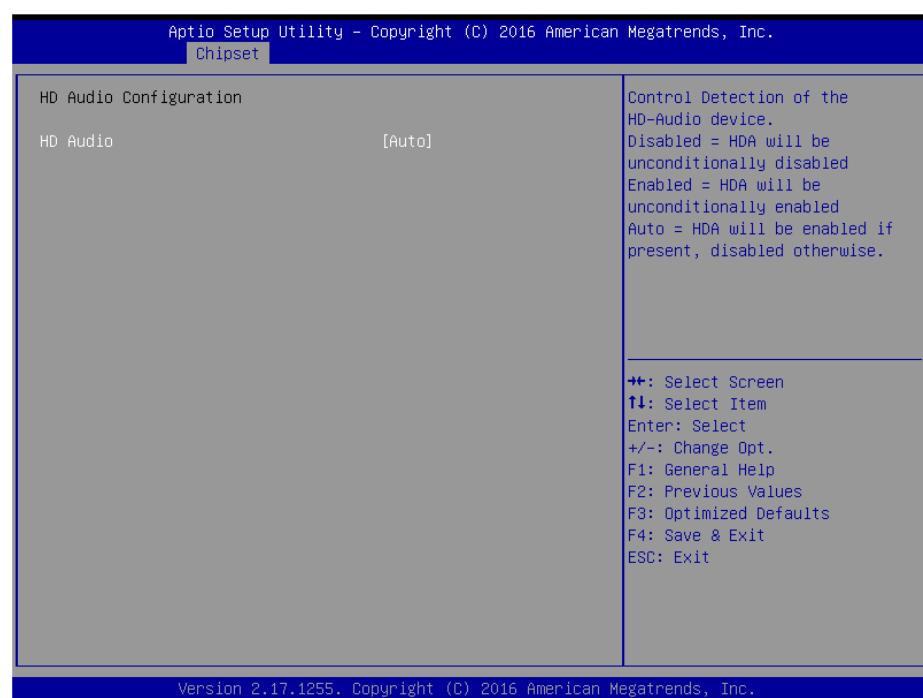

Item	Option	Description
<b>HD Audio</b>	Disabled Enabled Auto <b>[Default]</b> ,	Control Detection of the HD-Audio device. Disable = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled Auto = HDA will be enabled if present, disabled otherwise.

### 3.6.4 Security

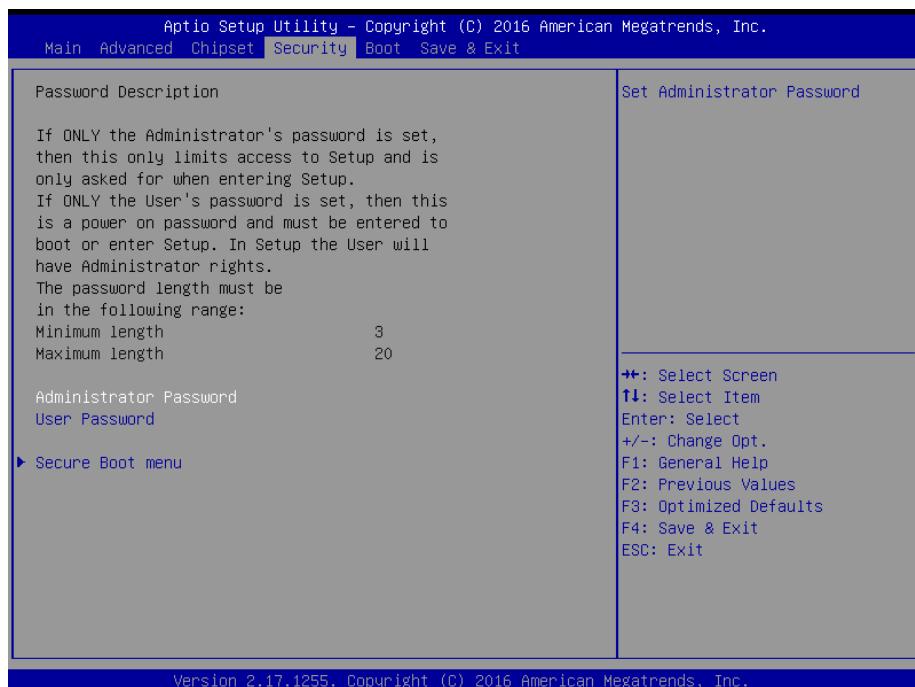


#### ● Administrator Password

Set setup Administrator Password

#### ● User Password


Set User Password

### 3.6.4.1 Secure Boot menu

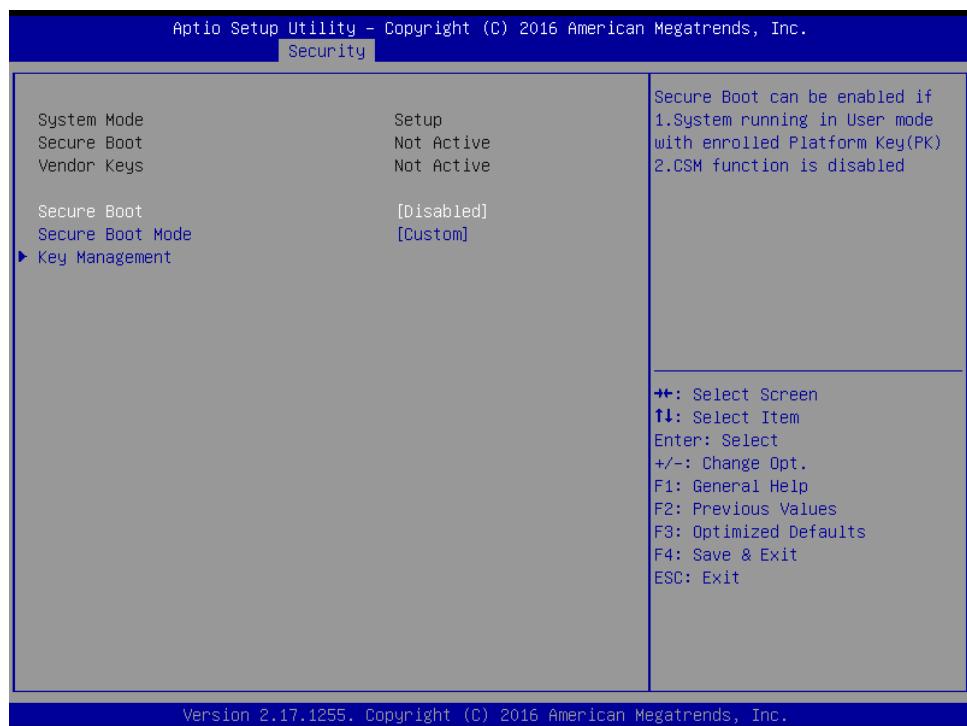


Item	Option	Description
<b>Secure Boot</b>	Disabled <b>[Default]</b> Enabled	Secure Boot can be enabled if 1.System running in User mode with enrolled Platform Key(PK) 2.CSM function is disabled.
<b>Secure Boot Mode</b>	Standard Custom <b>[Default]</b>	Secure Boot mode selector. 'Custom' Mode enables users to change Image Execution policy and manage Secure Boot Keys.

### 3.6.4.1.1 Key Management

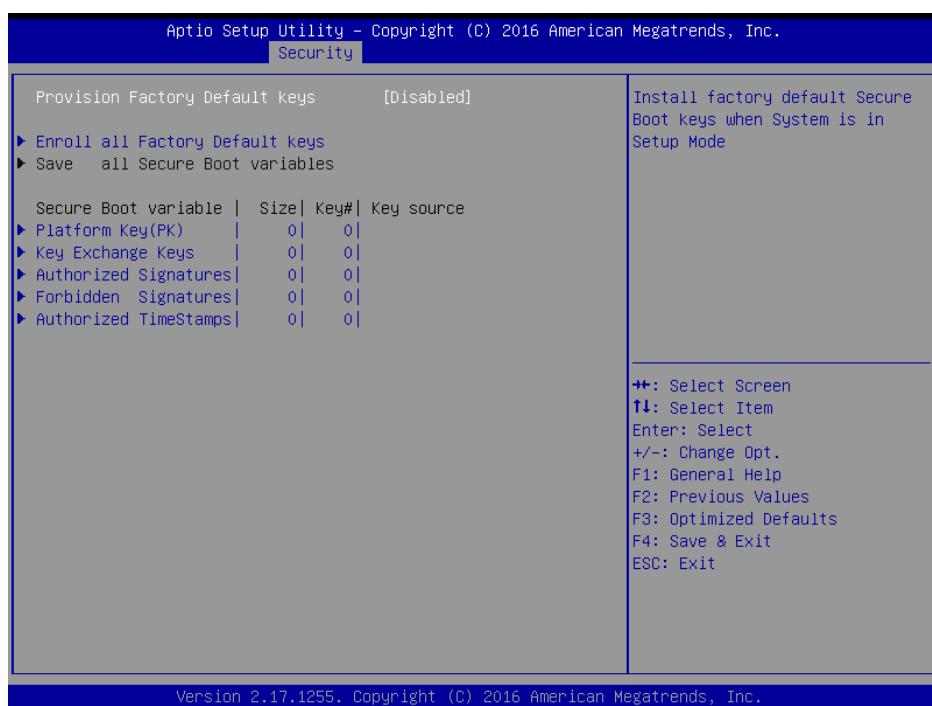


Item	Option	Description
<b>Provision Factory Default keys</b>	Enabled, Disabled <b>[Default]</b>	Install Factory default Secure Boot Keys when System is in Setup Mode.


### 3.6.5 Boot

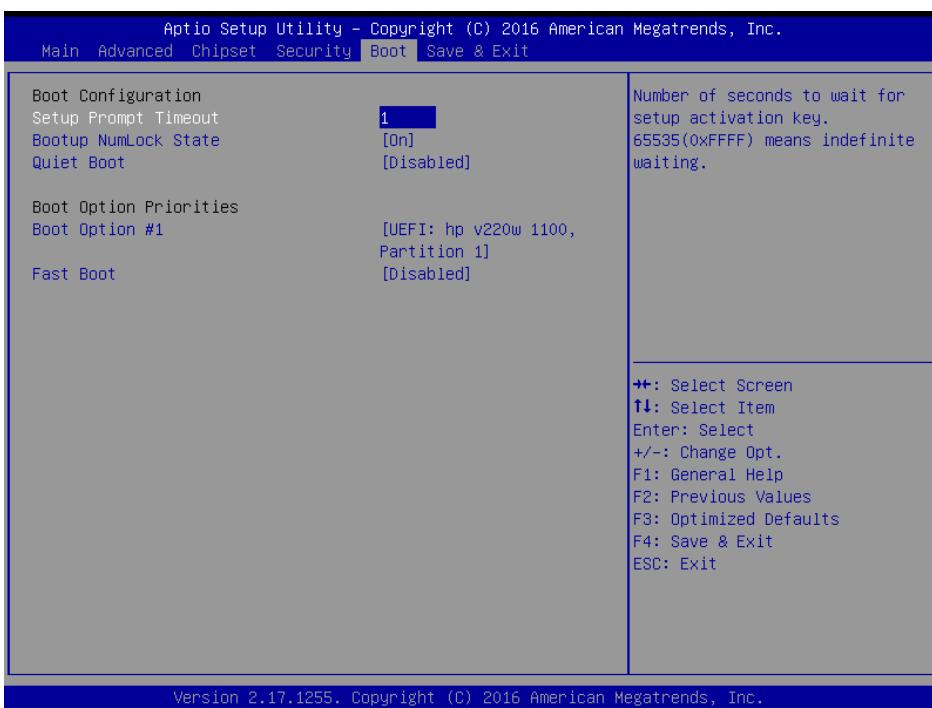

Item	Option	Description
<b>Setup Prompt Timeout</b>	1~ 65535	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
<b>Bootup NumLock State</b>	On[ <b>Default</b> ] Off	Select the Keyboard NumLock state
<b>Quiet Boot</b>	Disabled[ <b>Default</b> ] Enabled	Enables or disables Quiet Boot option
<b>Fast Boot</b>	Disabled[ <b>Default</b> ] Enabled	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.
<b>Boot Option #1</b>	Set the system boot order.	

### 3.6.6 Save and exit

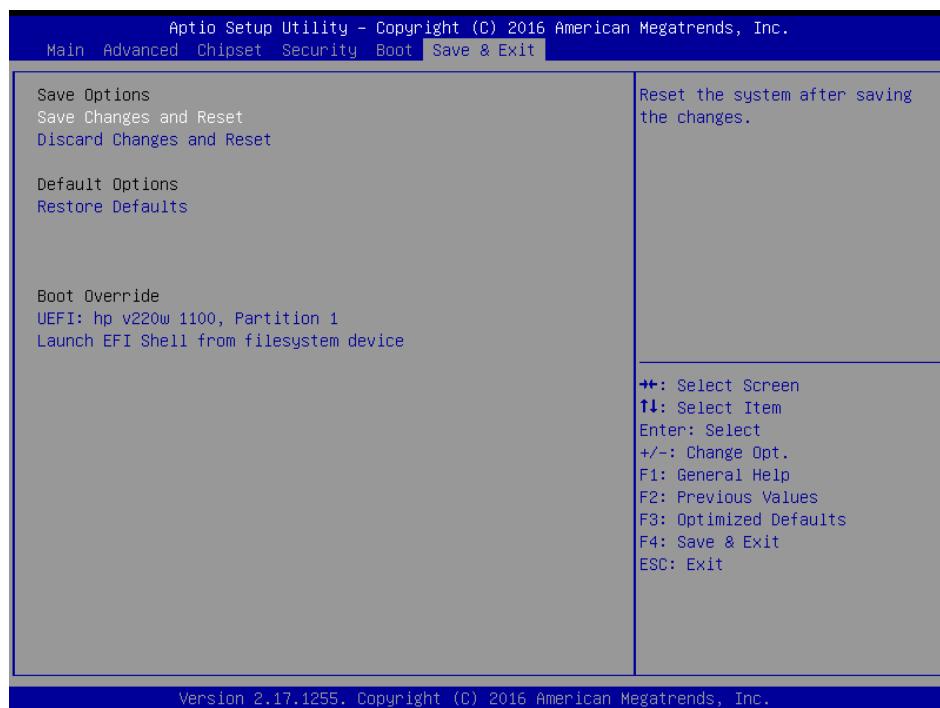

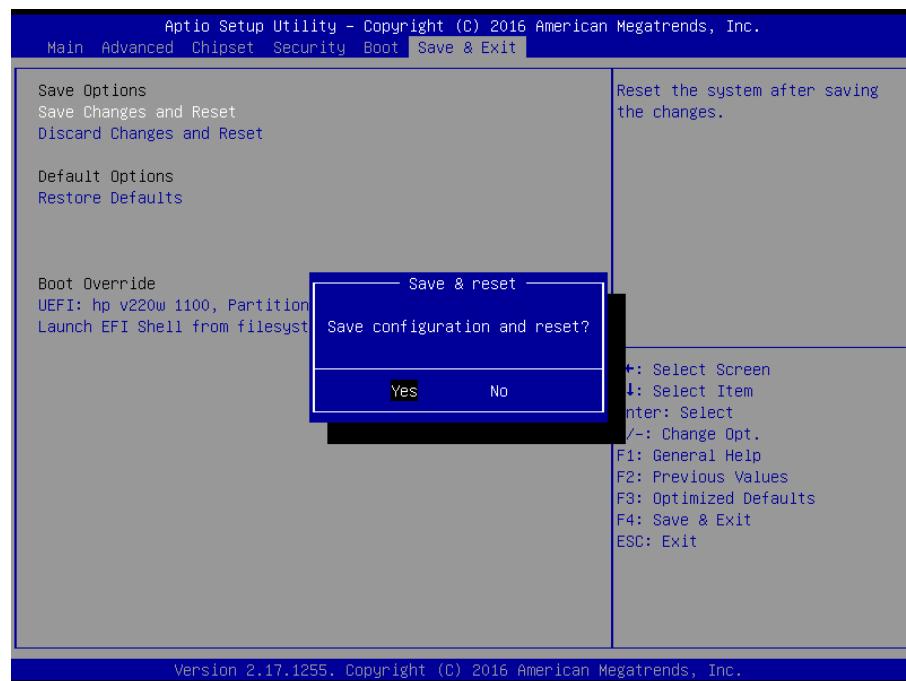

### **3.6.6.1 *Save Changes and Reset***

Reset the system after saving the changes.

### **3.6.6.2 *Discard Changes and Reset***

Any changes made to BIOS settings during this session of the BIOS setup program are discarded. The setup program then exits and reboots the controller.

### **3.6.6.3 *Restore Defaults***

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

### **3.6.6.4 *Launch EFI Shell from filesystem device***

Attempts to Launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.

