



FAQ / Application Note

Subject : How to remove and install the heat sink on ECM-3610?	
FAQ Document No: G08007	Date: 2008/08/19
Model No. ECM-3610	Rev.A1
Category: <input checked="" type="checkbox"/> General <input type="checkbox"/> H/W <input type="checkbox"/> SW <input type="checkbox"/> Others, _____	
Purpose : Step by step to uninstall and install heat sink	

Remove the heat sink :

1. Blow the hot air to the bottom of the heat sink to reduce the stickiness of the heat sink.
2. Use the tool to remove the heat sink carefully.

Install the heat sink :

3. Be aware of the direction of the heat sink. It must be parallel to the heat sink on the CPU.
- Here is the example of ECM-3610 :

