



## FAQ / Application Note

### **Subject : Intel 945GC chipset can't support Hot-plug CRT monitor**

**FAQ Document No:** H09004

**Date:** 2009/01/20

**Model Name.** Intel 945GC chipset

**Rev.** A1

**Category:** ☐General ☒H/W ☐S/W ☐Others, Display

**Purpose :** Intel 945GC chipset VGA function will be disabled automatically if it didn't be connected while system power on. Please install VGA cable before power on your system.

About Intel 945GC chipset limitation, CRT monitor will be disabled automatically if it didn't be connected while system power on. Therefore we suggest that connect display device before boot this board.

There was one solution in Windows.

When we into OS and no link CRT monitor at first, just press Ctrl+ALT+F1 to enable CRT video output (control by Intel IGD driver's hotkey).

Intel IGD hotkey partly reference (view in Intel IGD driver control panel)

- a. Ctrl+Alt+F1: CRT output
- b. Ctrl+Alt+F3: LVDS output
- c. Ctrl+Alt+F4: DVI output

**Additional Note:** Intel 82945G/82945G GMCH can supports Hot-Plug and Display for the PCI Express x16 graphics.

#### **Avalue Technology Inc.**

7F, 228, Lian-Cheng Road, Chung Ho City, Taipei, Taiwan R.O.C.

www.avalu.com.tw  
sales@avalu.com.tw  
Tel:+886-2-82262345  
Fax:+886-2-82262777

Avalue Europe  
sales.europe@avalu.com.tw  
Tel: +45-7025-0310  
Fax: +45-4975-5026

Avalue USA  
sales@avalu-usa.com  
Tel: +1-732-578-0200  
Fax: +1-732-578-0250

BCM Advanced Research  
BCMSales@bcmcom.com  
Tel: +1-949-470-1888  
Fax: +1-949-470-0971

Avalue China  
sales.china@avalu.com.cn  
Tel: +86-21-5426-3399  
Fax: +86-21-6495-0370