

OFT-07W03-B1

7" Open Frame Tablet

Quick Reference Guide

1st Ed – 01 June, 2023

Copyright Notice

Copyright © 2023 Avalue Technology Inc., ALL RIGHTS RESERVED.



Federal Communication Commission Interference Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice:

- (1) A Unshielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.
- (2) Use only shielded cables to connect I/O devices to this equipment.
- (3) Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This Wireless LAN radio device has been evaluated under FCC Bulletin OET 65 and found compliant to the requirements as set forth in CFR 47 Sections 2.1091, 2.1093, and 15.247 (b) (4) addressing RF Exposure from radio frequency devices. The radiated output power of this Wireless LAN device is far below the FCC radio frequency exposure limits. Nevertheless, this device shall be used in such a manner that the potential for human contact during normal operation is minimized. When nearby persons has to be kept to ensure RF exposure compliance, in order to comply with RF exposure limits established in the ANSI C95.1 standards, the distance between the antennas and the user should not be less than 20 cm.

WARNING

“CAUTION – Use suitable mounting apparatus to avoid risk of injury.”

“CAUTION – This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures”

“CAUTION –Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.”

“CAUTION - Use a power cord that matches the voltage of the power outlet, which has been approved and complies with the safety standard of your particular country.”

“WARNING – To avoid risk of electric shock, this equipment must only be connected to a supply mains with protective earth.”

Content

1. Getting Started.....	6
1.1 Safety Precautions	6
1.2 Packing List	6
1.3 System Specifications	7
1.4 System Overview.....	10
1.4.1 Top View	10
1.4.2 Bottom View	10
1.5 System Dimensions.....	11
1.5.1 Front and Rear side	11
1.5.2 Installing Extend Brackets.....	12
1.6 Flush Mounting Concept	13
1.7 Panel Mounting	14
2. Hardware Configuration.....	21
2.2 Motherboard Overviews.....	22
2.3 Motherboard Connector list.....	23
2.4 Motherboard Jumpers & Connectors settings	25
2.4.1 Clear CMOS (JCMOS1).....	25
2.4.2 AT/ATX Input power select (JAT1)	25
2.4.3 DC Power-in connector (JPWR2)	26
2.4.4 Touch Key Button (JTK1).....	26
2.4.5 MCU connector (JMCU1).....	27
2.4.6 Power button (JPB1).....	27
2.4.7 Speaker interface (JSPK1)	28
2.4.8 A-MIC connector (JAMIC1).....	28
2.4.9 General purpose I/O connector (JGPIO1)	29
2.4.10 USB Touch connector (JTP2)	29
2.4.11 I2C Sensor (JSEN1)	30
2.4.12 Console Debug connector (JCOM1).....	30
2.4.13 RS-232 connector (JCOM2)	31
2.4.14 RS-232 & RS-485 connector (JCOM3).....	31
2.4.15 USB Camera & DMIC connector (JCAM1)	32
2.4.16 RTC battery connector (JBAT1)	32
2.4.17 MIPI Port (JMIPI1)	33

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

- 1 x OFT-07W03-B1
- 1 x Screw M3-4mm / ziplock bag No.00 40x60mm x1pc
- 1 x power cord, AC/DC adapter 12V/5A 90 Screw Type (Option)



If any of the above items is damaged or missing, contact your retailer.

1.3 System Specifications

Component	
Mother Board	ACP-CHT3
CPU	Cherry Trail Z8350 Intel Atom 1.44GHz
CPU Cooler (Type)	By mechanical design
Memory	2GB / 4GB DDR3L
Power Supply	DC in
Adapter	60W/12V/5A, 60W/24V/2.5A
Microphone	1 x A-MIC interface
Speaker	1 x Speaker interface
Camera	1 x 5Px2_2mm Camera / DMIC
Wireless LAN	1 x 802.11 b/g/n/ac Wireless LAN
Bluetooth	BT 5.0
Storage	
Other Storage Device	32G / 64G eMMC
Panel	
LCD Panel	7" XYC - MIPI 800 x 1280
Internal I/O	
USB Camera & DMIC	- JCAM1: 5x2P_2mm_90D - USB for Camera, Pwr-out(5v,0.5A) - Dmic, Pwr-out(1.8v,0.5A)
USB Touch	- JTP2: 5P_2mm_90D - USB for touch screen
M.2 Socket	- JM2: M.2 B-Key x 1(3042)_90D - RST(1.8V), Usb, Uim, Pwr-out(1.8v)
Touch Key Button	- JTK1: 6x2P_2mm_90D - Touch button control(power/vol/brightness...),Led, - Reset
DC-IN(wafer)	- JPWR2: 2x2P_2mm_90D - PWR-in 12V~24V
MIPI	- JMIPI1: 31P (7" MIPI)
Analog MIC	- JAMIC1: 3P_2mm_90D - Amic, Detect
Speaker	JSPK1: 4P_2mm_90D

	• L+/L-, R+/R-
Sensor	• JSEN1: 5x2P_2mm_90D • I2Cx2/IRQ(3.3V), Pwr-out(3.3v)
Console Debug	• JCOM1: 5P_2mm_180D • Pin 1/2 debug • Pin 4/5Uart Rs232(Tx/Rx)
RS232	• JCOM2: 5P_2mm_90D • Uart Rs232(Tx/Rx/Rts/Cts)
RS232 & RS485	• JCOM3: 5x2P_2mm_90D • Uart Rs232(Tx/Rx/Rts/Cts), Pwr-out(5v) • Uart Rs485
GPIO	• JGPIO1: 10x2P_1mm_90D • Gpio 16bit(3.3v), I2c(3.3v), Pwr-out(5v)
RTC Battery	• JBAT1: 2P_1.25mm_180D
SIM Card socket	• JUIM1: Micro SIM Card socket • for LTE module
Expansion Slots	• JSD1: Micro SD slot_90D
External I/O	
DC in Power jack	• JPWR1: Power Jack_90D • Pwr-in 12V~24V
HDMI Port	• JHDMI-1: HDMI Port_90D
USB Port	• JUSB1: USB Type A Host (3.0)_90D • JUSB2: USB Type A Host (2.0)_90D
Lan Port	• JLAN1: 10/100 Lan port_90D
Audio Port	• JHP1: Headphone Jack_90D
Reset	• SRST1: Reset button_90D
Mechanical	
Power Type	• 12V~24V wide voltage DC input
Power Connector Type	• DC jack
Dimension	• 180 x 120 x 33.45 (mm)
Weight	• 450 g
Color	• Aluminum
Fanless	• Yes
OS Support	• Android 8.1 / Win 10 / Ubuntu 20.04
Reliability	
EMI Test	• CE • FCC Class A
Safety	• IEC62368-1 & EN62368-1


Random Vibration Operation	1. PSD: 0.00454G²/Hz, 1.5 Grms 2. Operation mode 3. Test Frequency : 5-500Hz 4. Test Axis : X,Y and Z axis 5. 30 minutes per each axis 6. IEC 60068-2-64 Test:Fh 7. Storage : CF or SSD
Sine Vibration Test (Nonoperation)	- Test Acceleration: 2G - System condition: Non-Operating mode - Test frequency: 5~500 Hz - Sweep: 1 Oct/ per one minute. (logarithmic) - Test Axis: X,Y and Z axis - Test time: 10 min. each axis Reference IEC 60068-2-6 Testing procedures
Package vibration test	1. PSD: 0.026G²/Hz , 2.16 Grms 2. Non-operation mode 3. Test Frequency : 5-500Hz 4. Test Axis : X,Y and Z axis 5. 30 min. per each axis 6. IEC 60068-2-64 Test:Fh
Bump Test	1. Wave form : Half Sine wave 2. Acceleration Rate : 10g for operation mode 3. Duration Time : 11ms 4. No. of Shock : Z axis 300 times 5. Test Axis: Z axis 6. Operation mode 7. Reference IEC 60068-2-27 Testing procedures - Test Eb : Shock Test
Package Drop Test	- One corner, three edges, six faces - ISTA 2A, IEC-60068-2-32 Test: Ed
Operating Temperature	0°C ~ 40°C
Operating Humidity	40°C @ 95% Relative Humidity, Non-condensing
Storage Temperature	-20°C ~ 60°C

**Note:**


Specifications are subject to change without notice.

1.4 System Overview

1.4.1 Top View

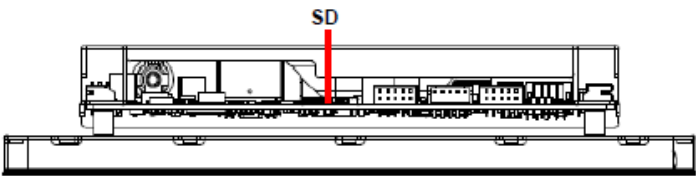


1.4.2 Bottom View

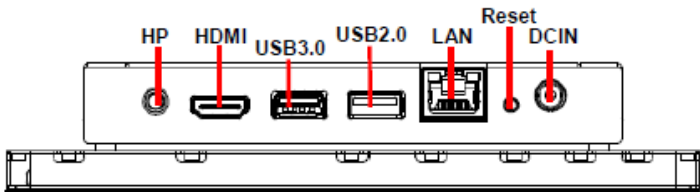

Connectors		
Label	Function	Note
SD	Micro SD card slot	
HP	Audio line-out connector	
HDMI	HDMI connector	
USB	1 x USB 3.0 connector	
	1 x USB 2.0 connector	
LAN	RJ-45 Ethernet	
Reset	Reset button	
DCIN	DC power-in connector	


1.5 System Dimensions

1.5.1 Front and Rear side

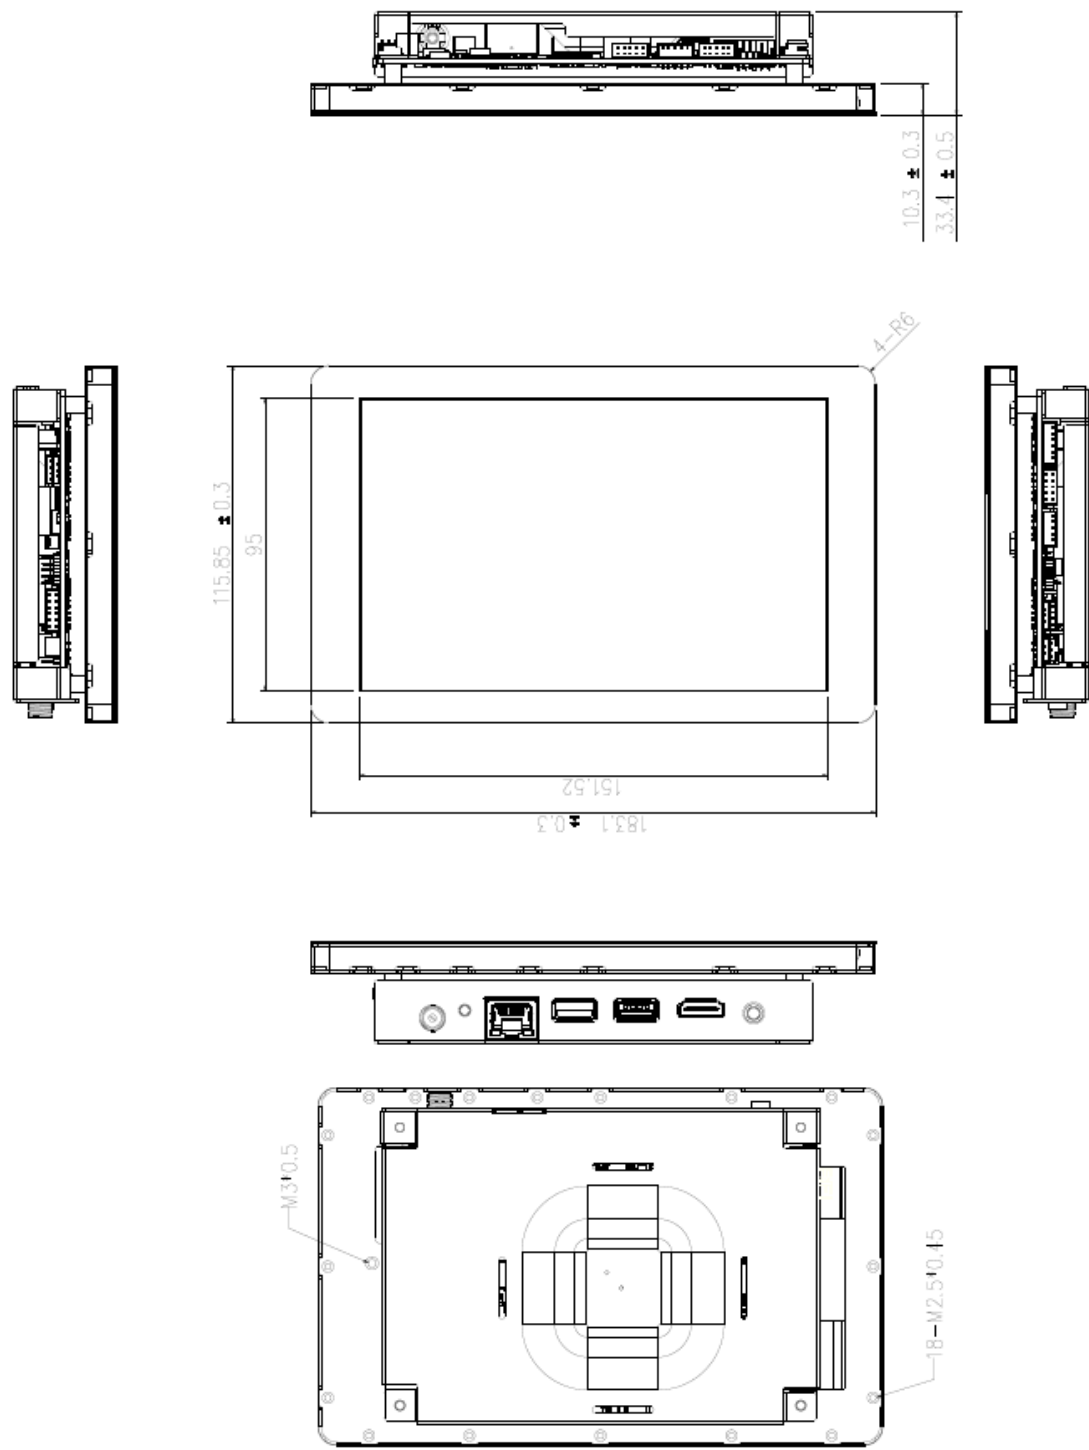

(Unit: mm)

1.5.2 Installing Extend Brackets

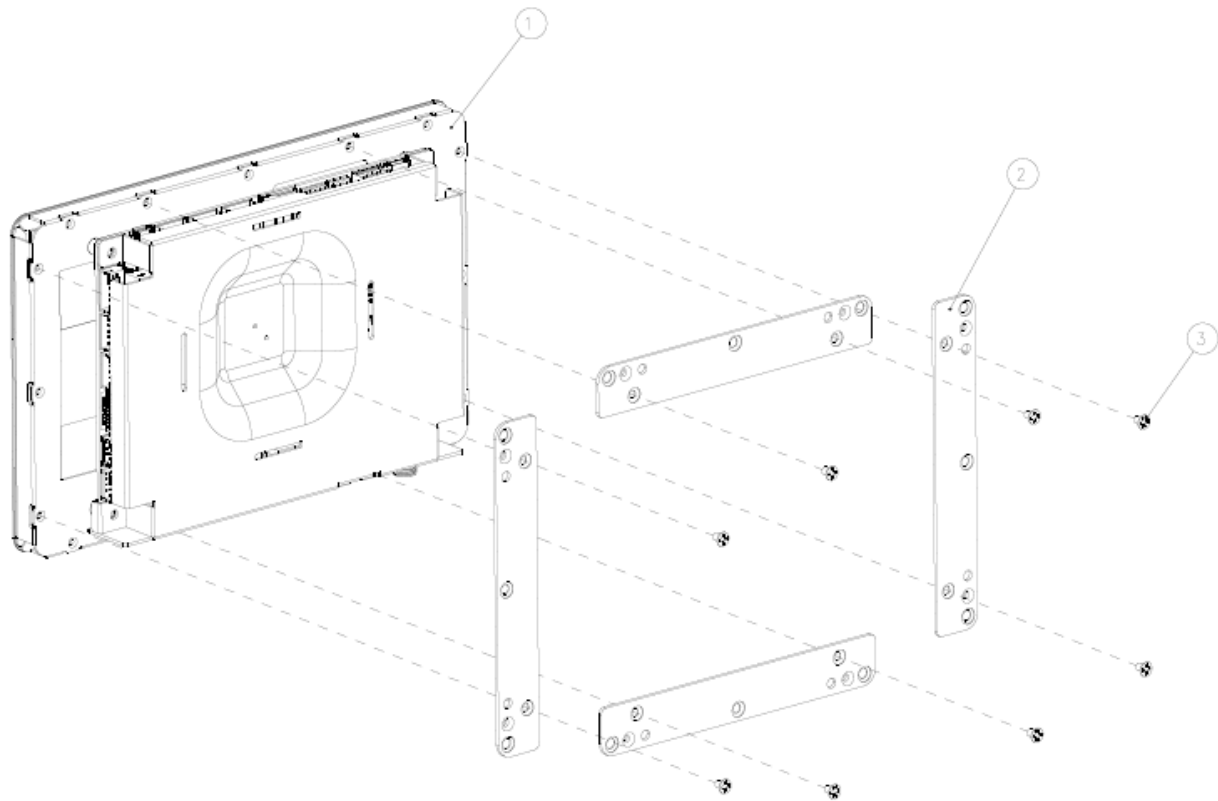


Step1. Locate brackets on both sides, matching the holes on the monitor.


Step2. Insert and fasten 8 screws on each side of the monitor to secure Mounting brackets.

Note: Brackets sold separately.


1.6 Flush Mounting Concept

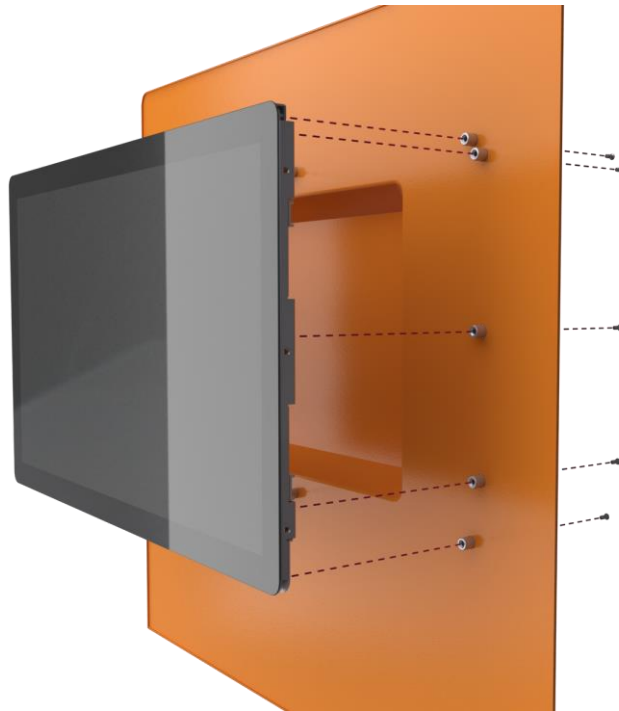

1.7 Panel Mounting

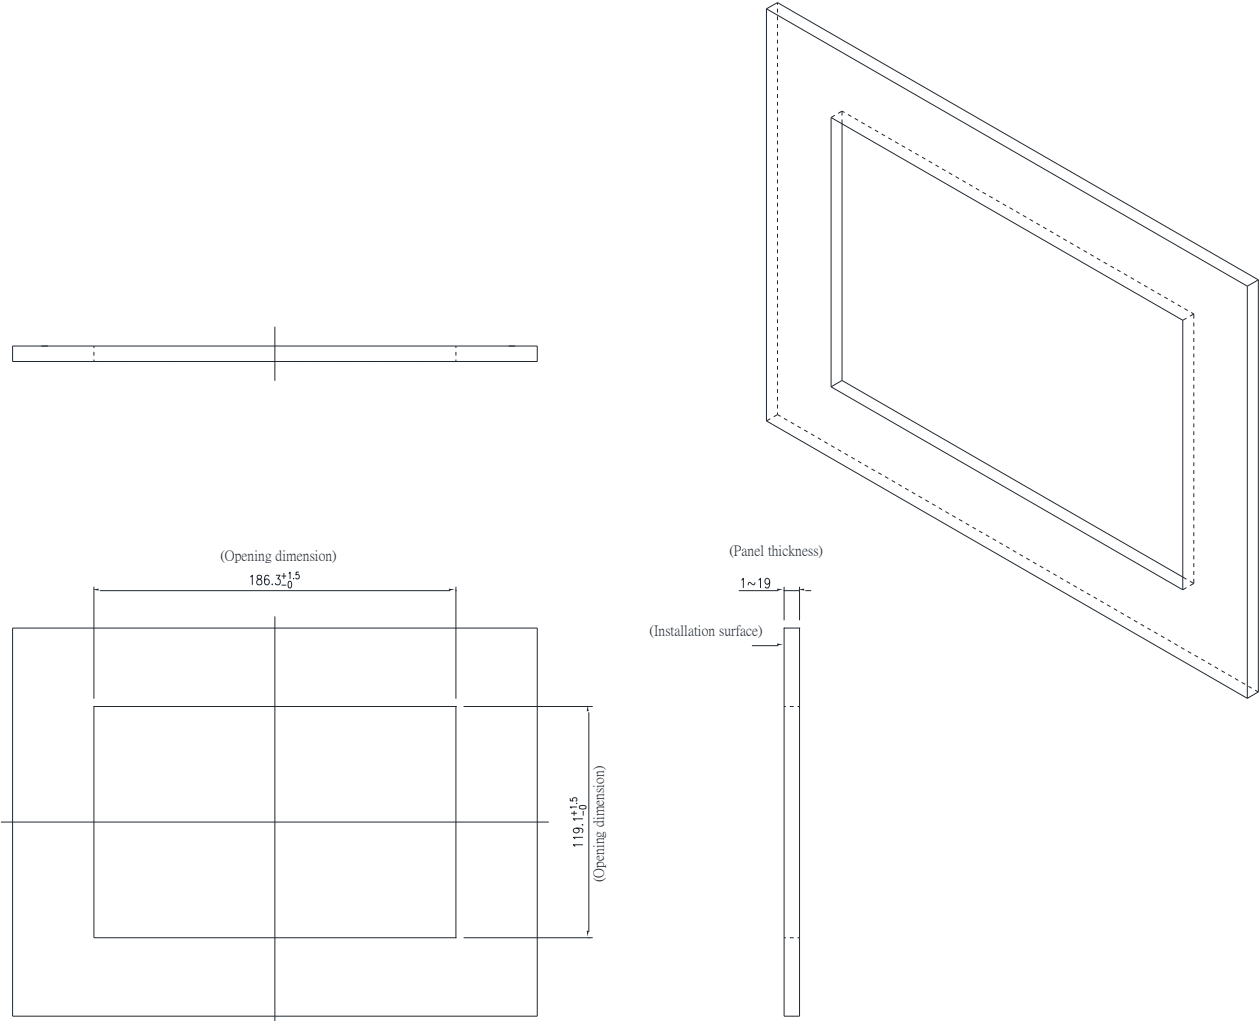


(Unit: mm)

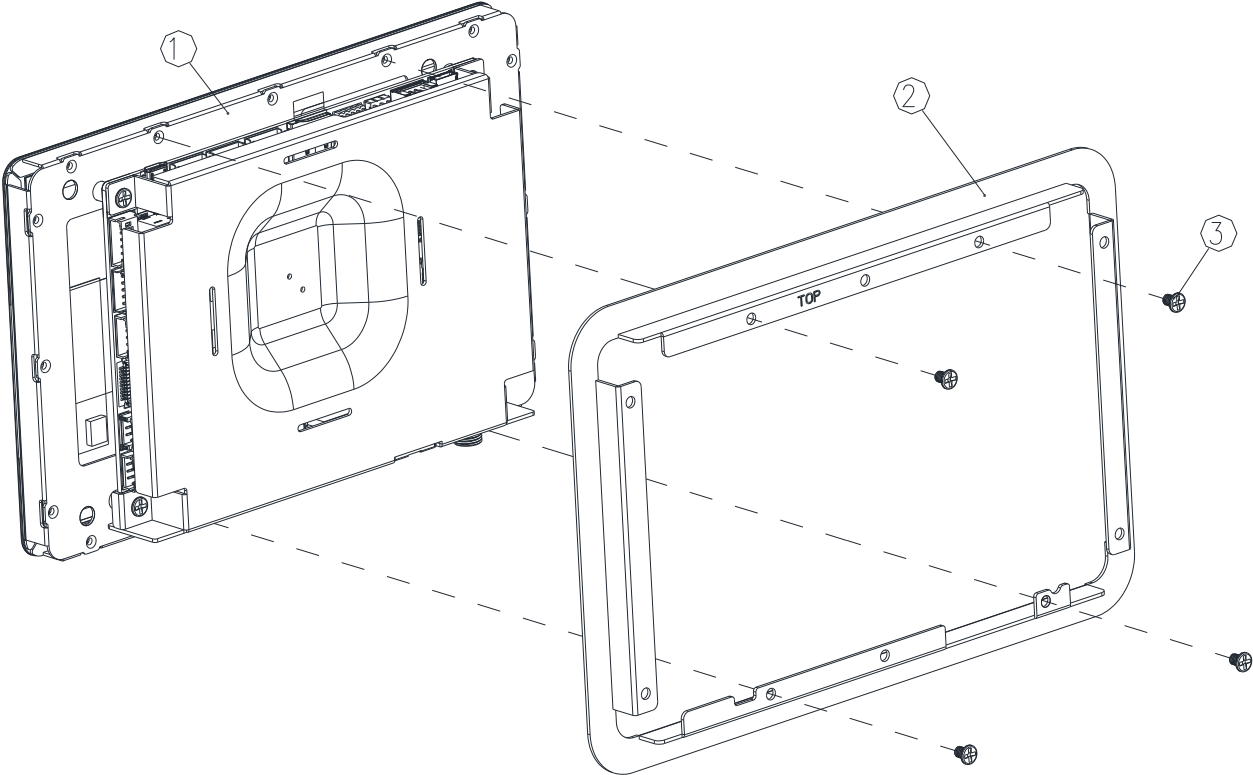


Step2. Insert and fasten 4 screws on each side of the monitor to secure Front bracket.

3	Screw	4
2	Front Bracket	1
1	OFT-07W03-B1	1
Item	Part Name	Quantity

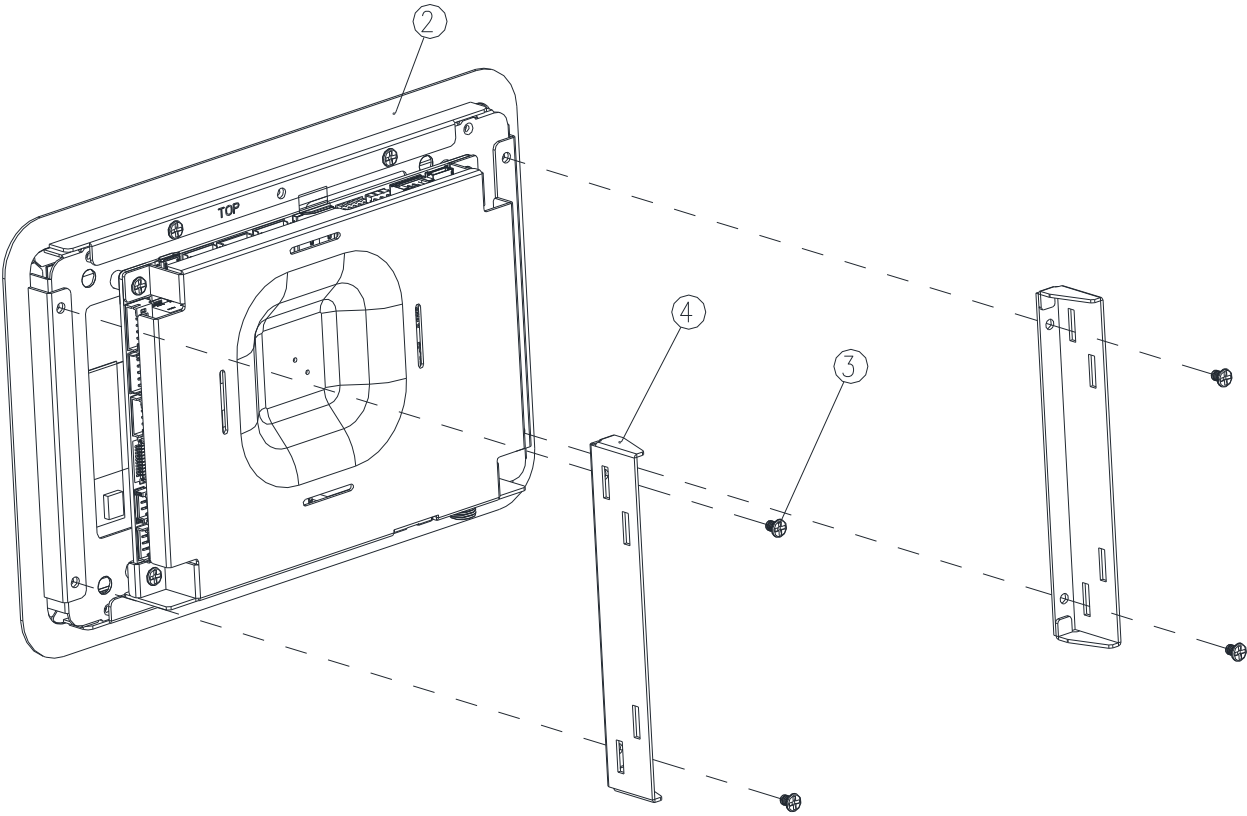

Step3. Insert and fasten 4 screws to secure Bracket R/L.


4	Bracket R/L	2
3	Screw	4
2	Front Bracket	1
Item	Part Name	Quantity

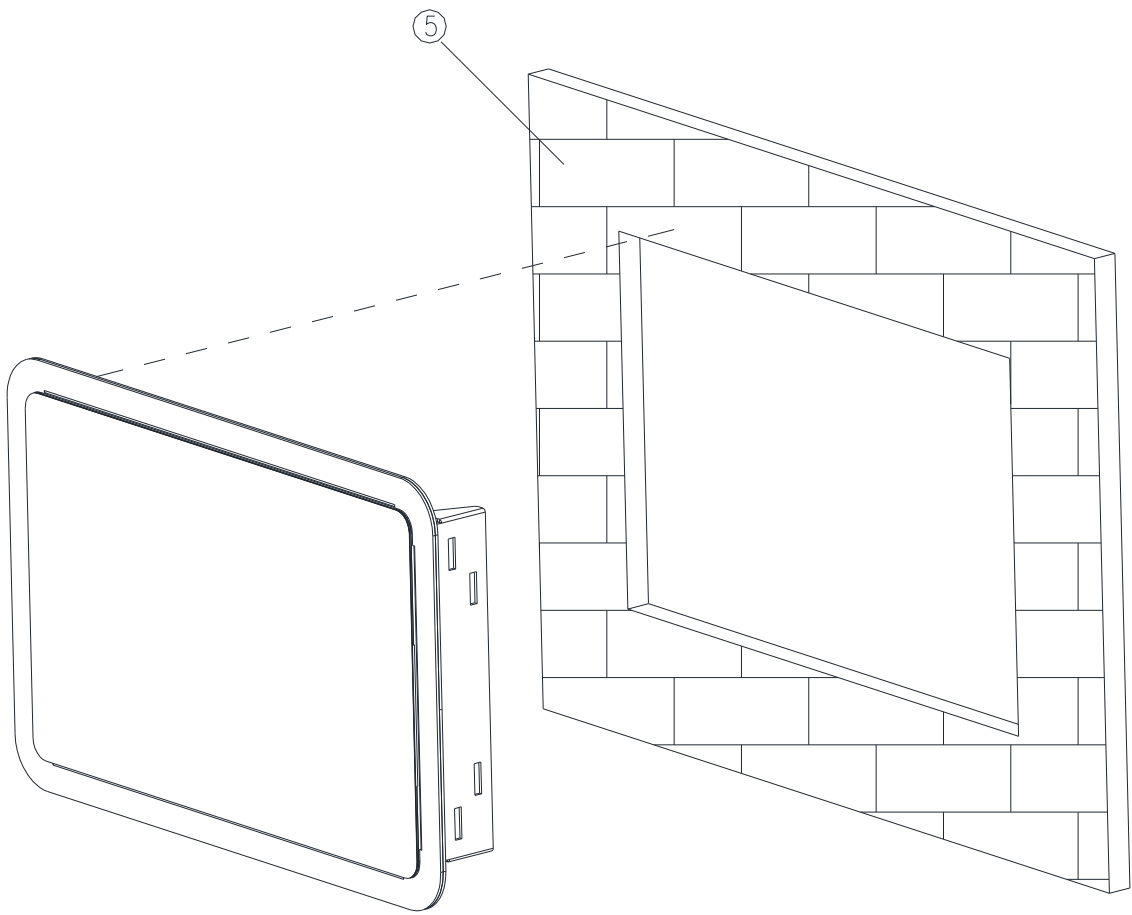

(Outside of the wall)


Step4. Insert OFT-07WR1 Open frame into the wall.

5	Wall	1
Item	Part Name	Quantity

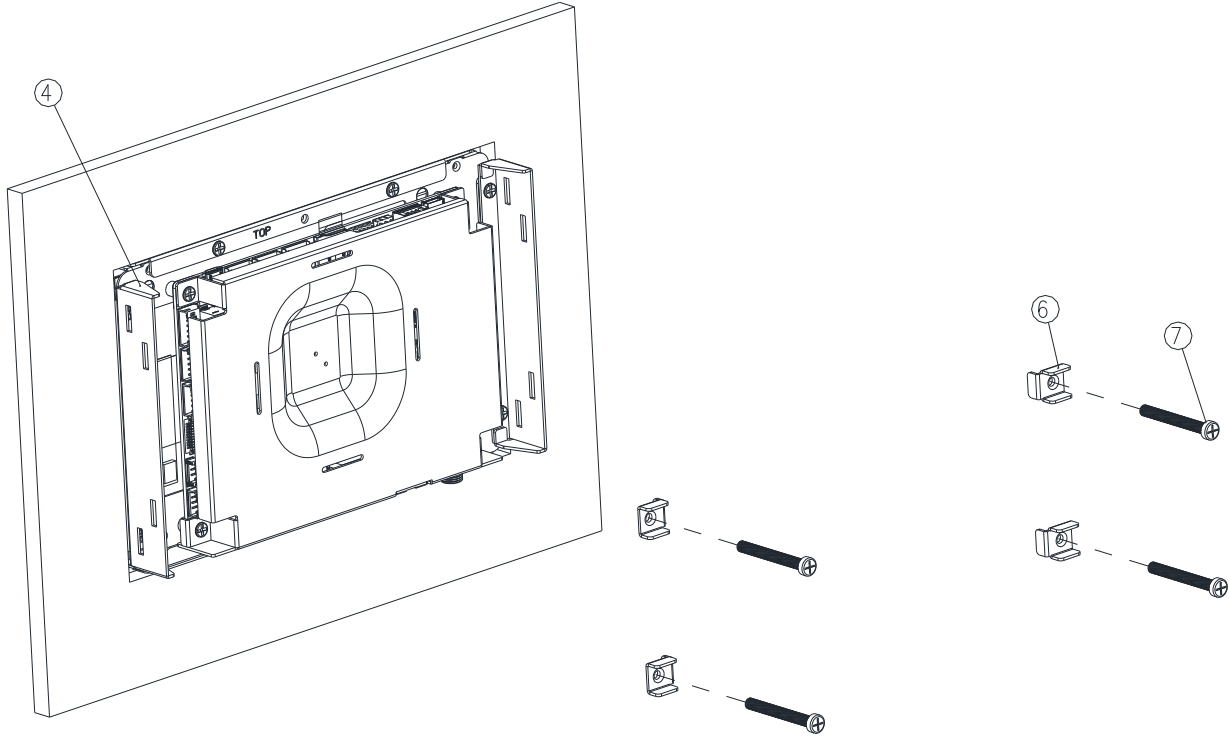


(Inside of the wall)

Step5. Fasten 4 screws to secure Panel mount brackets and insert it into Bracket R/L.




4-1

7	Panel mount Screw	4
6	Panel mount Bracket	4
4	Bracket R/L	2
Item	Part Name	Quantity

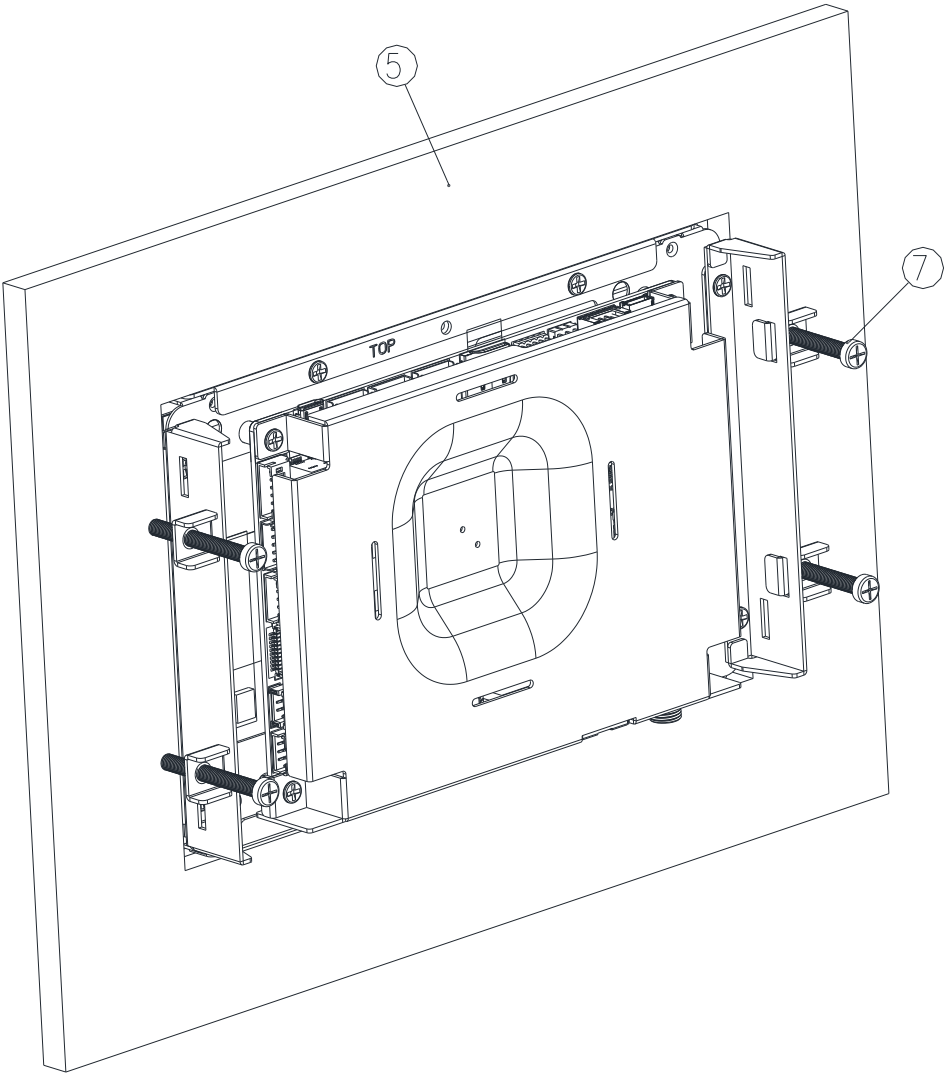

Step6. Insert and fasten 4 Panel mount screws to secure the module.

7	Panel mount Screw	4
5	Wall	1
Item	Part Name	Quantity

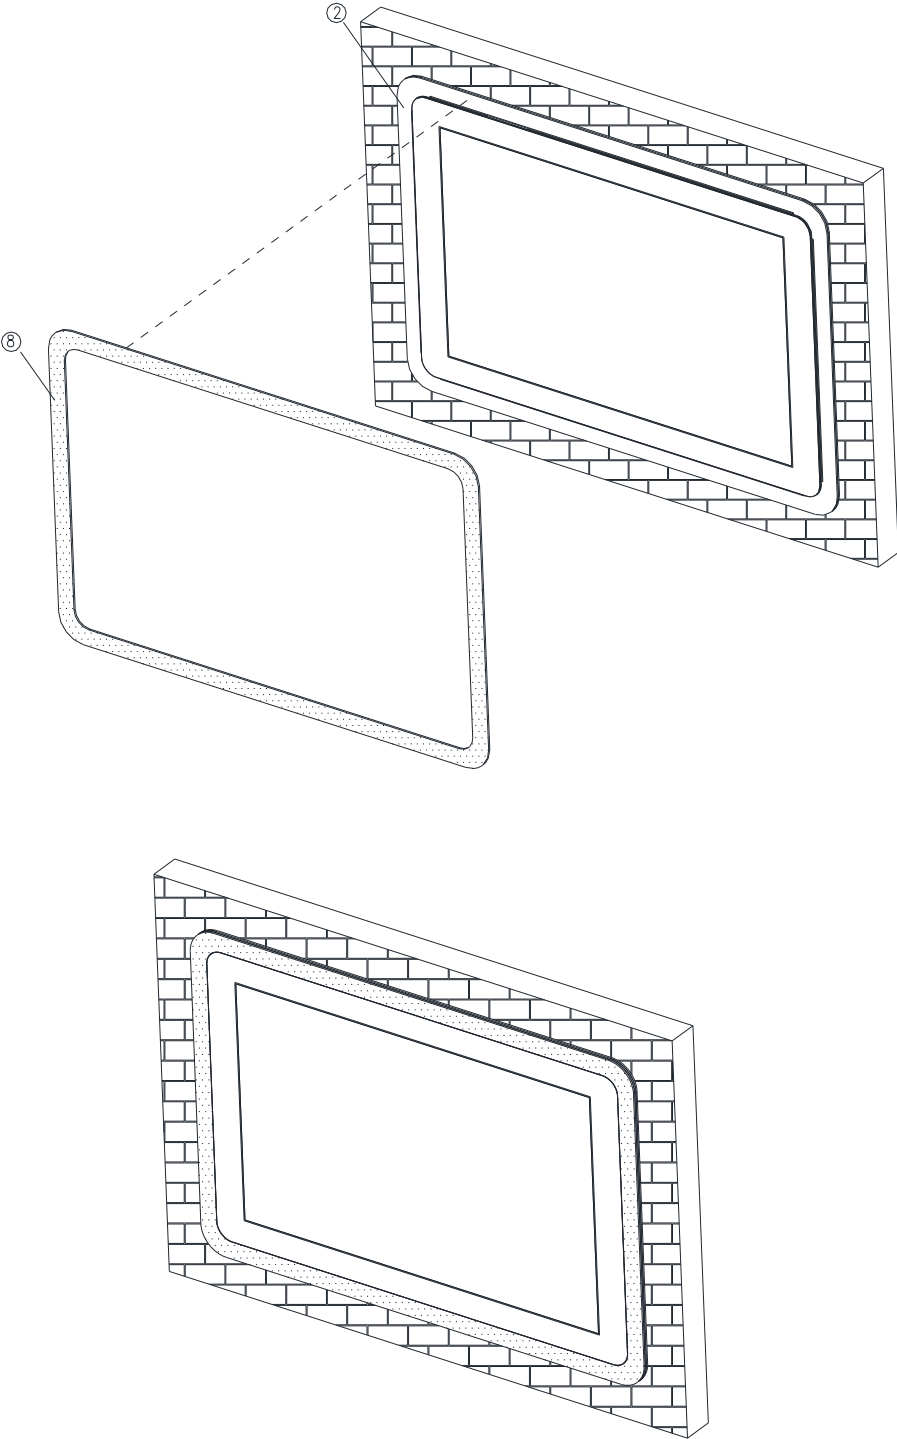

Step7. Paste the Decoration Plate on the Front bracket to complete installation.

8	Decoration Plate	1
2	Front Bracket	1
Item	Part Name	Quantity

2. Hardware Configuration

For advanced information, please refer to:


- 1- Motherboard included in this manual.



Note: If you need more information, please visit our website:

<http://www.avalue.com.tw>

2.2 Motherboard Overviews

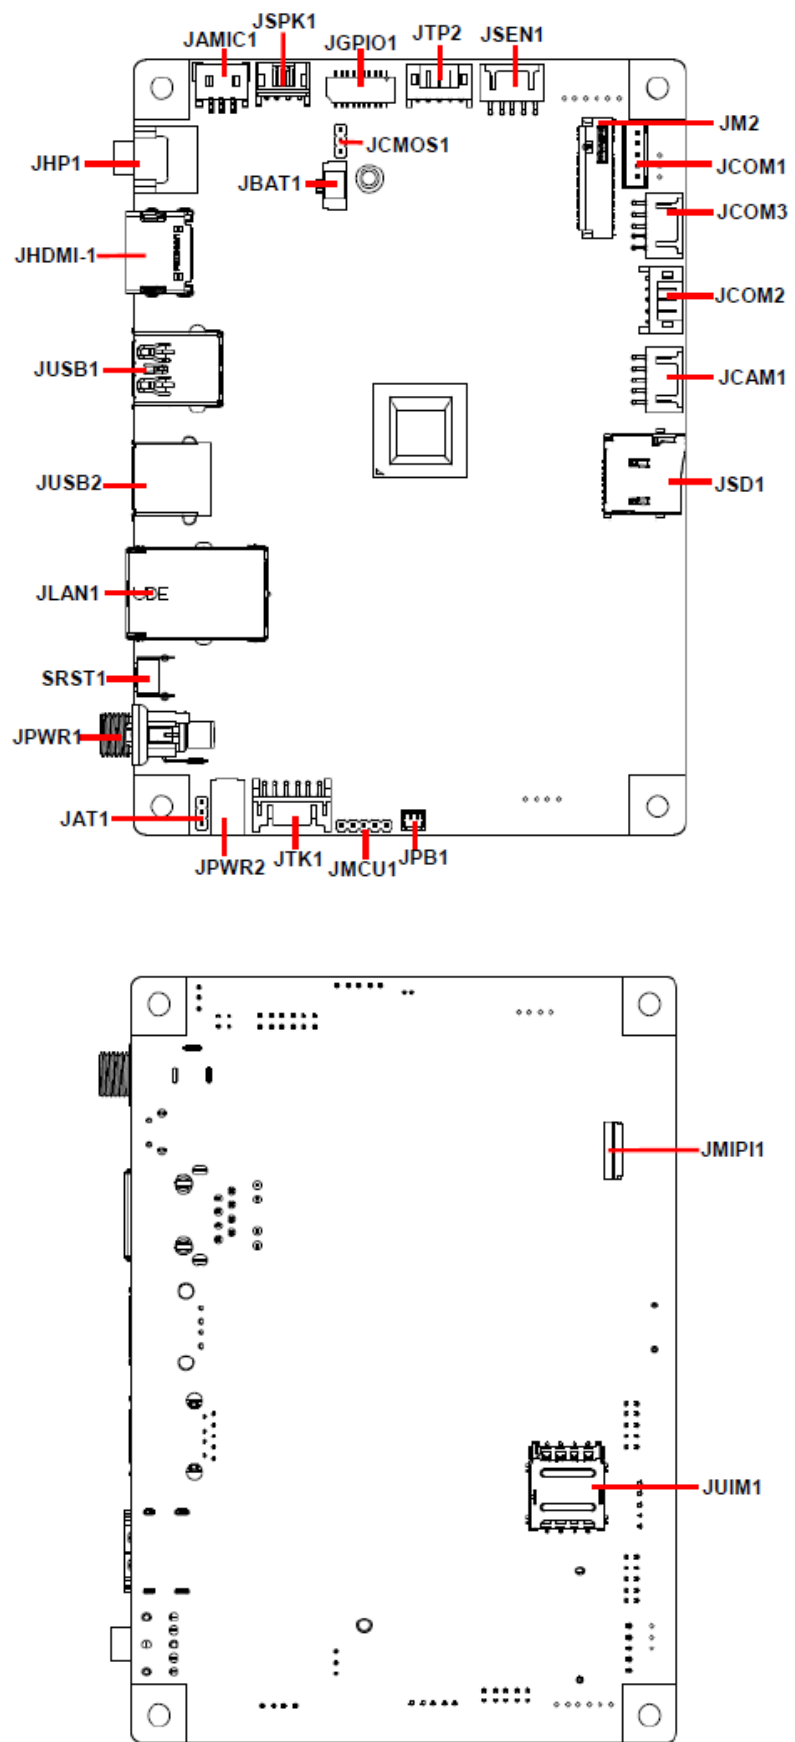

2.3 Motherboard Connector list

Jumpers

Label	Function	Note
JCMOS1	Clear CMOS	3 x 1 header, pitch 2.00 mm
JAT1	AT/ATX Input power select	3 x 1 header, pitch 2.00 mm

Connectors

Label	Function	Note
JHP1	Audio line-out connector	
JHDMI-1	HDMI connector	
JUSB1	USB 3.0 connector	
JUSB2	USB 2.0 connector	
JLAN1	RJ-45 Ethernet connector	
SRST1	Reset button	
JPWR1	Power connector	
JPWR2	DC Power-in connector	2 x 2 wafer, pitch 2.00 mm
JTK1	Touch Key Button	6 x 2 wafer, pitch 2.00 mm
JMCU1	MCU connector	5 x 1 header, pitch 2.00 mm
JPB1	Power button	2 x 1 wafer, pitch 1.25 mm
JSPK1	Speaker interface	4 x 1 wafer, pitch 2.00 mm
JAMIC1	A-MIC connector	3 x 1 wafer, pitch 2.00 mm
JGPIO1	General purpose I/O connector	10 x 2 wafer, pitch 1.00 mm
JTP2	USB Touch connector	5 x 1 wafer, pitch 2.00 mm
JSEN1	I2C Sensor	5 x 2 wafer, pitch 2.00 mm
JM2	M.2 B-Key socket	
JCOM1	Console Debug connector	5 x 1 wafer, pitch 2.00 mm
JCOM2	RS-232 connector	5 x 1 wafer, pitch 2.00 mm
JCOM3	RS-232 & RS-485 connector	5 x 2 wafer, pitch 2.00 mm
JCAM1	USB Camera & DMIC connector	5 x 2 wafer, pitch 2.00 mm
JSD1	Micro SD card slot	
JBAT1	RTC battery connector	2 x 1 wafer, pitch 1.25 mm
JMIPI1	MIPI Port	40 x 1 FPC, pitch 0.30 mm
JUIM1	Micro SIM Card socket	


***RTC Battery**

Warning: Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions."

Attention: Risque d'explosion si la batterie est remplacée par un type incorrect. Jetez les piles usagées selon les instructions.


2.4 Motherboard Jumpers & Connectors settings

2.4.1 Clear CMOS (JCMOS1)

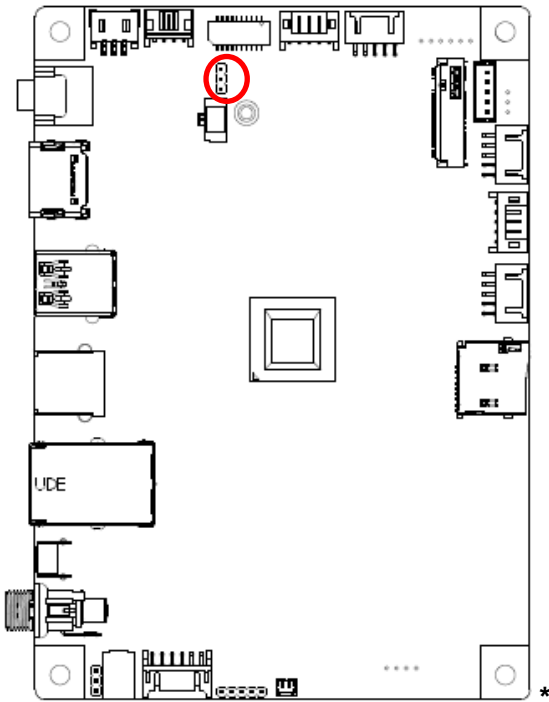


Default


Protect*



Clear CMOS




2.4.2 AT/ATX Input power select (JAT1)

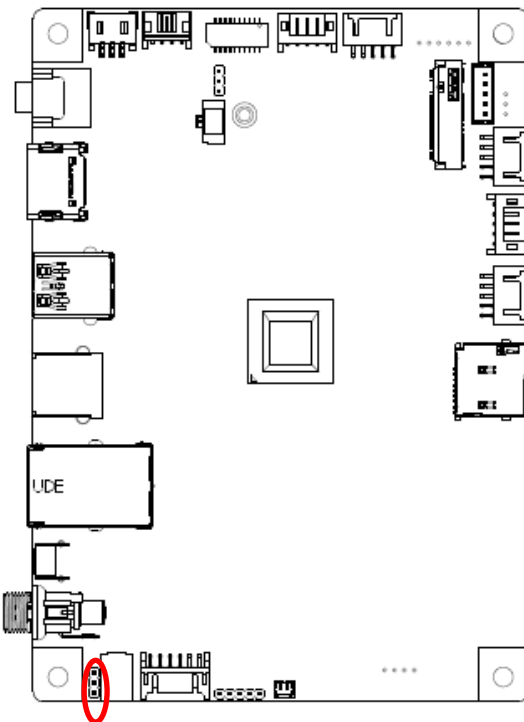


* Default


AT*



ATX





2.4.3 DC Power-in connector (JPWR2)

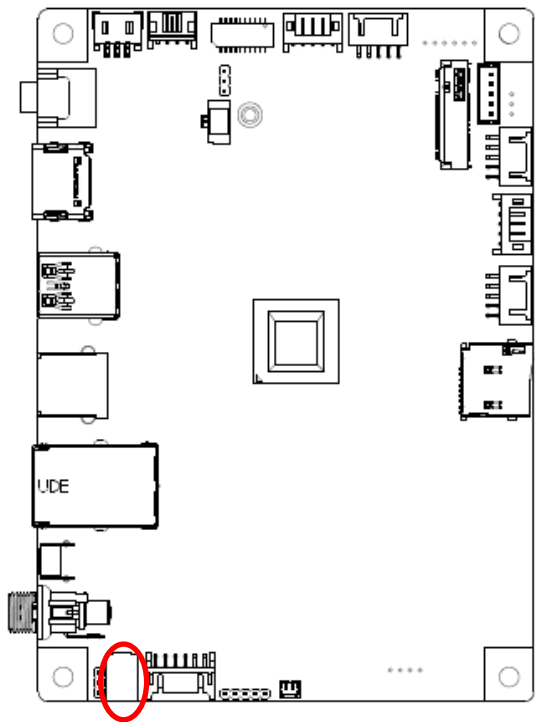



Signal	PIN	PIN	Signal
DC-IN	1	3	DC-IN
GND	2	4	GND

2.4.4 Touch Key Button (JTK1)

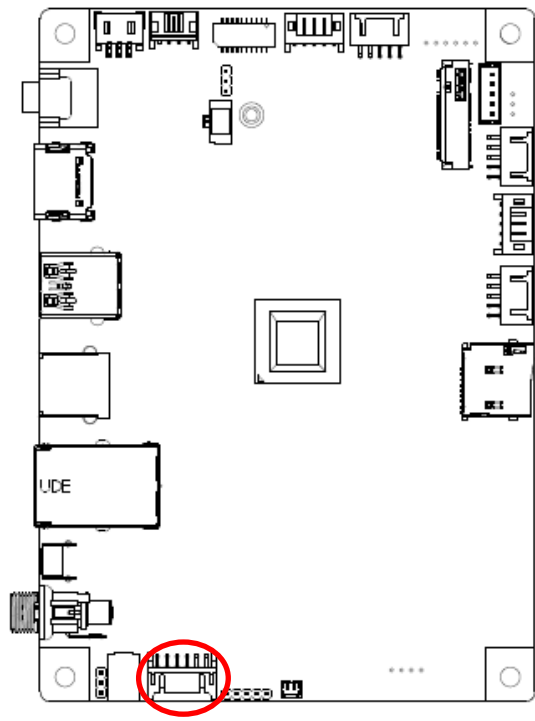


Signal	PIN	PIN	Signal
+5V	1	2	GND
KEY_RST-BTN	3	4	KEY_BU1
KEY_VOL-UP	5	6	KEY_VOL-DN
KEY_PWR-BTN	7	8	KEY_BR-UP
KEY_BR-DN	9	10	KEY_BU7
LED_GRN	11	12	LED_ORG

2.4.5 MCU connector (JMCU1)

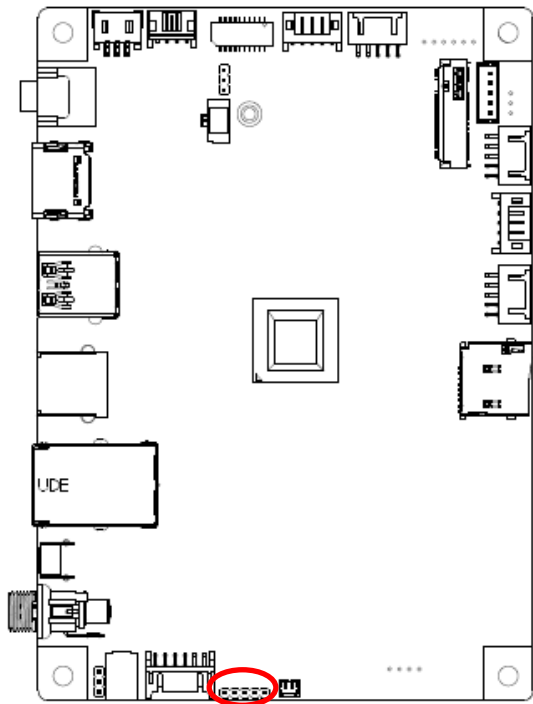



Signal	PIN
+5V	1
PIC_MCLR	2
PIC_ICSPCLK	3
PIC_ICSPDAT	4
GND	5

2.4.6 Power button (JPB1)

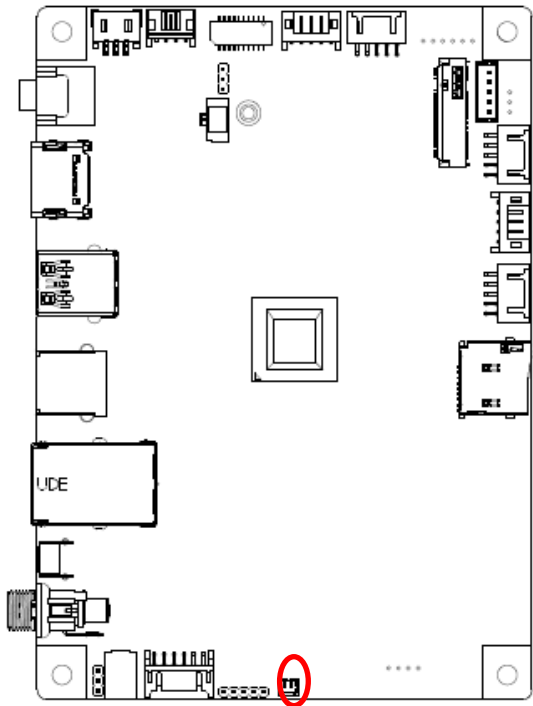



Signal	PIN
+5V	1
KEY_PWR-BTN	2

2.4.7 Speaker interface (JSPK1)

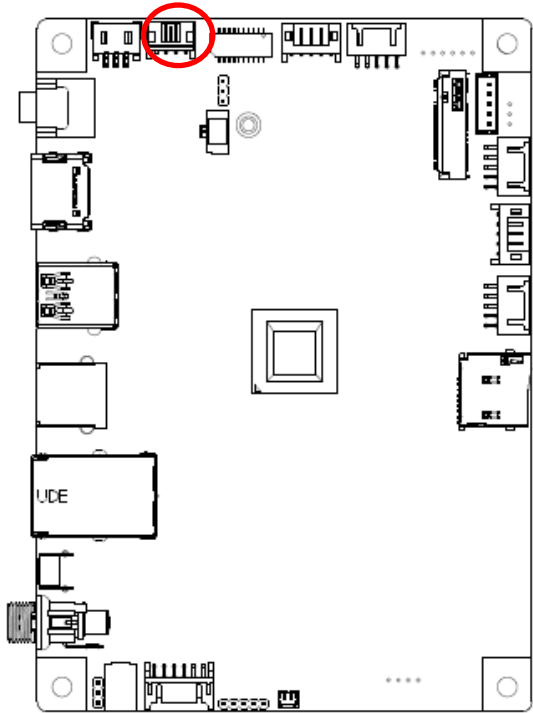



Signal	PIN
SPK_L+	1
SPK_L-	2
SPK_R+	3
SPK_R-	4

2.4.8 A-MIC connector (JAMIC1)

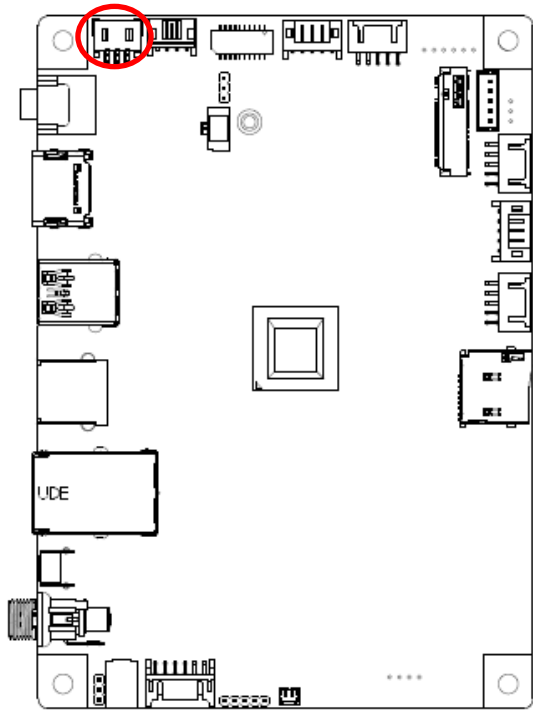



Signal	PIN
MIC_JD	1
MIC_IN	2
GND	3

2.4.9 General purpose I/O connector (JGPIO1)

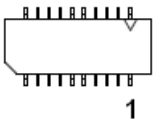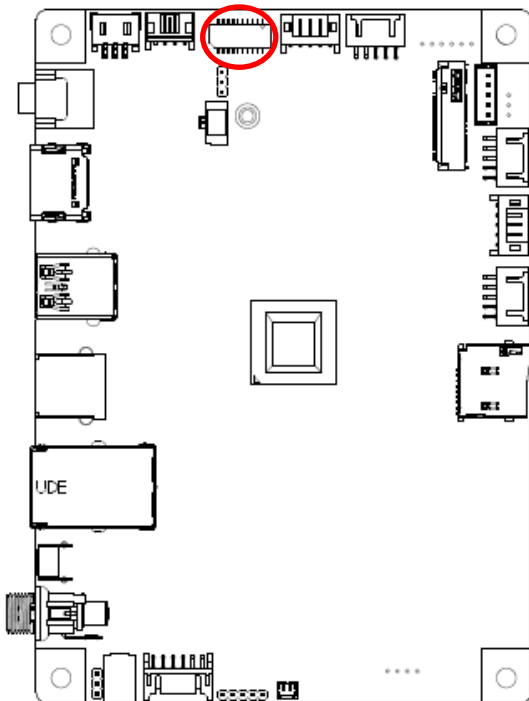



Signal	PIN	PIN	Signal
DIO_GP00	1	2	DIO_GP10
DIO_GP01	3	4	DIO_GP11
DIO_GP02	5	6	DIO_GP12
DIO_GP03	7	8	DIO_GP13
DIO_GP04	9	10	DIO_GP14
DIO_GP05	11	12	DIO_GP15
DIO_GP06	13	14	DIO_GP16
DIO_GP07	15	16	DIO_GP17
DIO_SDA_3.3	17	18	DIO_SCL_3.3
+5V	19	20	GND

2.4.10 USB Touch connector (JTP2)

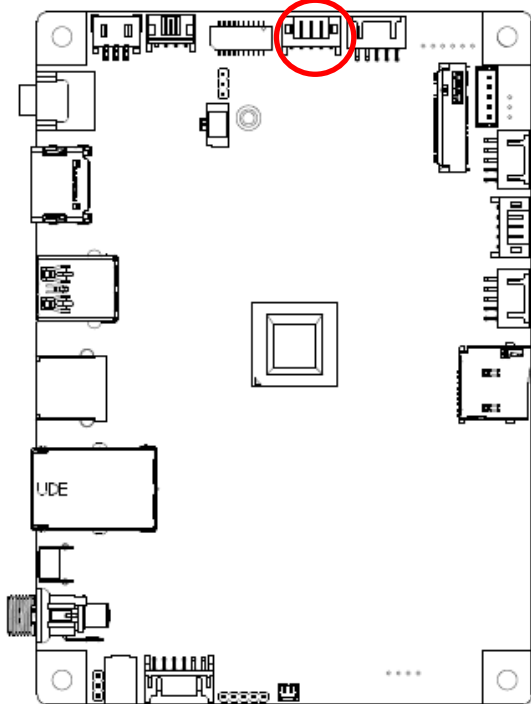


Signal	PIN
+5V	1
USB_JTP2_N	2
USB_JTP2_P	3
GND	4
GND	5

2.4.11 I2C Sensor (JSEN1)

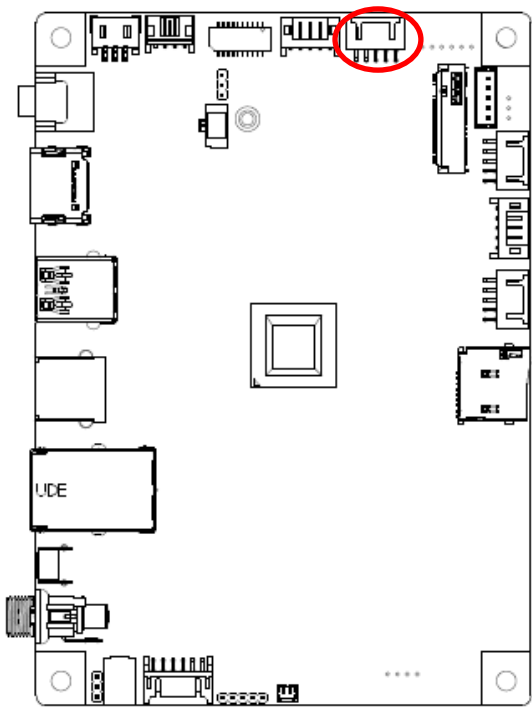



Signal	PIN	PIN	Signal
+3.3V	1	2	+3.3V
SEN1_SCL	3	4	SEN2_SCL
SEN1_SDA	5	6	SEN2_SDA
SEN1_IRQP#	7	8	SEN2_IRQP#
GND	9	10	GND

2.4.12 Console Debug connector (JCOM1)

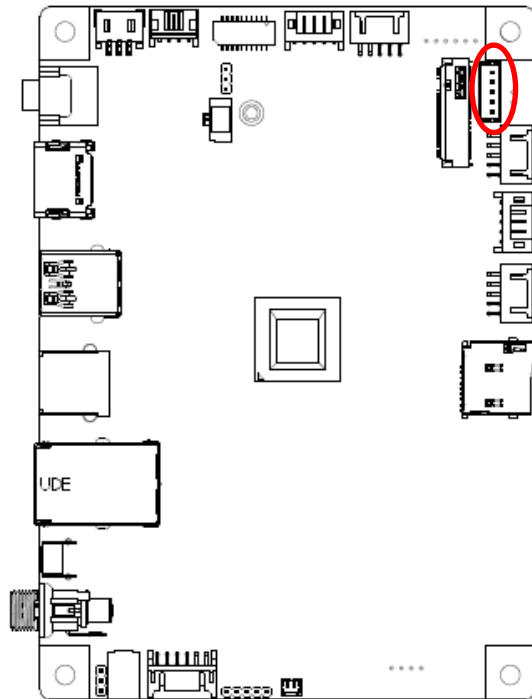



Signal	PIN
COM1_TX_232	1
COM1_RX_232	2
GND	3
COM1_AX7_P4_RX_232	4
COM1_AX7_P4_TX_232	5

2.4.13 RS-232 connector (JCOM2)

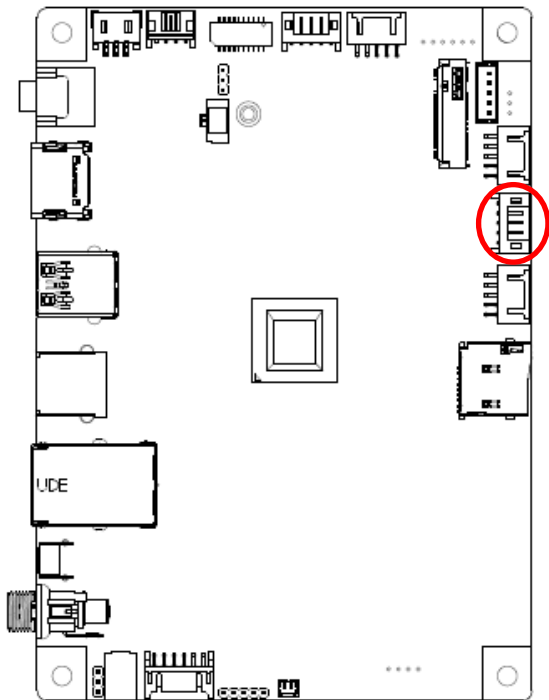

Signal	PIN
GND	5
COM2_CTS_232	4
COM2_RTS_232	3
COM2_RX_232	2
COM2_TX_232	1

2.4.14 RS-232 & RS-485 connector (JCOM3)

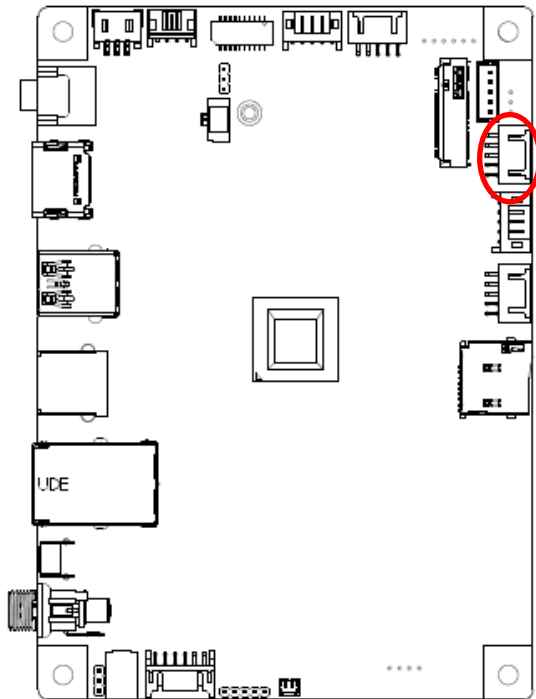


RS232

Signal	PIN	PIN	Signal
GND	9	10	GND
232_CTS_2	7	8	NC
232_RTS_2	5	6	NC
232_RXD_2	3	4	NC
232_TXD_2	1	2	+5V

RS485



Signal	PIN	PIN	Signal
GND	9	10	GND
NC	7	8	Data+
NC	5	6	Data-
NC	3	4	NC
NC	1	2	+5V

2.4.15 USB Camera & DMIC connector (JCAM1)

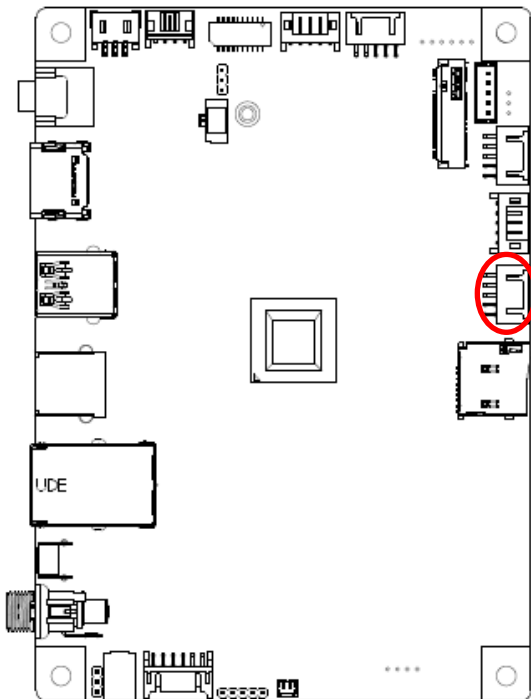


Signal	PIN	PIN	Signal
GND	9	10	GND
GND	7	8	GND
DMIC_DATA	5	6	USB_JCAM1_P
DMIC_CLK	3	4	USB_JCAM1_N
+1.8V	1	2	+5V

2.4.16 RTC battery connector (JBAT1)

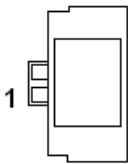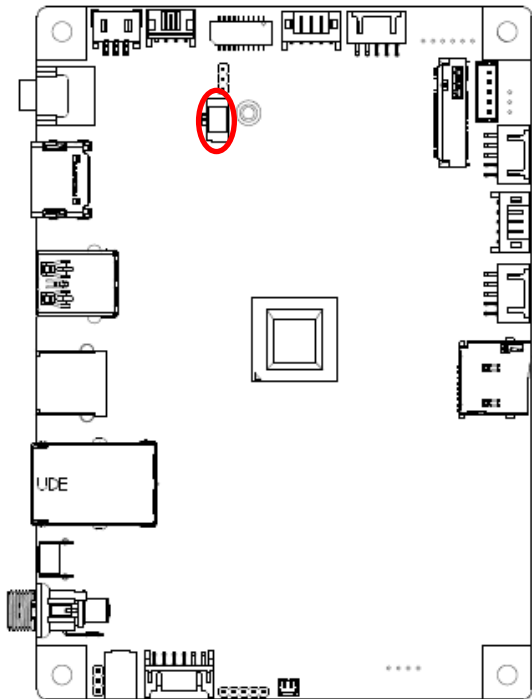

Signal	PIN
GND	2
+3V	1

2.4.17 MIPI Port (JMIPI1)

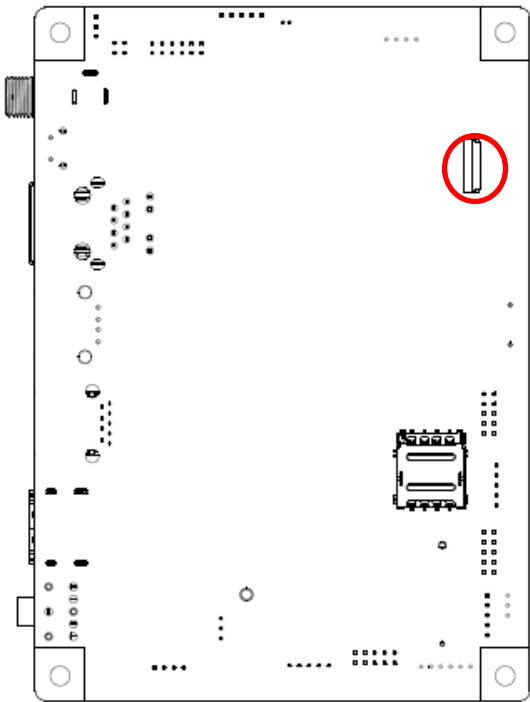

Signal	PIN
+V17_LED+	31
+V17_LED+	30
NC	29
+V17_LED-	28
+V17_LED-	27
+V17_LED-	26
NC	25
GND	24
MDSI_DN3	23
MDSI_DN0	22
MDSI_DP3	21
MDSI_DP0	20
GND	19
GND	18
MDSI_CLKN	17
MDSI_DN1	16
MDSI_CLKP	15
MDSI_DP1	14
GND	13
GND	12
MDSI_DN2	11
NC	10
MDSI_DP2	9
NC	8
NC	7
MDSI_RST	6
+V1.8_MIPI	5
+V1.8_MIPI	4
+V3.3_MIPI	3
+V3.3_MIPI	2
+V3.3_MIPI	1

