

ECS-SKLUC

Intel® Celeron® Processor 3855U/3955U Fanless Box PC

Quick Reference Guide

1st Ed –23 November 2017

Copyright Notice

Copyright © 2017 Avalue Technology Inc., ALL RIGHTS RESERVED.

FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

Copyright Notice

Copyright © 2017 Avalue Technology Inc., ALL RIGHTS RESERVED.

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

Disclaimer

Avalue Technology Inc. reserves the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. Avalue Technology assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright, or masks work rights to these products, and makes no representations or warranties that these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Avalue Technology Inc. makes no representation or warranty that such application will be suitable for the specified use without further testing or modification.

CONTENT

1. Getting Started	4
1.1 Safety Precautions	4
1.2 Packing List	4
1.3 System Specifications	5
1.4 System Overview.....	8
1.4.1 Front/Rear View	8
1.5 System Dimensions.....	10
2. Hardware Configuration.....	11
2.1 ECS-SKLUC connector mapping.....	12
2.1.1 Serial Port 1/3/4/5/6 connector (COM1/3/4/5/6)	12
2.1.2 Serial Port 2 connector (COM2).....	12
2.1.3 VGA connector (VGA).....	13
2.2 Installing Hard Disk (ECS-SKLUC).....	14

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

- 1 x ECS-SKLUC System
- Other major components include the followings:
 - 1 x Adapter
 - 1 x Power Cord



If any of the above items is damaged or missing, contact your retailer.

1.3 System Specifications

System	
Mother Board	ACP-SKLUC
CPU	- Intel® Celeron® Processor 3855U (2M Cache, 1.60 GHz) - Intel® Celeron® Processor 3955U (2M Cache, 2.00 GHz)
Memory	1 x 260-pin DDR4 2133MHz SO-DIMM supports up to 16GB
Adapter	60W Adapter (DC in 12V@5A)
Operating System	Win 7, Win 10, Linux
Expansion	1 x full size Mini PCI-e support mSATA 1 x full size Mini PCI-e support Wi-Fi module and SIM Card
Storage	
Hard Disk Drive	1 x 2.5" SATA HDD/SSD
External I/O	
Serial Port	5 x COM (RS-232) 1 x COM (RS-232/RS-485)
USB Port	4 x USB 2.0 2 x USB 3.0
Video Port	1 x VGA: 2560 x 1080@ 60 Hz 1 x HDMI: 3840 x 2160@ 30Hz, 2560 x 1080@ 30Hz, 1920 x 1200 @ 30 Hz
Audio Port	1 x Line-out
LAN Port	2 x Intel I211AT GbE controller
Wireless LAN Antenna	1 x SMA connector (Optional)
Switch	1 x Power on/off Switch
Indicator Light	1 x Power LED 1 x HDD LED
Mechanical	
Power Type	Single power ATX Support S0, S3, S4, S5
Power Connector Type	DC in +12V
Dimension	180mm x 126mm x 75.5mm
Weight	TBC
Color	Black
Fanless	Yes
Mounting	VESA/ Din rail (optional)
Reliability	
EMI Test	CE/FCC Class A design compatible
Safety	UL/CB design compatible

Vibration Test	• <u>Sine Vibration test (Non-operation)</u> • Reference IEC60068-2-6 Testing procedures • Test Fc : Vibration sinusoidal 1 Test Acceleration : 2G 2 Test frequency : 5 ~ 500 Hz 3 Sweep : 1 Oct/ per one minute. (logarithmic) 4 Test Axis : X,Y and Z axis 5 Test time :30 min. each axis 6 System condition : Non-Operating mode 7. Storage : SSD or mSATA • <u>Package Vibration Test</u> • Reference IEC60068-2-64 Testing procedures • Test Fh : Vibration boardband random Test 1. PSD: 0.026G²/Hz , 2.16 Grms 2. Non-operation mode 3. Test Frequency : 5-500Hz 4. Test Axis : X,Y and Z axis 5. 30 min. per each axis • <u>Random Vibration Operation</u> • Reference IEC60068-2-64 Testing procedures • Test Fh : Vibration boardband random Test 1. PSD: 0.00454G²/Hz, 1.5 Grms 2. Operation mode 3. Test Frequency : 5-500Hz 4. Test Axis : X,Y and Z axis 5. 30 minutes per each axis 6. IEC 60068-2-64 Test: Fh 7. Storage : SSD or mSATA
Mechanical Shock Test	• <u>Bump Test</u> • Reference IEC 60068-2-29 Testing procedures • Test Eb : Bump Test 1. Wave form : Half Sine wave 2. Acceleration Rate : 10g for operation mode 3. Duration Time : 11ms 4. No. of Shock : Z axis 300 times 5. Test Axis: Z axis 6. Operation mode 7. Storage : SSD or mSATA


Drop Test	• <u>Packing Drop</u> • Reference ISTA 2A, Method : IEC-60068-2-32 Test:Ed Test Ea : Drop Test 1. One corner , three edges, six faces 2. ISTA 2A, IEC-60068-2-32 Test:Ed
Operating Temperature	• 0°C ~ 40°C (32°F ~ 104°F) (w/HDD), ambient w/ air flow *If the system (ECS-SKLUC) operates in extreme environment (close to 40°C), you should use the HDD that supports the ambient temperature up to 65°C at least. • 0°C ~ 45°C (32°F ~ 123°F) (w/SSD, mSATA), ambient w/ air flow
Operating Humidity	• 0% ~ 90% Relative Humidity, Non-condensing
Storage Temperature	• -20°C ~ 75°C (-22°F ~ 167°F)



Note: Specifications are subject to change without notice.

1.4 System Overview


1.4.1 Front/Rear View

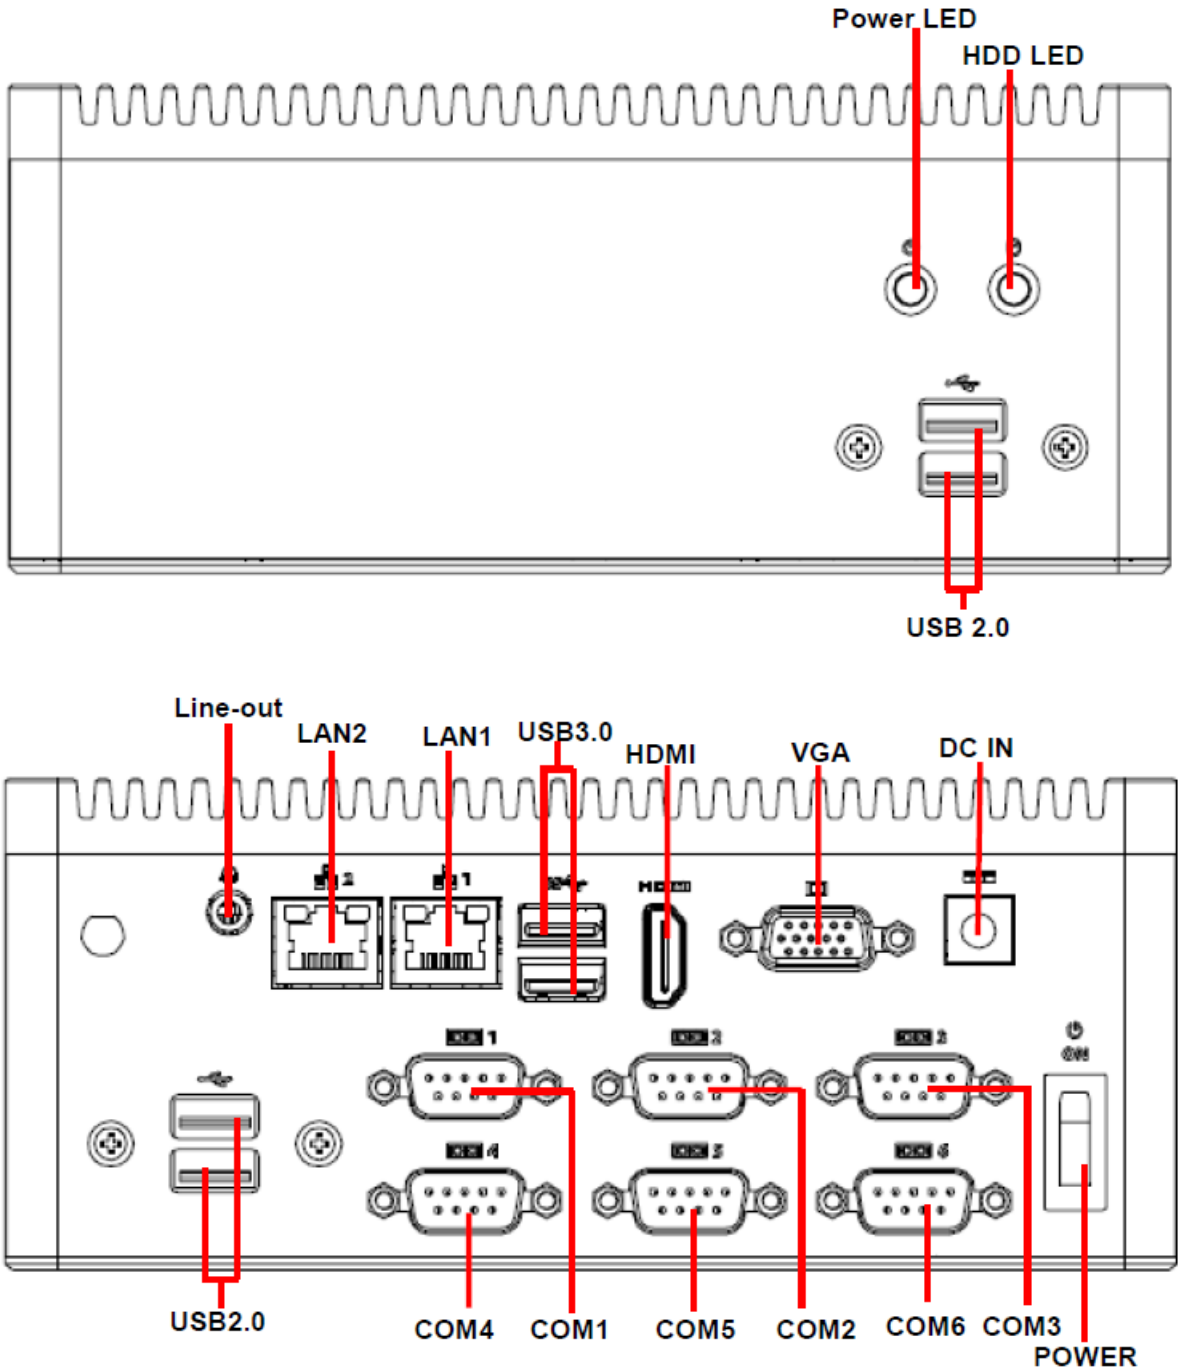

Connectors		
Label	Function	Note
POWER	Power on button	
HDD LED	HDD Indicator	

Power LED	System power indicator	
LAN1/2	RJ-45 Ethernet 1/2	
USB	4 x USB2.0 connector 2 x USB3.0 connector	
COM1~6	Serial port 1~6 connector	COM2-232/485 (Optional)
DC IN	DC power-in connector	
HDMI	HDMI connector	
LINE OUT	Line-out audio jack	
VGA	VGA connector	

1.5 System Dimensions

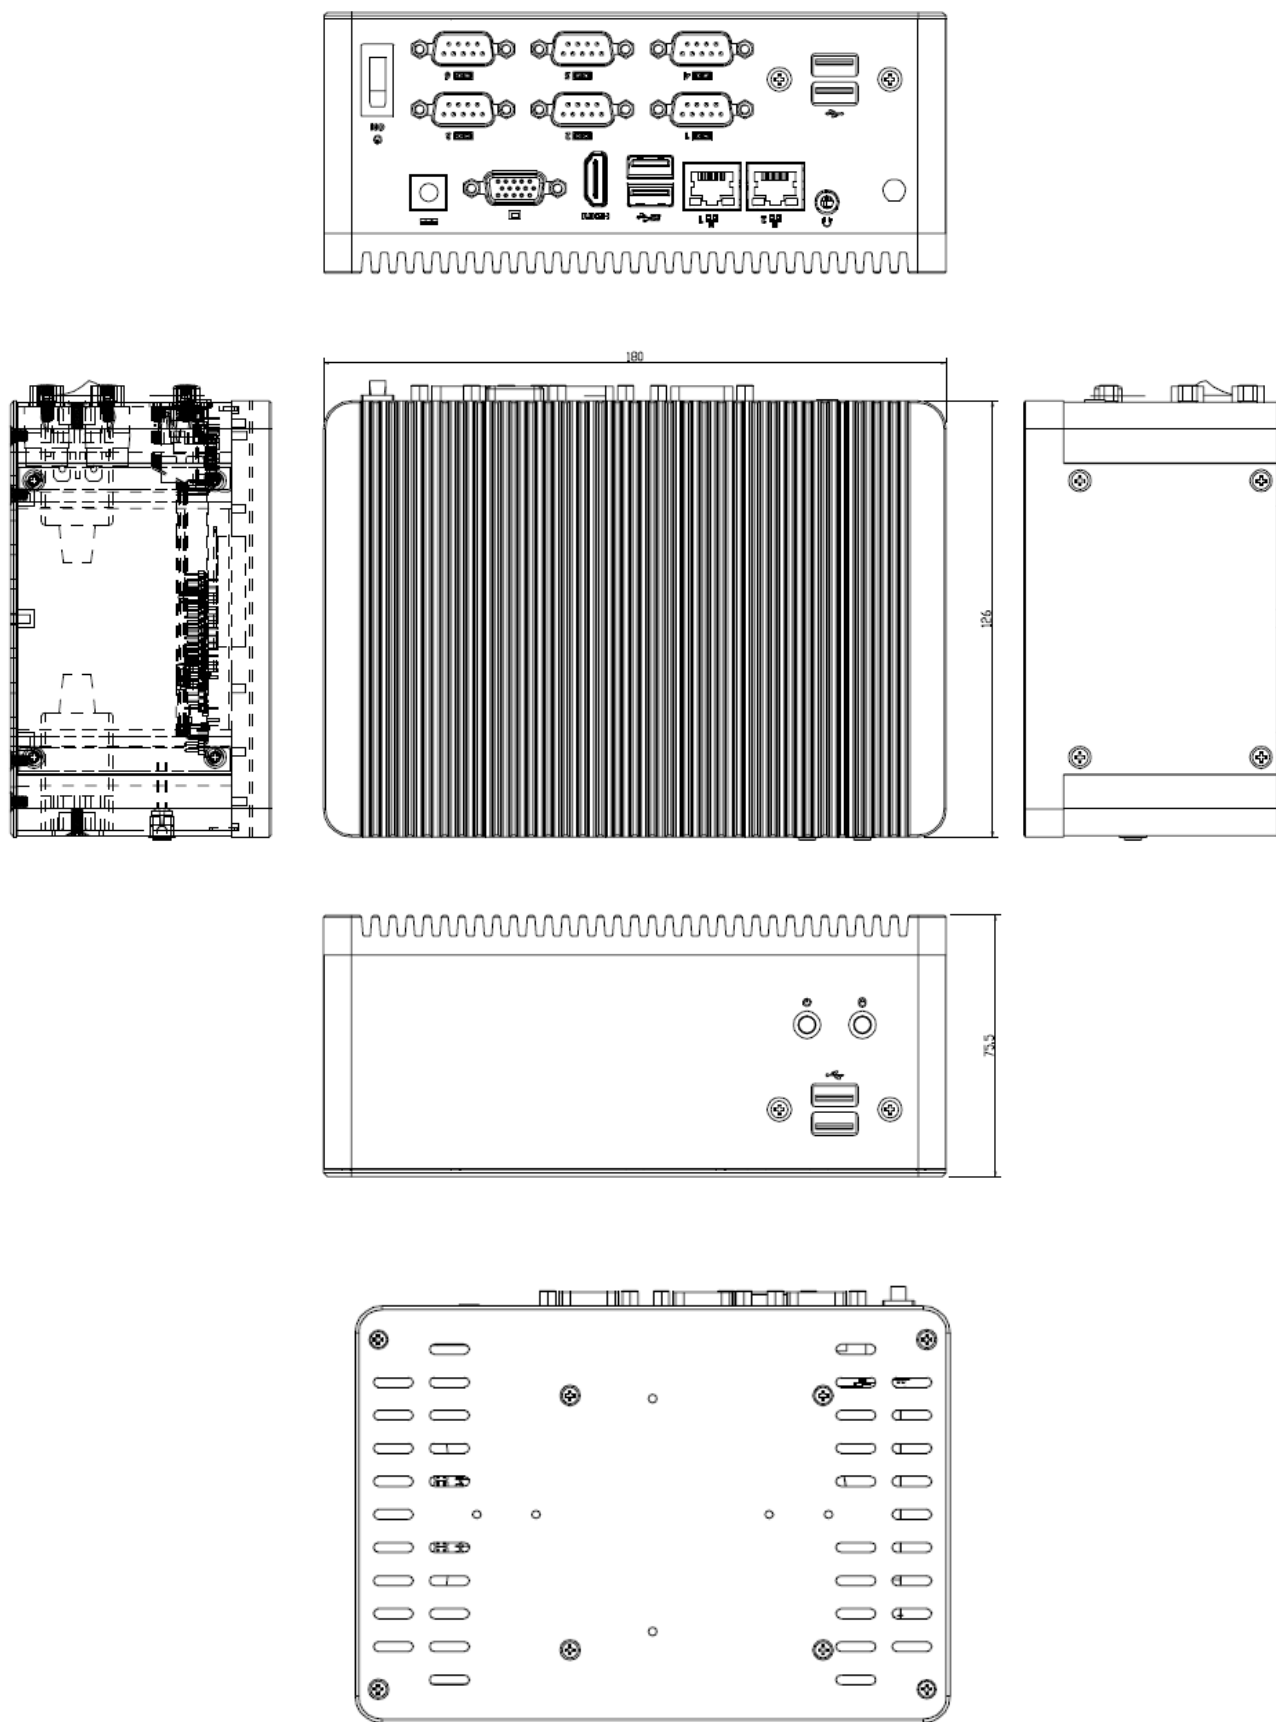

(Unit: mm)

2. Hardware Configuration

For advanced information, please refer to:

- 1- ACP-SKLUC User's Manual





Note: If you need more information, please visit our website:

<http://www.avalue.com.tw>



2.1 ECS-SKLUC connector mapping

2.1.1 Serial Port 1/3/4/5/6 connector (COM1/3/4/5/6)

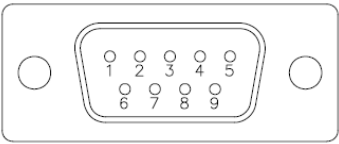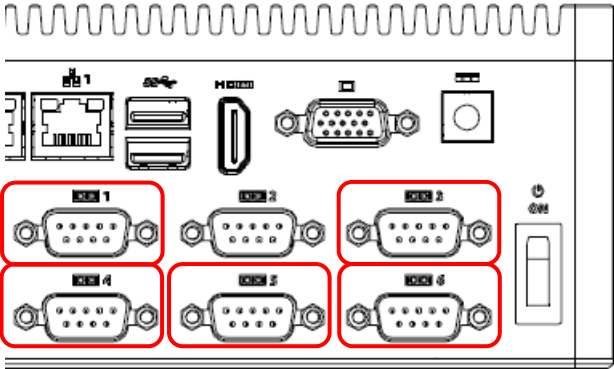

Signal	PIN	PIN	Signal
DCD#	1	6	DSR#
RXD	2	7	RTS#
TXD	3	8	CTS#
DTR#	4	9	RI#
GND	5		

2.1.2 Serial Port 2 connector (COM2)

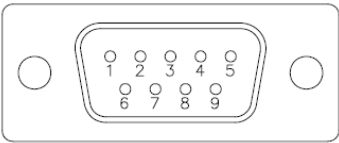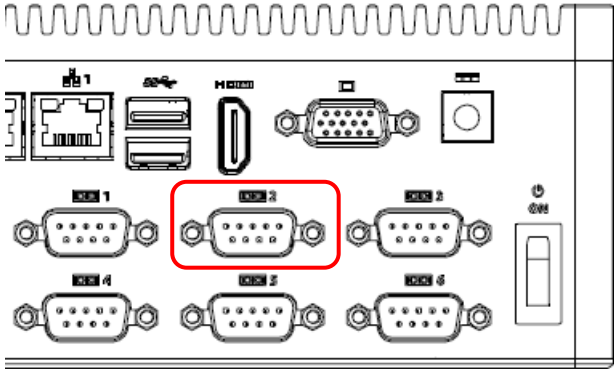

RS-232

Signal	PIN	PIN	Signal
DCD#	1	6	DSR#
RXD	2	7	RTS#
TXD	3	8	CTS#
DTR#	4	9	RI#
GND	5		



RS-485

Signal	PIN	PIN	Signal
485_Tx-	1	6	NC
485_Tx+	2	7	NC
NC	3	8	NC
NC	4	9	NC
GND	5		

RS-422


Signal	PIN		
422_Tx-	1	6	NC
422_Tx+	2	7	NC
422_Rx+	3	8	NC
422_Rx-	4	9	NC
GND	5		

2.1.3 VGA connector (VGA)

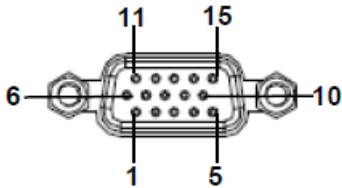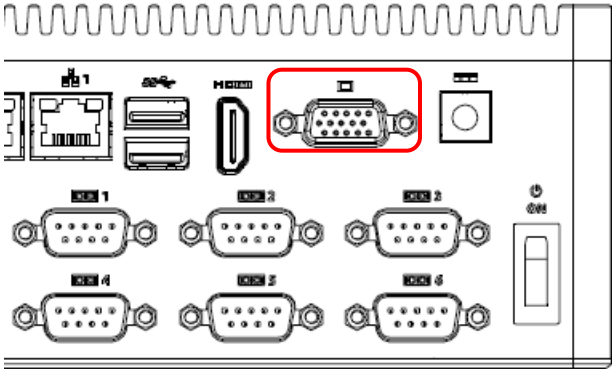

PIN	Signal	PIN	Signal	PIN	Signal
1	RED	6	GND	11	NC
2	GREEN	7	GND	12	DDCDAT
3	BLUE	8	GND	13	HSYNC
4	NC	9	+5V	14	VSYSN
5	GND	10	GND	15	DDCCLK

2.2 Installing Hard Disk (ECS-SKLUC)

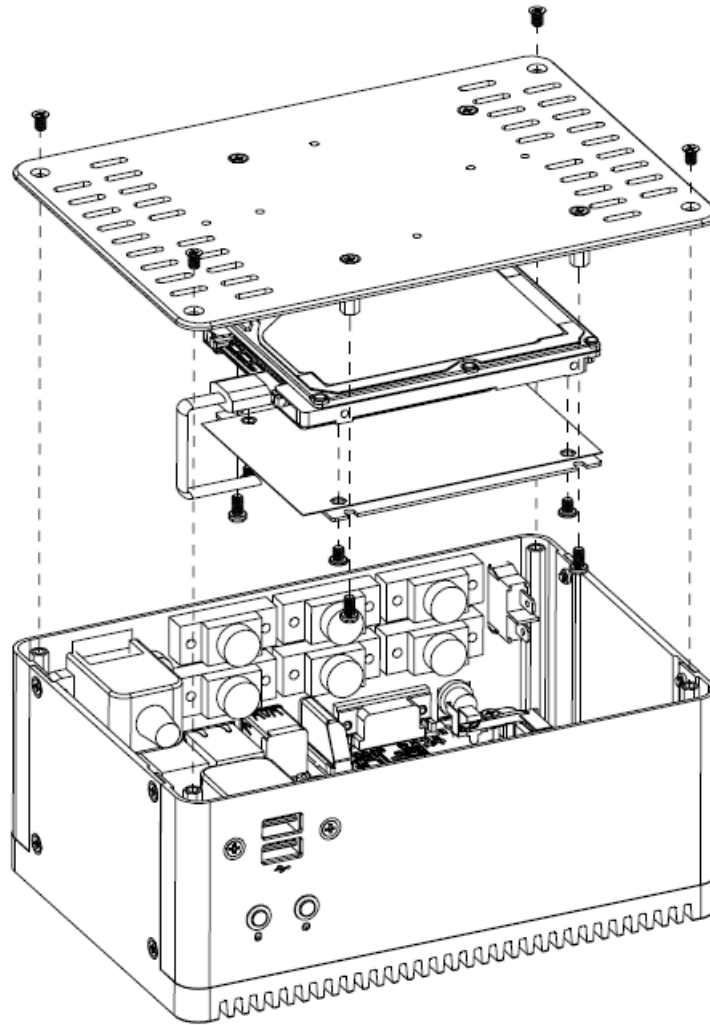

Step1. Remove 4 screws from rear side before removing back cover.

Step2. Secure HDD by means of 8 screws.

Step3. Re-assemble your system back through previous steps to complete the installation.

