

EPI-QM77

Intel Chief River QM77 EPIC Module

User's manual

2nd Ed – 9 January 2013

Copyright Notice

Copyright © 2013 Avalue Technology Inc., ALL RIGHTS RESERVED.

FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

Notice

This guide is designed for experienced users to setup the system within the shortest time. For detailed information, please always refer to the electronic user's manual.

Copyright Notice

Copyright © 2013 Avalue Technology Inc., ALL RIGHTS RESERVED.

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

Trademark Acknowledgement

Brand and product names are trademarks or registered trademarks of their respective owners.

Disclaimer

Avalue Technology Inc. reserves the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. Avalue Technology assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright, or masks work rights to these products, and makes no representations or warranties that

these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Avalue Technology Inc. makes no representation or warranty that such application will be suitable for the specified use without further testing or modification.

Life Support Policy

Avalue Technology's PRODUCTS ARE NOT FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE PRIOR WRITTEN APPROVAL OF Avalue Technology Inc.

As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into body, or (b) support or sustain life and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

<http://www.avalue.com.tw/>

If you still cannot find the answer, gather all the information or questions that apply to your problem, and with the product close at hand, call your dealer. Our dealers are well trained and ready to give you the support you need to get the most from your Avalue's products. In fact, most problems reported are minor and are able to be easily solved over the phone. In addition, free technical support is available from Avalue's engineers every business day. We are always ready to give advice on application requirements or specific information on the installation and operation of any of our products. Please do not hesitate to call or e-mail us.

Headquarters and Branch

Avalue Technology Inc.

7F, 228, Lian-cheng Road, Chung Ho City, Taipei,
Taiwan

Tel: +886-2-8226-2345

Fax: +886-2-8226-2777

Information: sales@avalue.com.tw

Service: service@avalue.com.tw

Avalue USA

Avalue Technology Inc.

9 Timber Lane, Marlboro, NJ 07746-1443

Tel: (732) 414-6500

Fax: (732) 414-6501

Information: sales@avalue-usa.com

Service: support@avalue-usa.com

BCM Advanced Research

BCM Advanced Research an Avalue Company

7 Marconi, Irvine, CA92618

Tel: +1-949-470-1888

Fax: +1-949-470-0971

Information: BCMSales@bcmcom.com

Web: www.bcmcom.com

Avalue Europe

Avalue Europe A/S

Moelledalen 22C, 3140

Aalsgaarde, Denmark

Tel: +45-7025-0310

Fax: +45-4975-5026

Information: sales.europe@avalue.com.tw

Service: service.europe@avalue.com.tw

Avalue China

Avalue Technology Inc.

Room 805, Building 9, No.99 Tianzhou Rd.,
Caohejing Development Area,
Xuhui District, Shanghai

Tel: +86-21-5169-3609

Fax: +86-21-5445-3266

Information: sales.china@avalue.com.cn

Service: service@avalue.com.tw

Avalue Japan

Avalue Technology Inc.

3F Ishiyama-Bldg, 1-6-1 Taito,
Taito-ku, Tokyo 110-0016 Japan

Tel: +81-3-5807-2321

Fax: +81-3-5807-2322

Information: sales.japan@avalue.com.tw

Service: service@avalue.com.tw

Product Warranty

Avalue warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Avalue, or which have been subject to misuse, abuse, accident or improper installation. Avalue assumes no liability under the terms of this warranty as a consequence of such events. Because of Avalue's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If any of Avalue's products is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time, and freight. Please consult your dealer for more details. If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU type and speed, Avalue's products model name, hardware & BIOS revision number, other hardware and software used, etc.) Note anything abnormal and list any on-screen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information available.
3. If your product is diagnosed as defective, obtain an RMA (return material authorization) number from your dealer. This allows us to process your good return more quickly.
4. Carefully pack the defective product, a complete Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Content

1. Getting Started	9
1.1 Safety Precautions	9
1.2 Packing List	9
1.3 Document Amendment History	10
1.4 Manual Objectives	11
1.5 System Specifications	12
1.6 Architecture Overview – Block Diagram	14
2. Hardware Configuration	15
2.1 Product Overview	16
2.2 Installation Procedure	18
2.2.1 Main Memory	19
2.3 Jumper and Connector List	21
2.4 Setting Jumpers & Connectors	23
2.4.1 Clear CMOS (JBAT1)	23
2.4.2 Serial port 1 - Ring, +5V, +12V power selector (JRI1)	23
2.4.3 AT/ATX mode selector, Front panel & LED settings (JFP1)	24
2.4.4 Touch panel connector (JTOUCH_SEL1)	24
2.4.5 Battery connector (BAT1)	25
2.4.6 Audio connector (JAUDIO1)	25
2.4.6.1 Signal Description – Audio connector (JAUDIO1)	25
2.4.7 CPU fan (CPU_FAN1)	26
2.4.8 System fan connector (SYS_FAN1)	26
2.4.9 PS/2 keyboard & mouse connector (JKB/MS1)	27
2.4.10 Serial port 1/ 2 connector (JCOM1/ JCOM2)	27
2.4.11 Serial Port 1 connector (J422/1)	28
2.4.12 HD power connector (HD_PWR1)	28
2.4.13 LCD Inverter Connector 1 (JBKL1)	29
2.4.13.1 Signal Description – LCD Inverter Connector (JBKL1)	29
2.4.14 LCD Backlight brightness adjustment (JVR1)	29
2.4.15 5VSB connector in ATX (PWR_SB1)	30
2.4.16 IrDA connector (JIR1)	30
2.4.17 LVDS connector (JLVDS1)	31
2.4.18 Touch panel connector (JTOUCH1)	32
2.4.19 General purpose I/O connector (JDIO1)	33
2.4.20 Power connector (PWR1)	33
2.4.21 SPI connector (JSPI1)	34

2.4.22	USB connector 4&5 (JUSB1_1)	34
2.5	Installing the CPU	35
2.5.1	Locate the CPU socket on the board.....	35
2.5.2	Separate CPU cooler and its base first by screw drawer	36
3.	BIOS Setup	38
3.1	Introduction.....	39
3.2	Starting Setup.....	39
3.3	Using Setup	40
3.4	Getting Help.....	41
3.5	In Case of Problems	41
3.6	BIOS setup	42
3.6.1	Main Menu	42
3.6.1.1	System Language.....	43
3.6.1.2	System Date	43
3.6.1.3	System Time.....	43
3.6.2	Advanced Menu	43
3.6.2.1	APCI Settings	44
3.6.2.2	S5 RTC Wake Settings.....	44
3.6.2.3	Trusted Computing	45
3.6.2.4	CPU Configuration.....	46
3.6.2.5	SATA Configuration	47
3.6.2.6	Thermal Configuration	47
3.6.2.7	Intel® Rapid Start Technology Configuration	49
3.6.2.8	Intel TXT (LT) Configuration	49
3.6.2.9	PCH-FW Configuration	50
3.6.2.10	Intel® Anti-Theft Technology Configuration	51
3.6.2.11	AMT Configuration.....	52
3.6.2.12	USB Configuration	53
3.6.2.13	Super IO Configuration	54
3.6.2.13.1	Serial Port 1 Configuration	55
3.6.2.13.2	Serial Port 2 Configuration	56
3.6.2.14	Hardware Monitor	57
3.6.2.15	Intel® Smart Connect Technology	58
3.6.2.16	CPU PPM Configuration.....	58
3.6.3	Chipset.....	59
3.6.3.1	PCH-IO Configuration	60
3.6.3.1.1	PCI Express Configuration	61
3.6.3.1.1.1	PCI Express Root Port 1	61
3.6.3.1.1.2	PCI Express Root Port 6	62
3.6.3.1.1.3	PCI Express Root Port 7(82574 Lan)	63

EPI-QM77

3.6.3.1.2	USB Configuration	64
3.6.3.1.3	PCH Azalia Configuration	65
3.6.3.2	System Agent (SA) Configuration	65
3.6.3.2.1	Memory Configuration	66
3.6.3.2.2	GT – Power Management Control	67
3.6.3.3	Graphics Configuration	67
3.6.4	Boot.....	70
3.6.4.1	CSM parameters.....	71
3.6.5	Security	72
3.6.6	Save and exit	72
4.	Drivers Installation.....	74
4.1	Install Chipset Driver (For Intel QM77)	75
4.2	Install ME Driver (For Intel QM77)	76
4.3	Install USB 3.0 Driver (For Intel QM77)	78
4.4	Install Display Driver (For Intel QM77).....	79
4.5	Install Audio Driver (For Realtek ALC892).....	81
4.6	Install Ethernet Driver (For Intel 82579LM and 82574L).....	82
5.	Mechanical Drawing	84

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

Before you begin installing your single board, please make sure that the following materials have been shipped:

- 1 x Quick Installation Guide for EPI-QM77
- 1 x Cable set contains the followings:
 - 1 x COM port cable (20-pin to 2 x DB9(M))
 - 1 x Serial ATA cable (7-pin, standard)
 - 1 x Serial ATA power cable



If any of the above items is damaged or missing, contact your retailer.

1.3 Document Amendment History

Revision	Date	Comment
1 st	August 2012	Initial Release
2 nd	January 2013	Increase Installing the CPU

1.4 Manual Objectives

This manual describes in detail the Avalue Technology EPI-QM77 Single Board.

We have tried to include as much information as possible but we have not duplicated information that is provided in the standard IBM Technical References, unless it proved to be necessary to aid in the understanding of this board.

We strongly recommend that you study this manual carefully before attempting to interface with EPI-QM77 series or change the standard configurations. Whilst all the necessary information is available in this manual we would recommend that unless you are confident, you contact your supplier for guidance.

Please be aware that it is possible to create configurations within the CMOS RAM that make booting impossible. If this should happen, clear the CMOS settings, (see the description of the Jumper Settings for details).

If you have any suggestions or find any errors concerning this manual and want to inform us of these, please contact our Customer Service department with the relevant details.


1.5 System Specifications

System	
CPU	Intel Ivy Bridge Processor (35W~45W CPU)
BIOS	AMI 8MB SPI BIOS
System Chipset	Intel Panther Point-Mbl (QM77)
I/O Chip	Nuvoton NTC6776F
System Memory	One 204-pin DDR3 SODIMM socket, supports up to 8GB DDR3 1066/1333 SDRAM
SSD	1 x mSATA (from mini-PCIe slot)
Watchdog Timer	Reset: 1 sec.~65535 sec./min. and 1 sec. or 1 min./step
H/W Status Monitor	Monitoring system temperature, voltage. Auto trotting control when CPU overheats
Expansion	1 x mini PCIe (Support mSATA)
I/O	
MIO	2 x SATA III, 1 x RS232, 1 x RS232/422/485, LPC
USB	2 x USB 2.0 ports (pin header), 4 x USB 3.0 (edge Connectors)
IrDA	Nuvoton NTC6776F (share with COM2)
DIO	8-bit GPI, 8-bit GPO
Display	
Chipset	Intel QM77
Display Memory	Share system memory up to 512MB
Resolution	DVI mode: 1920 x 1200 at 60Hz
	LCD/Simultaneous mode : 18 or 24 bits/pixel; Pixel clock 25-112 MHz
	HDMI mode : 1920 x 1200 at 60Hz
Multiple Display	DVI+LVDS+HDMI or CRT+LVDS+HDMI
LCD Interface	Dual channel 18/24-bit LVDS
TV-out	N/A
DVI	One DVI port co-lay with VGA
Built-in Touch Screen (Optional)	
Chipset	PenMount 6000
Touch Screen Interface	With 9-pin 2.0mm box header (can be selected to support 4/5/8-wire touch screen)
Audio	
AC97 Codec	Realtek ALC892 supports 7.1-CH Audio

Audio Interface	Min In, Line in, Line out (Pin Head 6X2)
Ethernet	
LAN Chip	1 x Intel 82574L
	1 x Intel 82579 Gigabit PHY
Ethernet Interface	1000 Base-Tx Gigabit Ethernet compatible
Mechanical & Environmental	
Power Requirement	+12V~19V, reserve power connector for SATA
ACPI	Single power ATX Support S0, S3, S4, S5
	ACPI 1.0b and 2.0 Compliant
Power Type	AT/ATX
Operating Temp.	32 to 140°F (0 to 60°C)
Operating Humidity	0%~90% relative humidity, non-condensing
Size (L x W)	165mm x 115mm
Weight	0.4lbs(0.18kg)


1.6 Architecture Overview – Block Diagram


The following block diagram shows the architecture and main components of EPI-QM77.

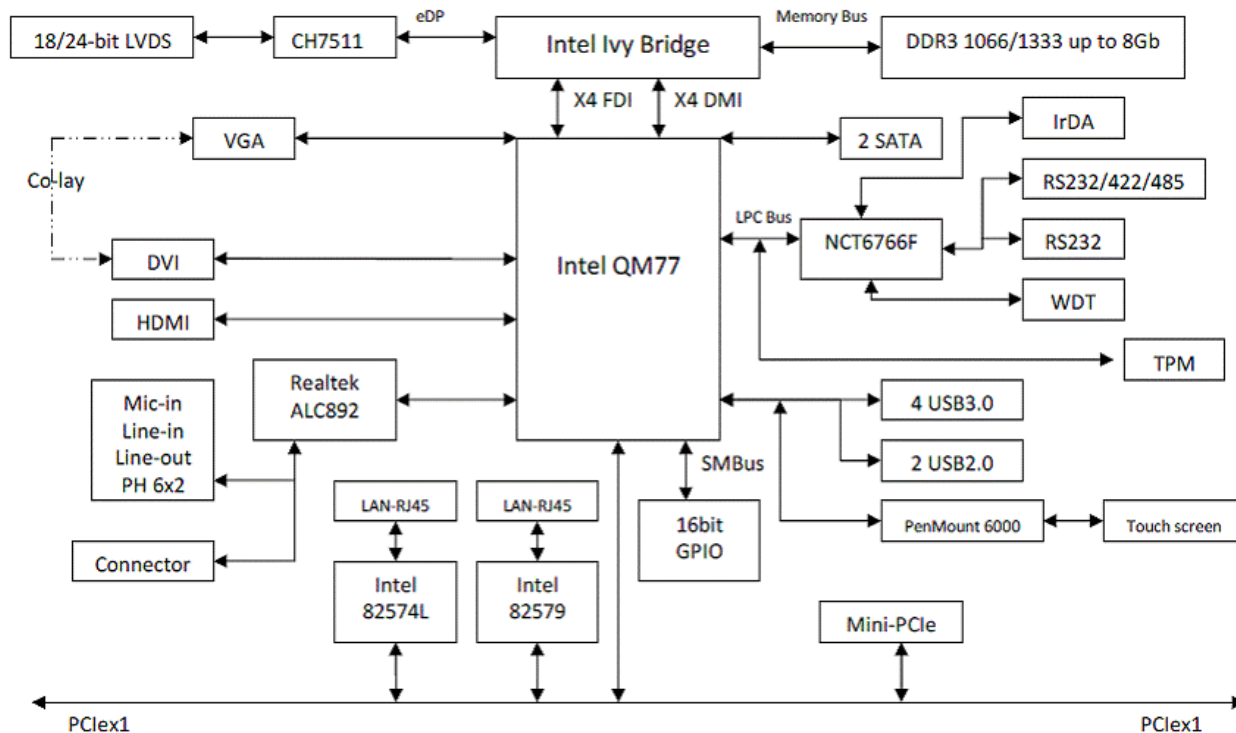

2. Hardware Configuration

2.1 Product Overview

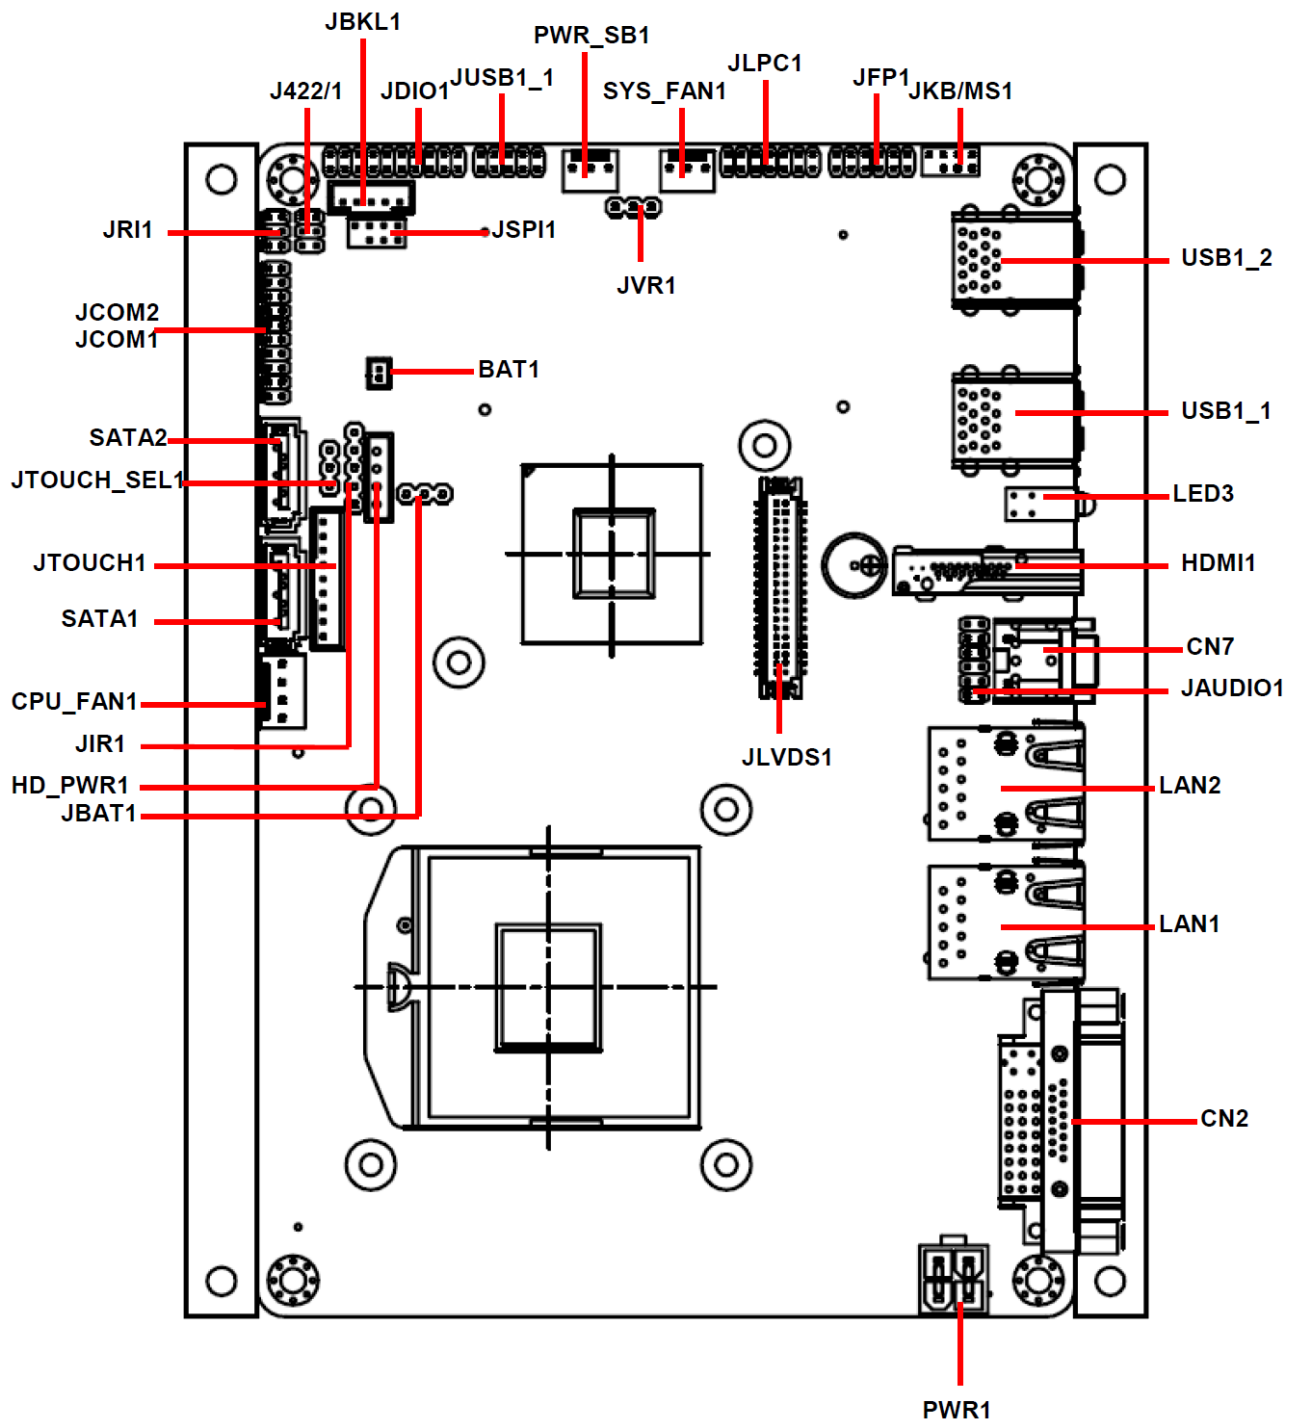

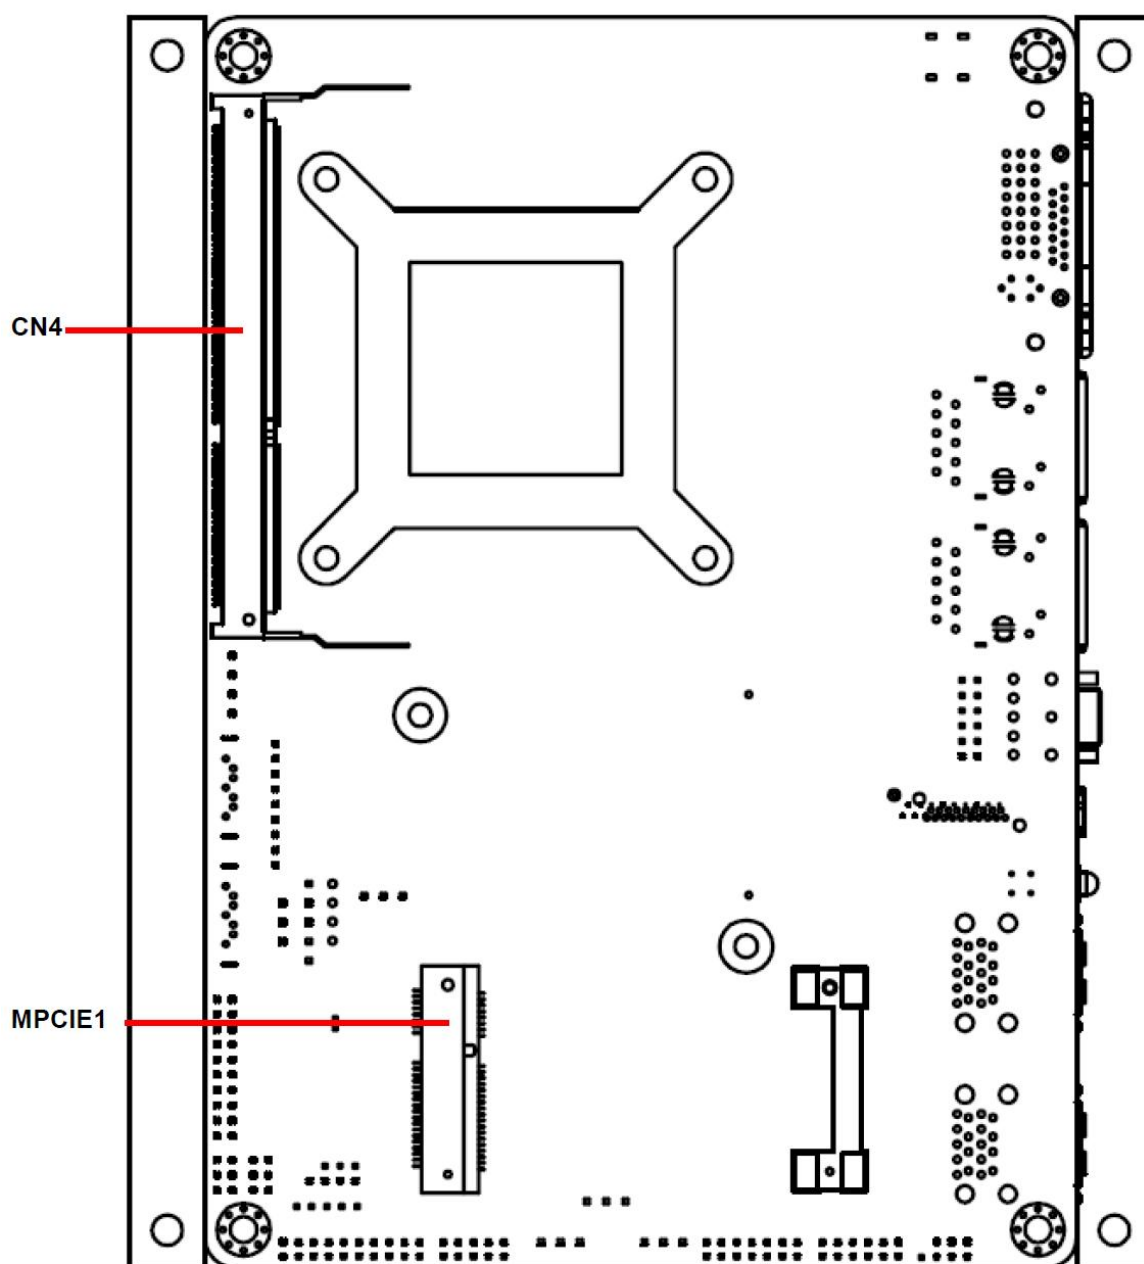

2.2 Installation Procedure

This chapter explains you the instructions of how to setup your system.


1. Turn off the power supply.
2. Insert the SODIMM module (be careful with the orientation).
3. Insert all external cables for hard disk, floppy, keyboard, mouse, USB etc. except for flat panel. A CRT monitor must be connected in order to change CMOS settings to support flat panel.
4. Connect power supply to the board via the ATXPWR.
5. Turn on the power.
6. Enter the BIOS setup by pressing the delete key during boot up. Use the “LOAD BIOS DEFAULTS” feature. The ***Integrated Peripheral Setup*** and the ***Standard CMOS Setup*** Window must be entered and configured correctly to match the particular system configuration.
7. If TFT panel display is to be utilized, make sure the panel voltage is correctly set before connecting the display cable and turning on the power.



Note: Make sure the heat sink and the CPU top surface are in total contact to avoid CPU overheating problem that would cause the system to hang or unstable

2.2.1 Main Memory

EPI-QM77 provides one 204-pin DDR3 SODIMM socket, supports up to 8GB DDR3 1066/1333 SDRAM.


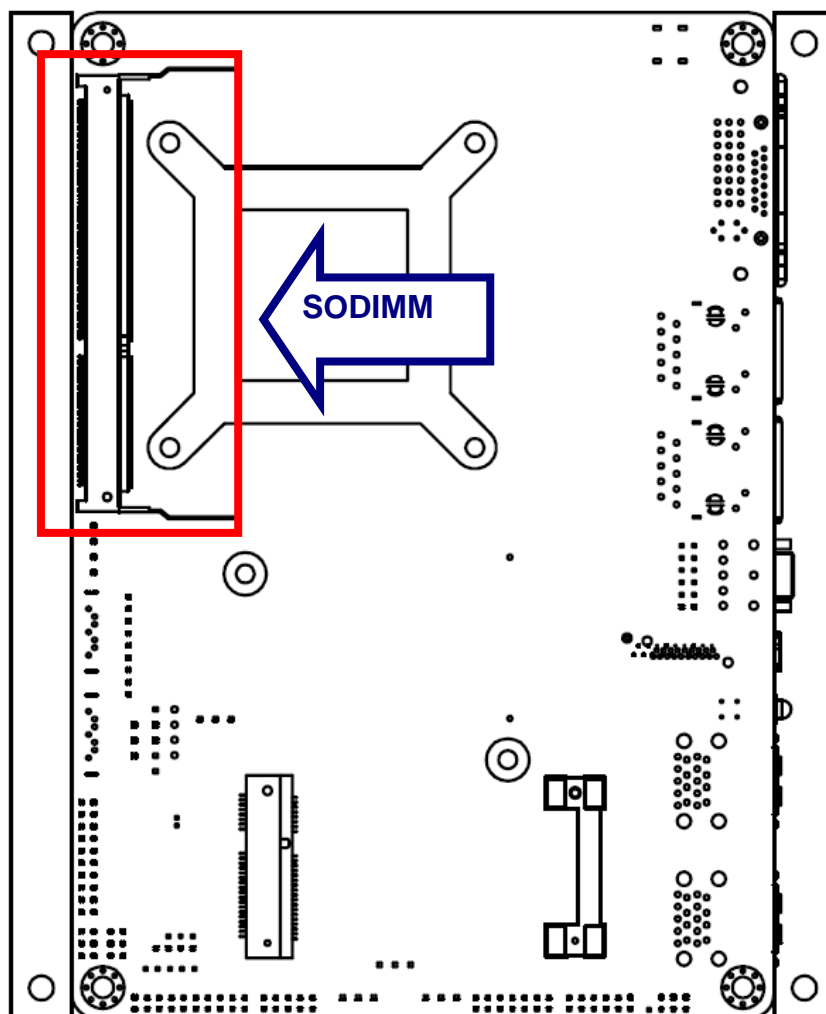


(Rear side)



Make sure to unplug the power supply before adding or removing SODIMMs or other system components. Failure to do so may cause severe damage to both the board and the components.

- Locate the SODIMM socket on the board.
- Hold two edges of the SODIMM module carefully. Keep away of touching its connectors.
- Align the notch key on the module with the rib on the slot.
- Firmly press the modules into the socket automatically snaps into the mounting notch. Do not force the SODIMM module in with extra force as the SODIMM module only fit in one direction.

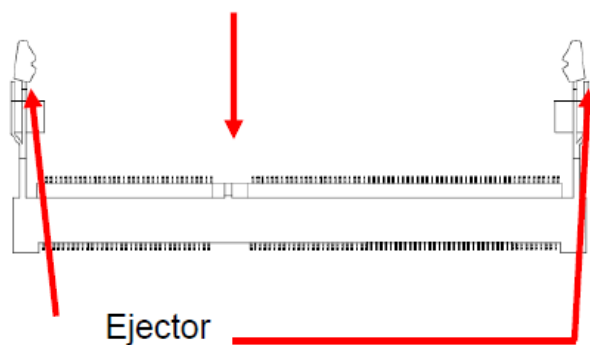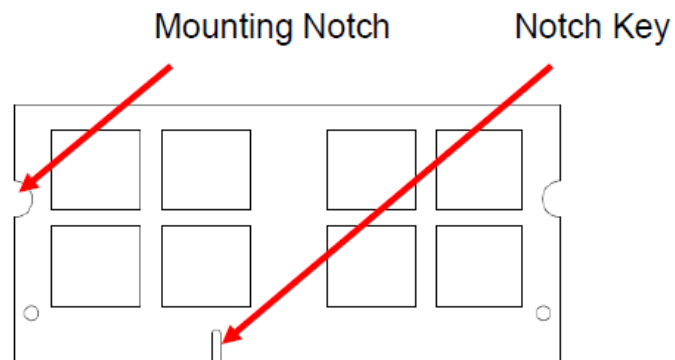

204-pin DDR3 SODIMM

- To remove the SODIMM modules, push the two ejector tabs on the slot outward simultaneously, and then pull out the SODIMM module.




Note:

- (1) Please do not change any DDR3 SDRAM parameter in BIOS setup to increase your system's performance without acquiring technical information in advance.
- (2) Static electricity can damage the electronic components of the computer or optional boards. Before starting these procedures, ensure that you are discharged of static electricity by touching a grounded metal object briefly.

2.3 Jumper and Connector List

You can configure your board to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch.

It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either two pins.

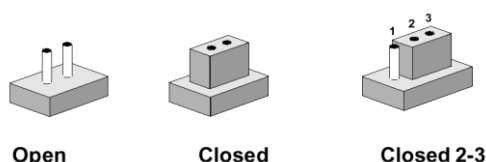

The jumper settings are schematically depicted in this manual as follows:



A pair of needle-nose pliers may be helpful when working with jumpers.

Connectors on the board are linked to external devices such as hard disk drives, a keyboard, or floppy drives. In addition, the board has a number of jumpers that allow you to configure your system to suit your application.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

The following tables list the function of each of the board's jumpers and connectors.

Jumpers



Label	Function	Note
JBAT1	Clear CMOS	3 x 1 header, pitch 2.54mm
JFP1	AT/ATX mode selector, Front panel & LED settings	6 x 2 header, pitch 2.00mm
JRI1	Serial port 1 - Ring, +5V, +12V power selector	3 x 2 header, pitch 2.00mm
JTOUCH_SEL1	Touch panel connector	3 x 1 header, pitch 2.54mm

Connectors

Label	Function	Note
BAT1	Battery connector	2 x 1 wafer, pitch 1.25mm
CN2	DVI connector	
CN4	204-pin DDR3 SODIMM	
CN7	Audio out connector	Audio jack
CPU_FAN1	CPU Fan connector	4 x 1 wafer, pitch 2.54mm
HDMI	HDMI connector	
HD_PWR1	HD power connector	4 x 1 wafer, pitch 2.50mm
J422/1	Serial Port 1 connector	3 x 2 header, pitch 2.00mm
JAUDIO1	Audio Connector	6 x 2 header, pitch 2.00mm
JBKL1	LCD Inverter connector 1	5 x 1 wafer, pitch 2.00mm
JCOM1/ 2	Serial port 1/2 connector	10 x 2 header, pitch 2.00mm
JDIO1	General purpose I/O connector	10 x 2 header, pitch 2.00mm
JIR1	IrDA connector	5 x 1 header, pitch 2.54mm
JKB/MS1	PS/2 keyboard & mouse connector	4 x 2 header, pitch 2.00mm
JLPC1	(Reversed for BIOS programming)	7 x 2 header, pitch 2.00mm
JLVDS1	LVDS connector	DIN 40-pin wafer, pitch 1.25mm
JSPI1	SPI connector	4 x 2 header, pitch 2.00mm
JTOUCH1	Touch panel connector	9 x 1 wafer, pitch 2.00mm
JUSB1_1	USB connector 4 & 5	5 x 2 header, pitch 2.00mm
LAN1	RJ-45 Ethernet connector 1	
LAN2	RJ-45 Ethernet connector 2	
LED3	Power & HDD indicator	
MPCIE1	Mini PCIEXPRESS connector	
PWR_SB1	5VSB connector in ATX	3 x 1 wafer, pitch 2.54mm
PWR1	Power connector	2 x 2 wafer, pitch 4.2mm
SATA1	Serial ATA connector 1	
SATA2	Serial ATA connector 2	
SYS_FAN1	System Fan connector	3 x 1 wafer, pitch 2.54mm
USB1_1	USB connector 0&1	
USB1_2	USB connector 2&3	
JVR1	LCD Backlight brightness adjustment	3 x 1 header, pitch 2.54mm



2.4 Setting Jumpers & Connectors

2.4.1 Clear CMOS (JBAT1)

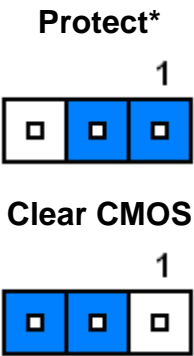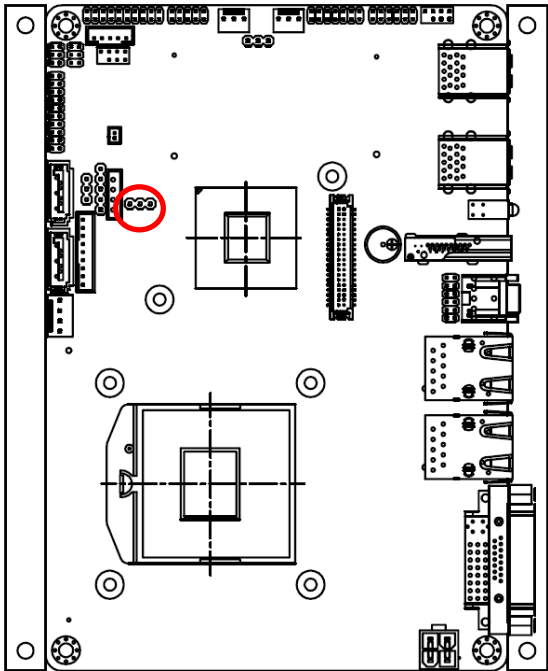


*Default

2.4.2 Serial port 1 - Ring, +5V, +12V power selector (JR11)

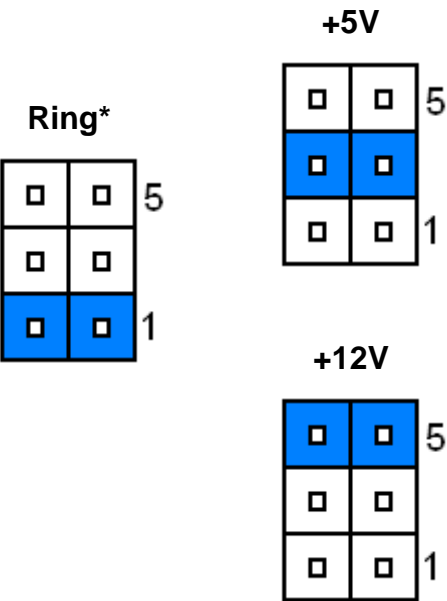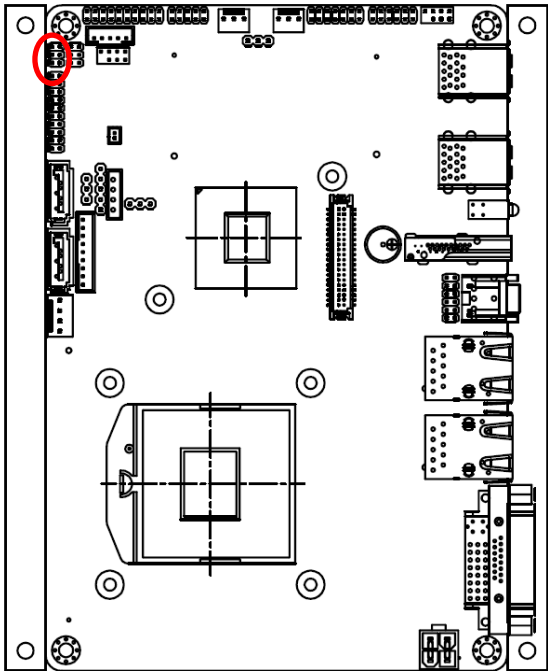


* Default

2.4.3 AT/ATX mode selector, Front panel & LED settings (JFP1)

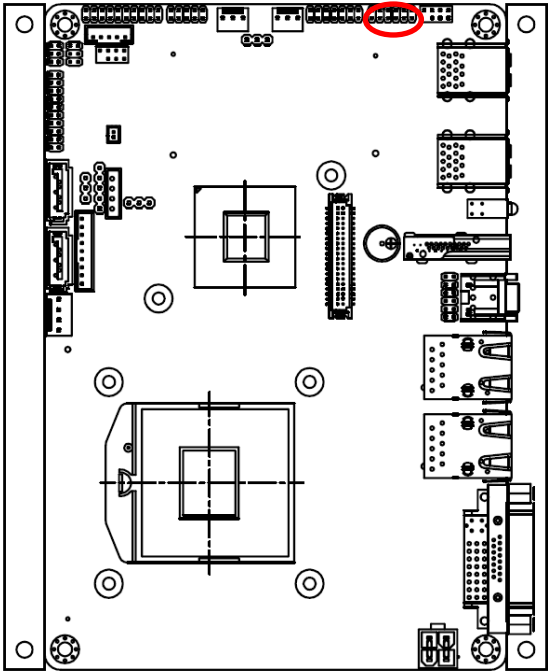


*Default

AT*

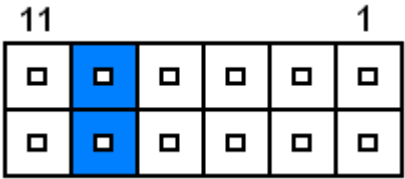


ATX

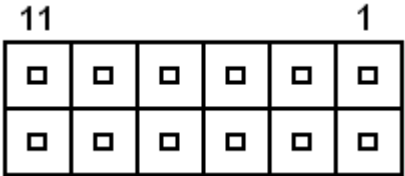


Signal	PIN
PWBT	1, 2
RST#	3, 4
PWR-LED	5, 6
HDD-LED	7, 8
Short: AT MODE Open: ATX MODE	9, 10
COPEN#	11, 12

2.4.4 Touch panel connector (JTOUCH_SEL1)

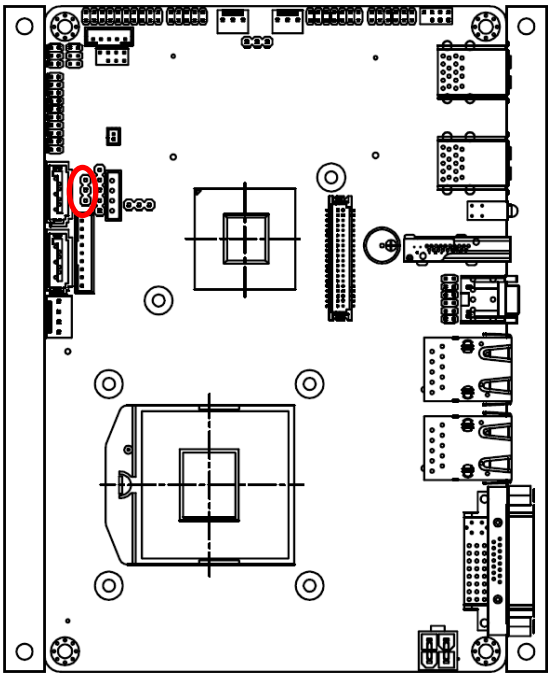


* Default


5W*



4/ 8W





2.4.5 Battery connector (BAT1)

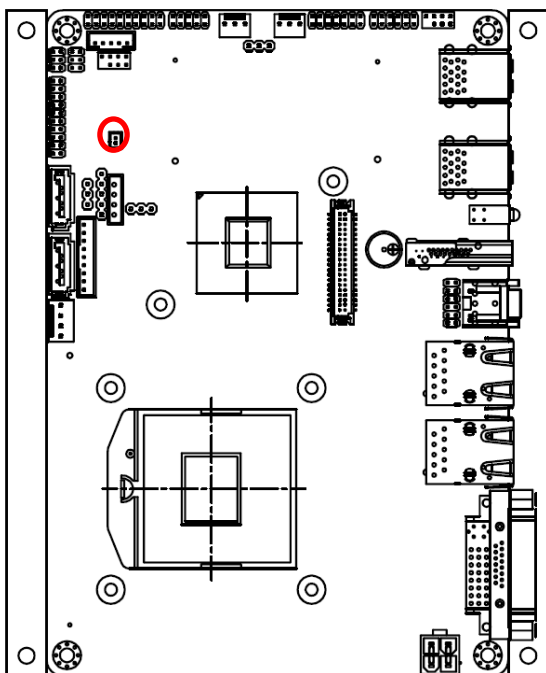

Signal	PIN
GND	2
VBAT	1

2.4.6 Audio connector (JAUDIO1)

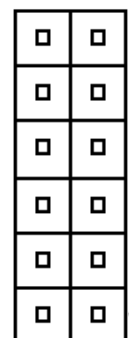
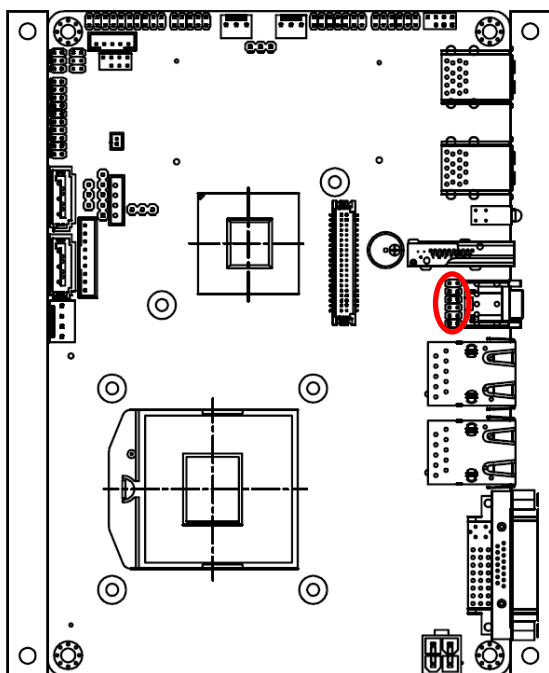


Signal	PIN	PIN	Signal
GND	12	11	MIC_JD
LINE1_JD	10	9	LINE2_JD
MIC_LIN	8	7	MIC_RIN
LINE1_LIN	6	5	LINE1_RIN
GND	4	3	GND
LINE2_LOUT	2	1	LINE2_ROUT

2.4.6.1 Signal Description – Audio connector (JAUDIO1)



Signal	Signal Description
LINE1_JD	Jack detection for line1
LINE2_JD	Jack detection for line2
MIC1_JD	Jack detection for mic1

2.4.7 CPU fan (CPU_FAN1)

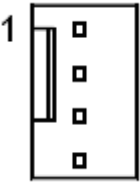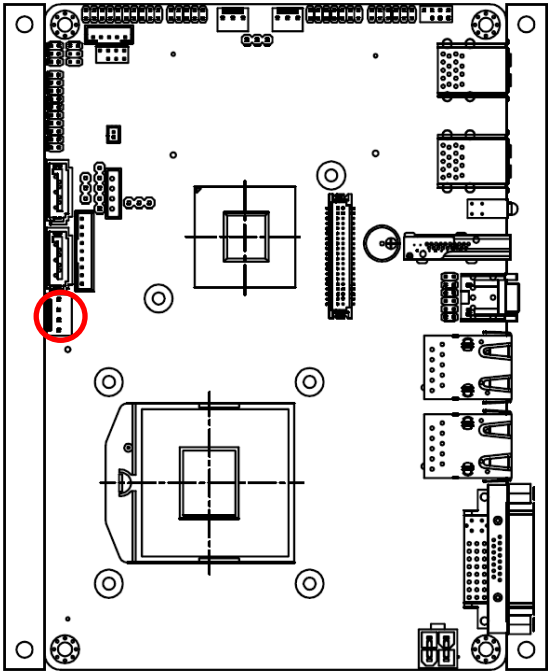



Signal	PIN
GND	1
+12VS	2
CPUFANIN0	3
CPUFANOUT	4

2.4.8 System fan connector (SYS_FAN1)

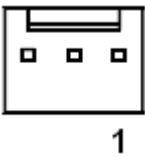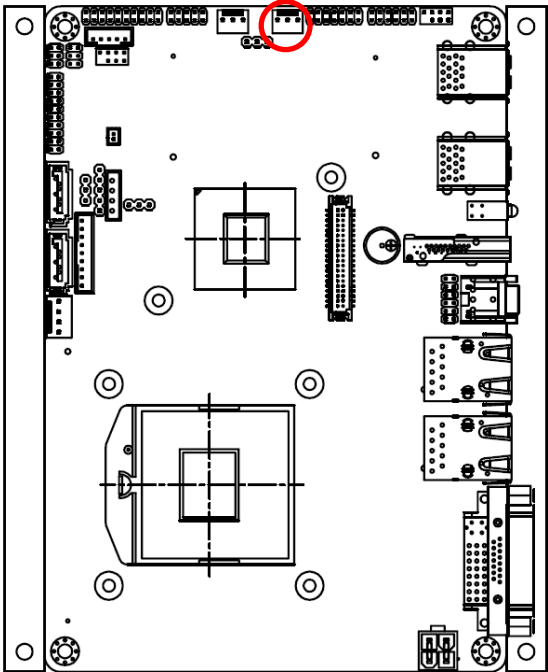



Signal	PIN
GND	1
SYS_FAN_PWR	2
SYSFANIN	3

2.4.9 PS/2 keyboard & mouse connector (JKB/MS1)

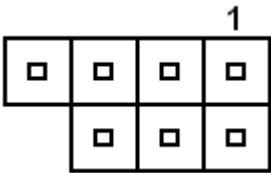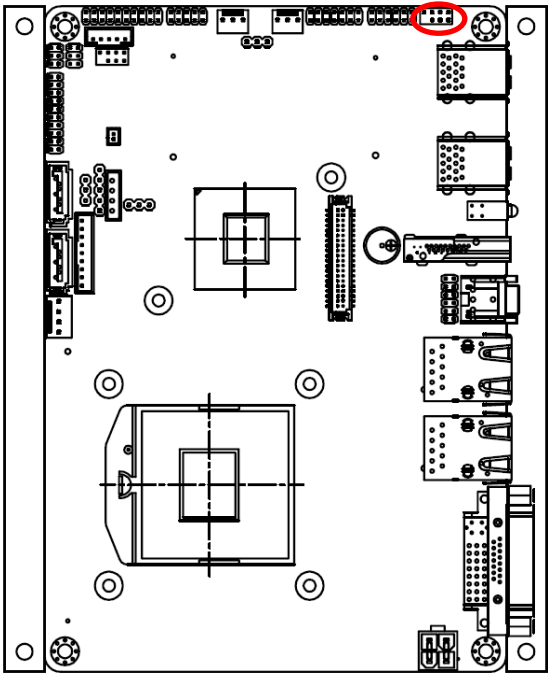

Signal	PIN	PIN	Signal
		7	NC
MSCK	6	5	MSDT
KBVCC	4	3	GND
KBCK	2	1	KBDT

2.4.10 Serial port 1/ 2 connector (JCOM1/ JCOM2)

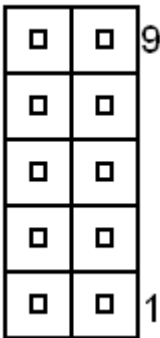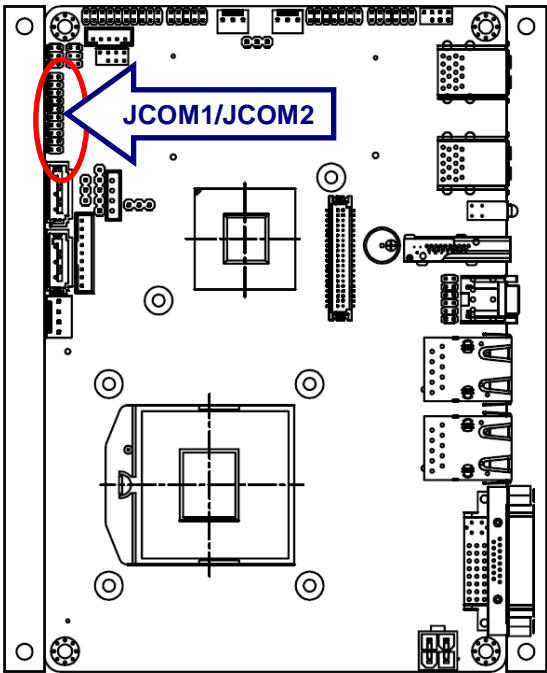



JCOM2

Signal	PIN	IN	Signal
NC	10	9	RI2
CTS2	8	7	RTS2
DSR2	6	5	GND
DTR2	4	3	TXDD2
RXDD2	2	1	DCD2


JCOM1

Signal	PIN	IN	Signal
NC	10	9	RI1
CTS1	8	7	RTS1
DSR1	6	5	GND
DTR1	4	3	TXDD1
RXDD1	2	1	DCD1


2.4.11 Serial Port 1 connector (J422/1)

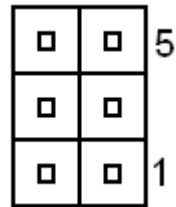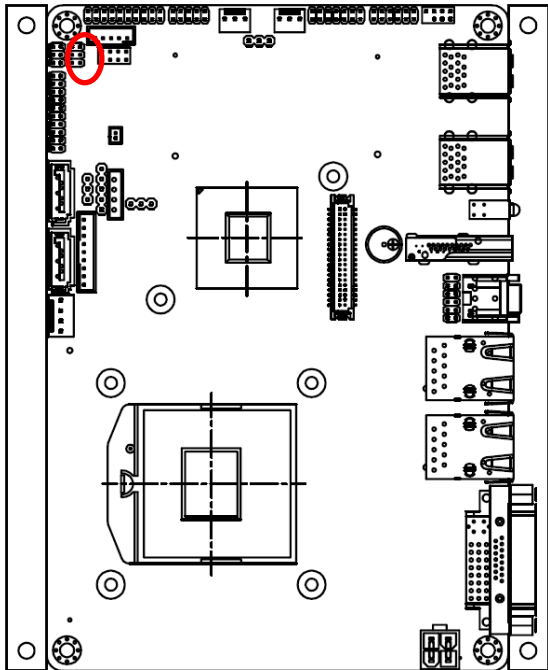

Signal	PIN	PIN	Signal
GND	6	5	+5V
RX+	4	3	TX+
RX-	2	1	TX-



 **Note:** J422/1 is available after modifying the mode of COM1 in BIOS setting.

2.4.12 HD power connector (HD_PWR1)

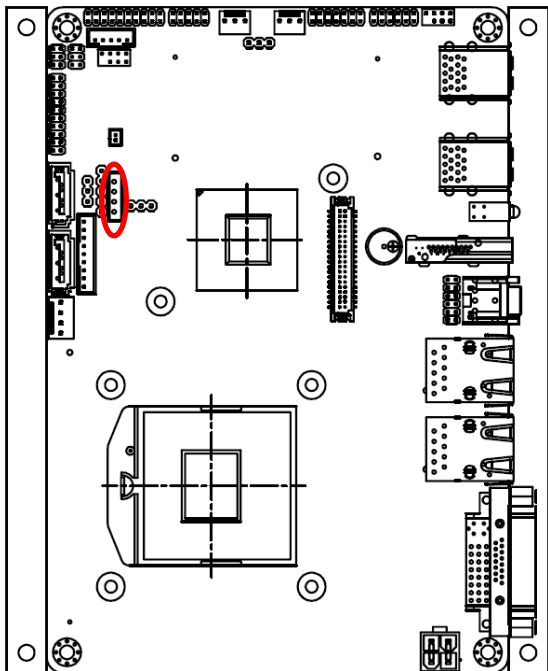

Signal	PIN
+5V	4
+5V	3
GND	2
GND	1

2.4.13 LCD Inverter Connector 1 (JBKL1)


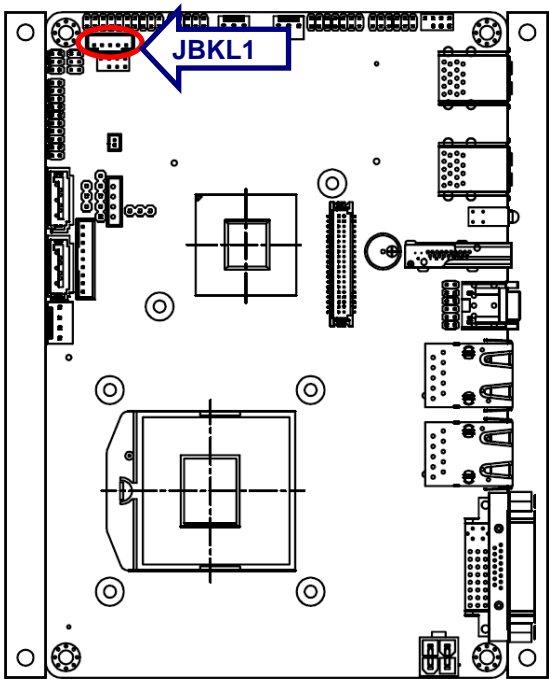


Signal	PIN
+5V	5
BRIGHT	4
BLK_ON	3
GND	2
+12V	1

2.4.13.1 Signal Description – LCD Inverter Connector (JBKL1)



Signal	Signal Description
BRIGHT	$V_{adj} = 0.75V \sim 4.25V$ (Recommended: $4.7K\Omega$, $>1/16W$)
BLK_ON	LCD backlight ON/OFF control signal

2.4.14 LCD Backlight brightness adjustment (JVR1)

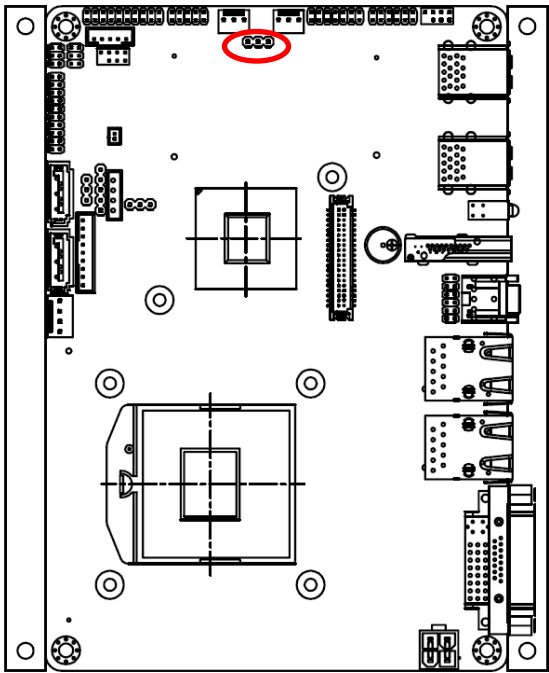



Signal	PIN
GND	3
BRIGHT	2
+5V	1

2.4.15 5VSB connector in ATX (PWR_SB1)

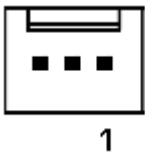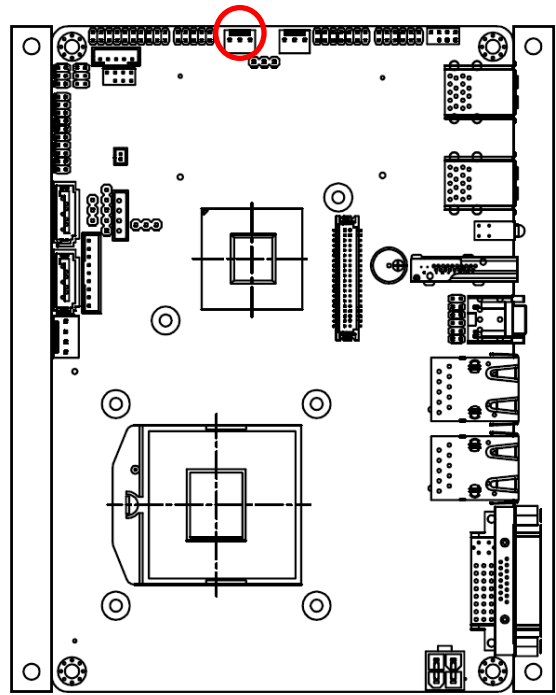



Signal	PIN
+ATX5VSB	3
GND	2
SIO_PSON#	1

2.4.16 IrDA connector (JIR1)

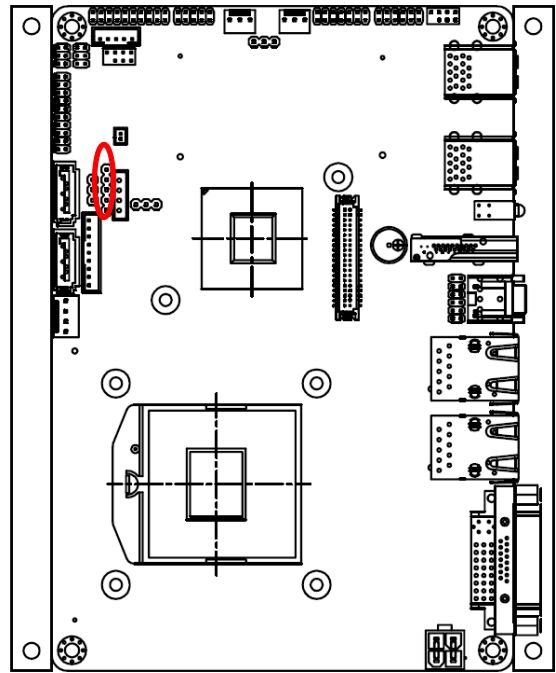


Signal	PIN
SOUTB_IRTX	5
GND	4
SINB_IRRX	3
NC	2
+5V	1

2.4.17 LVDS connector (JLVDS1)

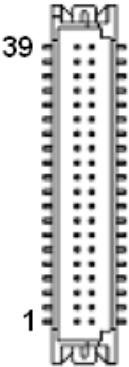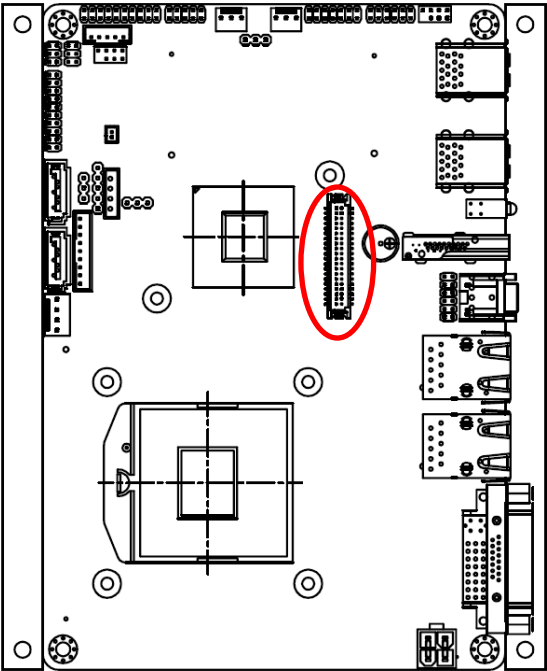

Signal	PIN	PIN	Signal
+12V	39	40	+12V
GND	37	38	GND
LVDS_CLK2_N	35	36	LVDS_CLK1_N
LVDS_CLK2_P	33	34	LVDS_CLK1_P
GND	31	32	GND
LVDS_DATA7_N	29	30	LVDS_DATA6_N
LVDS_DATA7_P	27	28	LVDS_DATA6_P
GND	25	26	GND
LVDS_DATA5_N	23	24	LVDS_DATA4_N
LVDS_DATA5_P	21	22	LVDS_DATA4_P
GND	19	20	GND
LVDS_DATA3_N	17	18	LVDS_DATA2_N
LVDS_DATA3_P	15	16	LVDS_DATA2_P
GND	13	14	GND
LVDS_DATA1_N	11	12	LVDS_DATA0_N
LVDS_DATA1_P	9	10	LVDS_DATA0_P
GND	7	8	GND
NC	5	6	NC
+3.3V	3	4	+5V
+3.3V	1	2	+5V

2.4.18 Touch panel connector (JTOUCH1)


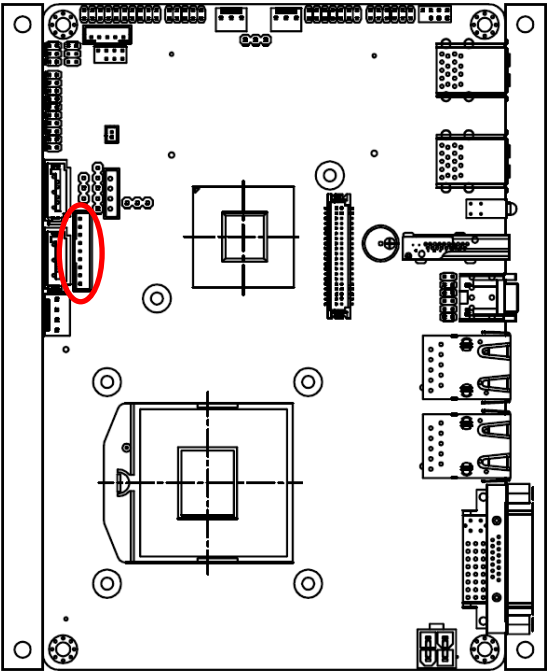


Signal	PIN
TOUCH_GND	9
Y-	8
Y+	7
X-	6
X+	5
SENSE	4
Y+	3
X-	2
X+	1





PIN	4-WIRE	5-WIRE	8-WIRE
9	GND	GND	GND
8	Top	UL	Top Excite
7	Bottom	UR	Bottom Excite
6	Left	LL	Left Excite
5	Right	LR	Right Excite
4	N/A	Sense	Top Sense
3	N/A	N/A	Bottom Sense
2	N/A	N/A	Left Sense
1	N/A	N/A	Right Sense

2.4.19 General purpose I/O connector (JDIO1)

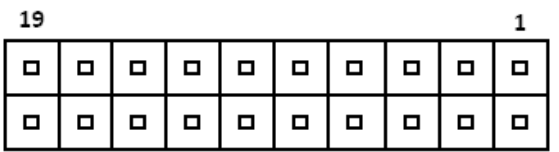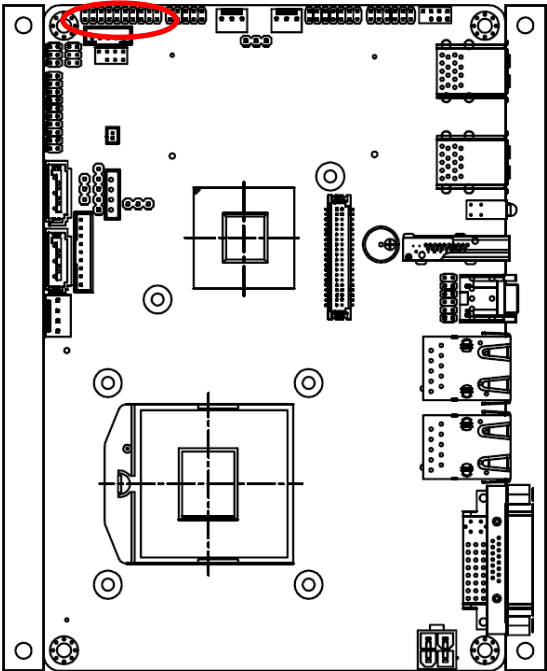



Signal	PIN	PIN	Signal
+5V	20	19	GND
SMBDATA_MAIN	18	17	SMBCLK_MAIN
DIO_GP17	16	15	DIO_GP27
DIO_GP16	14	13	DIO_GP26
DIO_GP15	12	11	DIO_GP25
DIO_GP14	10	9	DIO_GP24
DIO_GP13	8	7	DIO_GP23
DIO_GP12	6	5	DIO_GP22
DIO_GP11	4	3	DIO_GP21
DIO_GP10	2	1	DIO_GP20

2.4.20 Power connector (PWR1)

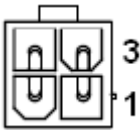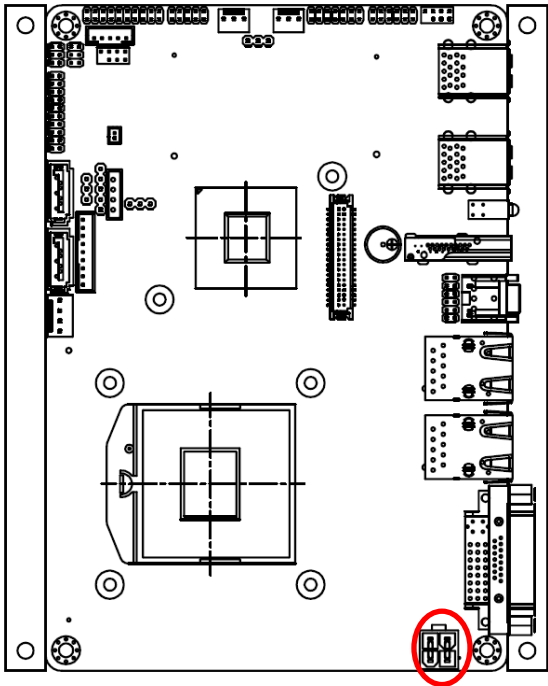



Signal	PIN	PIN	Signal
DC_IN	4	3	DC_IN
GND	2	1	GND

2.4.21 SPI connector (JSPI1)

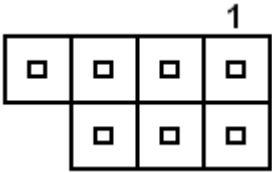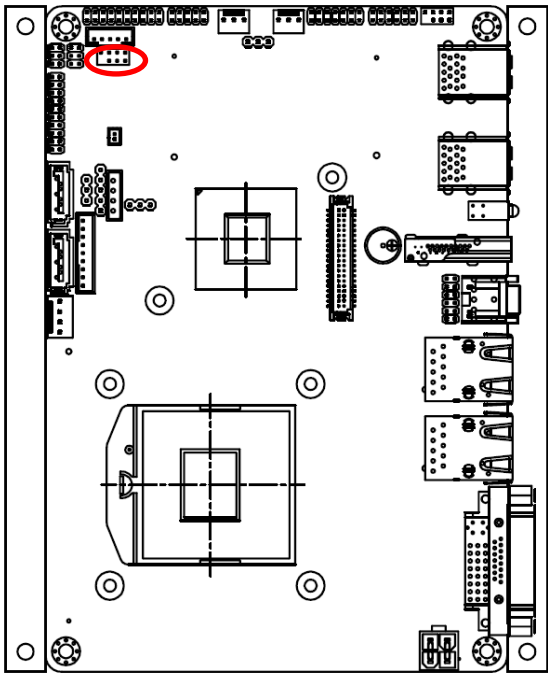


Signal	PIN	PIN	Signal
		7	HOLD#
SPI_SI	6	5	SPI_SO
SPI_CLK	4	3	SPI_CS0#
GND	2	1	+V3.3M_SPI

2.4.22 USB connector 4&5 (JUSB1_1)

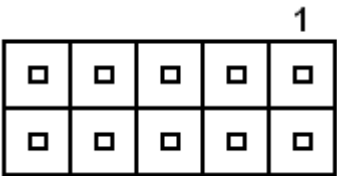
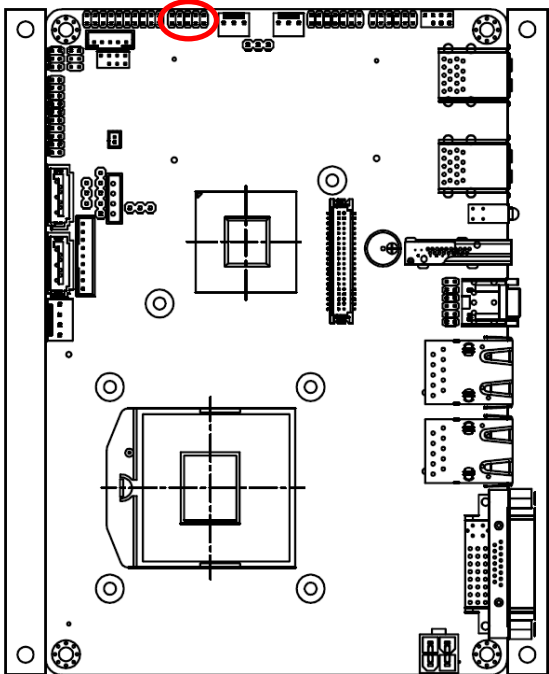


Signal	PIN	PIN	Signal
USBVCC4	1	2	GND
USB_PN_Z_4	3	4	GND
USB_PP_Z_4	5	6	USB_PP_Z_5
GND	7	8	USB_PN_Z_5
GND	9	10	USBVCC4

 **Note:** Wrong USB cable configuration with USB devices might damage USB devices.

2.5 Installing the CPU


2.5.1 Locate the CPU socket on the board.

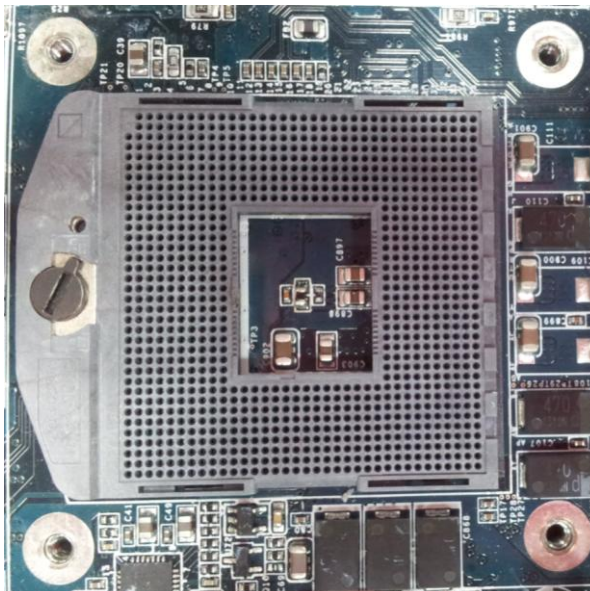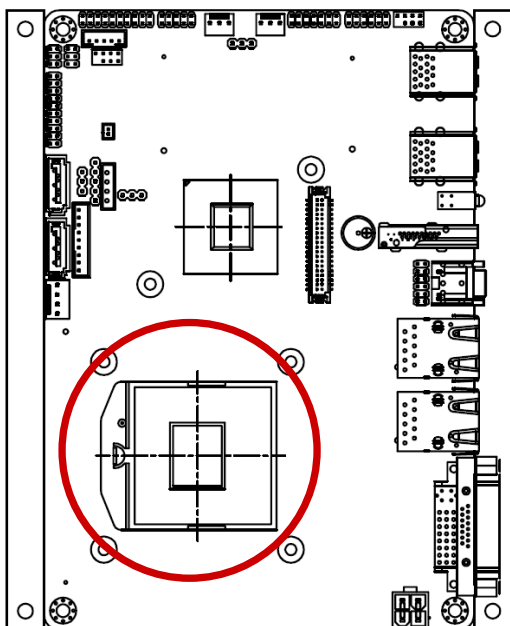


Before installing the CPU, make sure that the socket box is facing towards you and the load lever is on your left.

2.5.2 Separate CPU cooler and its base first by screw driver

1. Position the CPU over the socket, making sure that the gold triangle is the same side as CPU Socket triangle


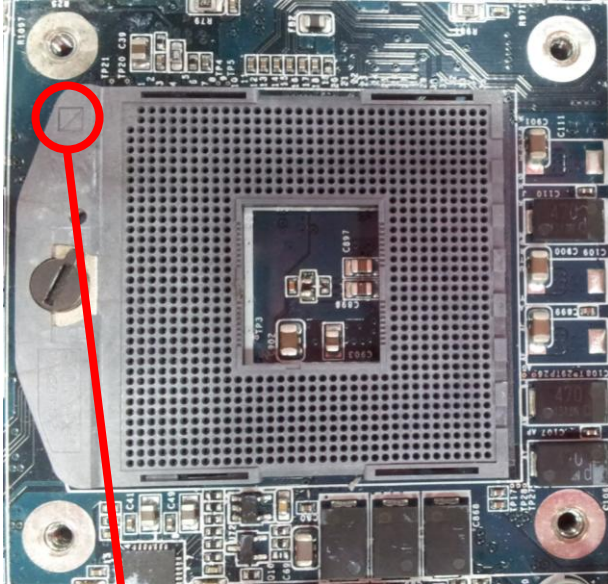


CPU Socket triangle

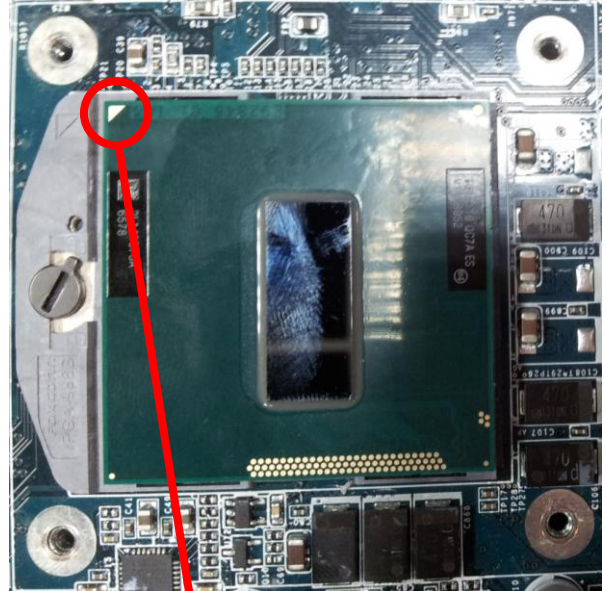

Gold triangle

2. turn the CPU lock clockwise to lock CPU

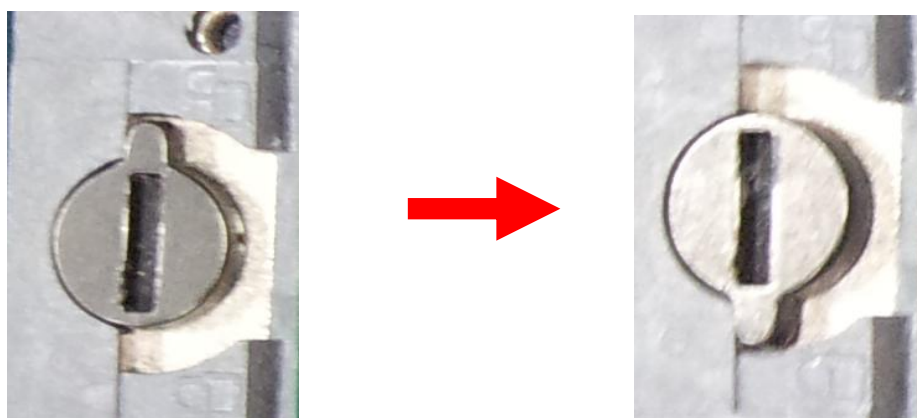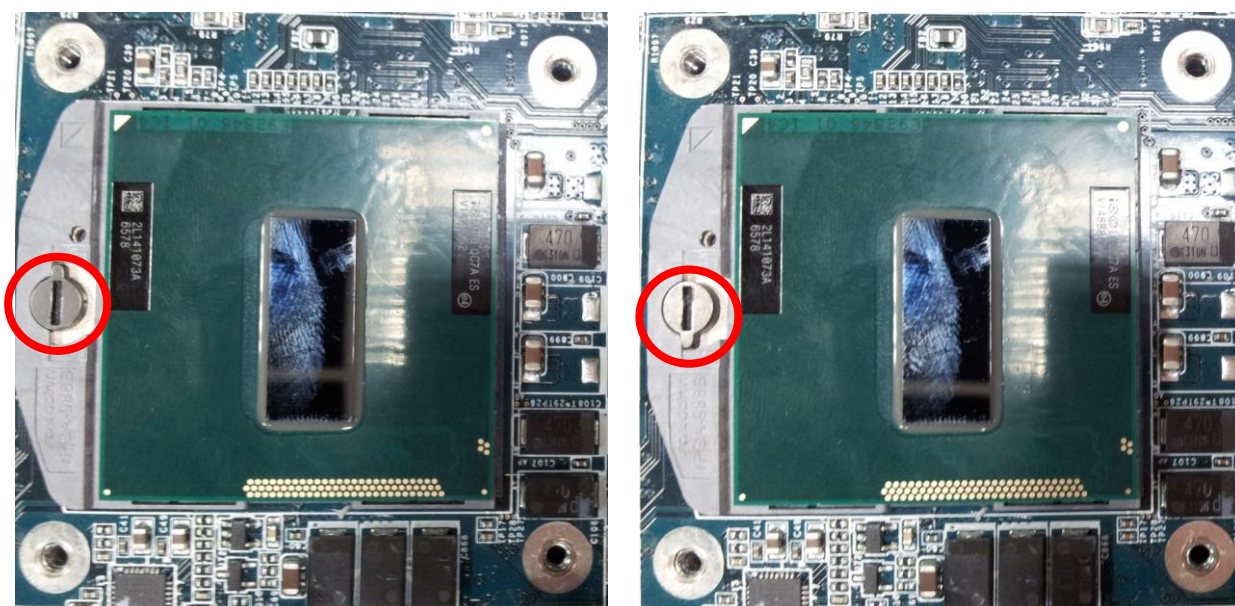

The CPU fits in only one correct orientation. DO NOT force the CPU into the socket to prevent bending the connectors on the socket and damaging the CPU!

3. BIOS Setup

3.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

3.2 Starting Setup

The AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the CMOS and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing immediately after switching the system on, or

By pressing the key when the following message appears briefly at the bottom of the screen during the POST (Power On Self Test).

Press DEL to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to.

Press F1 to Continue, DEL to enter SETUP

3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
PgUp key	Increase the numeric value or make changes
PgDn key	Decrease the numeric value or make changes
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values.
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



Note: Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “➤” pointer marks all sub menus.

3.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the F1 key again.

3.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the CMOS settings which resets your system to its defaults.


The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both Award and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

3.6 BIOS setup

Once you enter the AMI BIOS CMOS Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

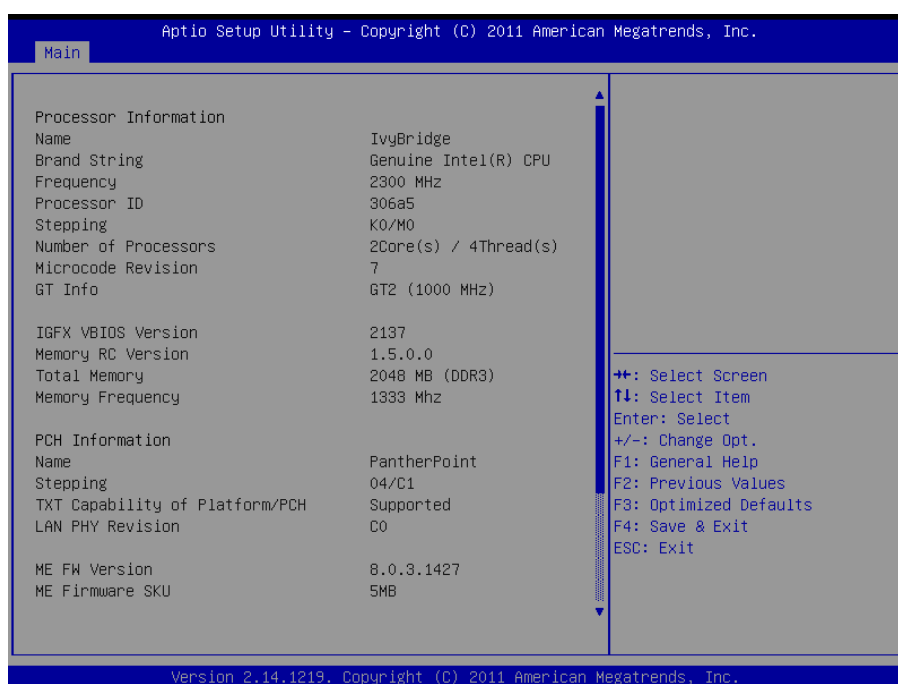

3.6.1.1 System Language

This option allows choosing the system default language.

3.6.1.2 System Date

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.

3.6.1.3 System Time

Use the system Date option to set the system date. Manually enter the day, month and year.




Note: The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.

Visit the Avalue website (www.avalue.com.tw) to download the latest product and BIOS information.


3.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.

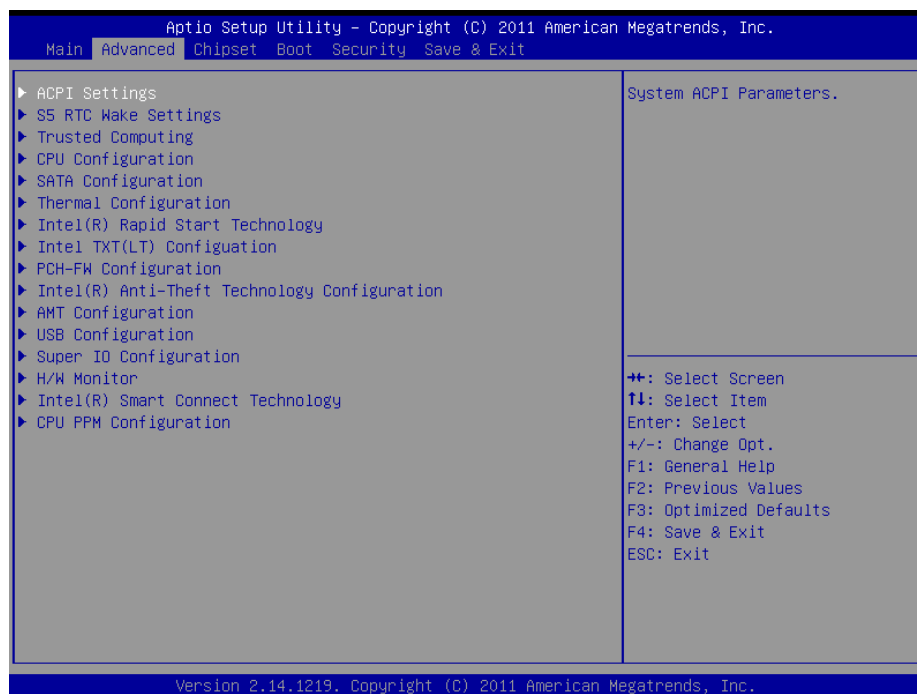


EPI-QM77

3.6.2.1 APCI Settings

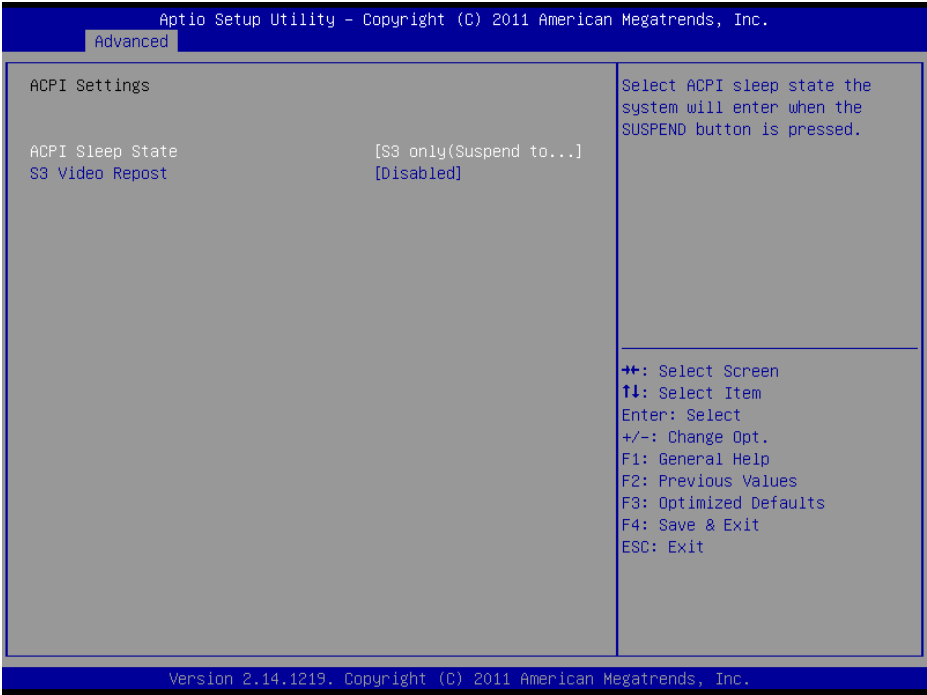


Item	Options	Description
APCI Sleep State	Suspend Disabled S1 only(CPU Stop Clock) S3 only(Suspend to RAM) [Default]	Select ACPI sleep state the system will enter when the SUSPEND button is pressed.
S3 Video Repost	Disabled [Default] Enabled	Enable or Disable S3 Video Repost.

3.6.2.2 S5 RTC Wake Settings

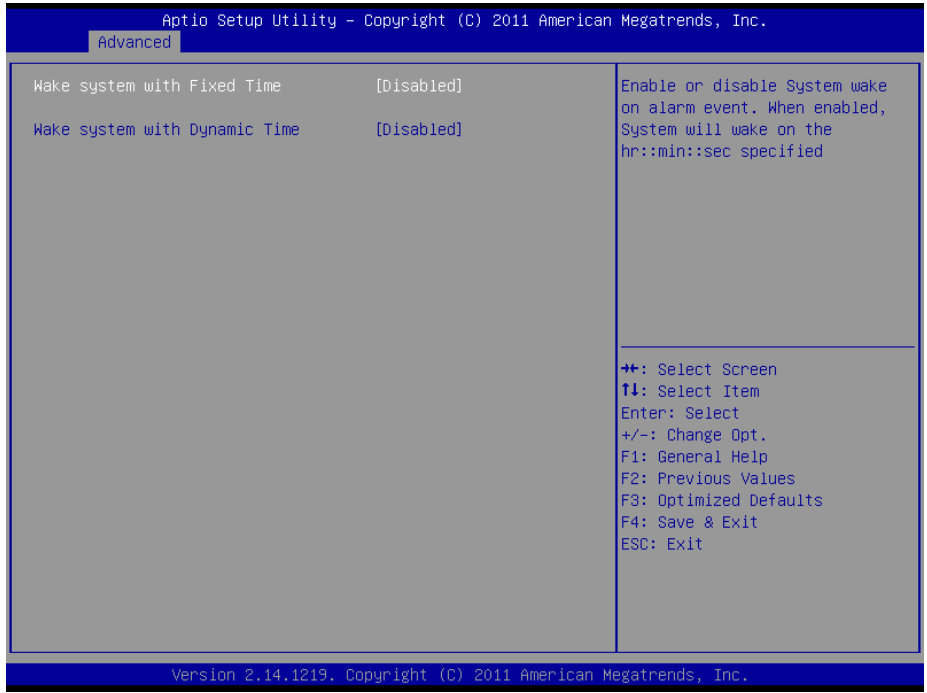

Item	Options	Description
Wake system with Fixed Time	Disabled[Default], Enabled	Enable or disable System wake on alarm event. When enabled, System will wake on the hr::min::sec specified.
Wake system with Dynamic Time	Disabled[Default], Enabled	Enable or disable System wake on alarm event. When enabled, System will wake on the current time + Increase minute(s).


3.6.2.3 Trusted Computing

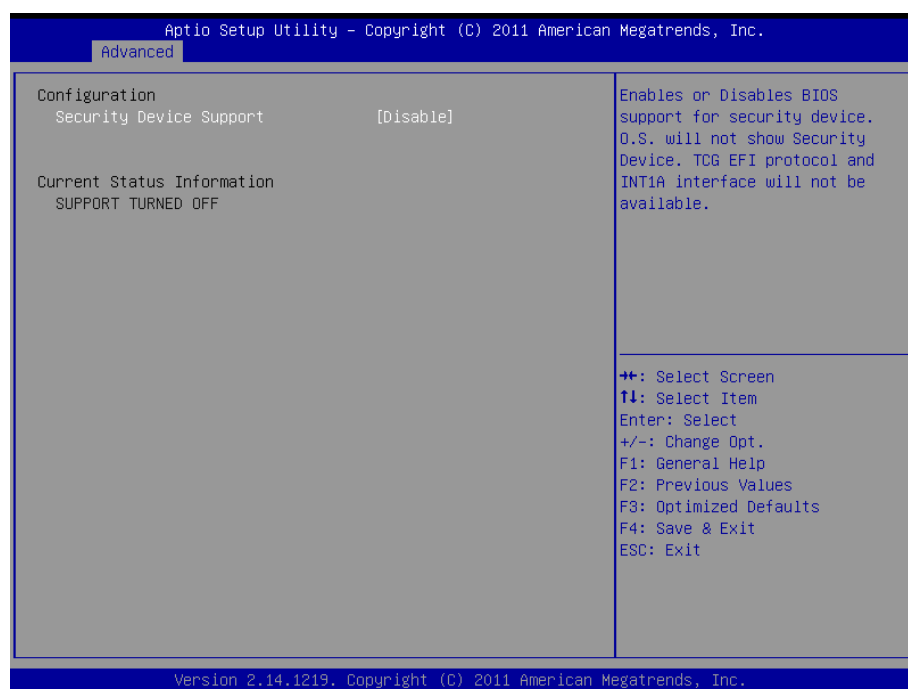

Item	Options	Description
Security Device Support	Disable[Default], Enable	Enables or Disables BIOS support for security device. O.S will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

3.6.2.4 CPU Configuration


Use the CPU configuration menu to view detailed CPU specification and configure the CPU.

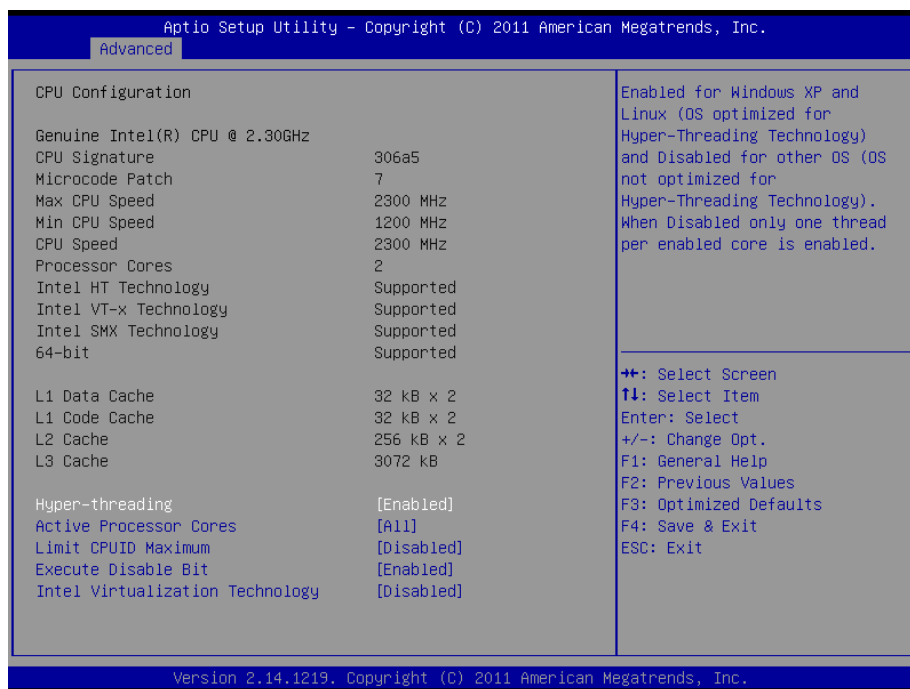

Item	Options	Description
Hyper-threading	Disabled Enabled[Default]	Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.
Active Processor Cores	All[Default] 1/2/3	Number of cores to enable in each processor package
Limit CPUID Maximum	Disabled[Default] Enabled	Disabled for Windows XP
Execute Disable Bit	Disabled Enabled[Default]	XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3.)
Intel Virtualization Technology	Disabled[Default] Enabled	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.


3.6.2.5 SATA Configuration

It allows you to select the operation mode for SATA controller.

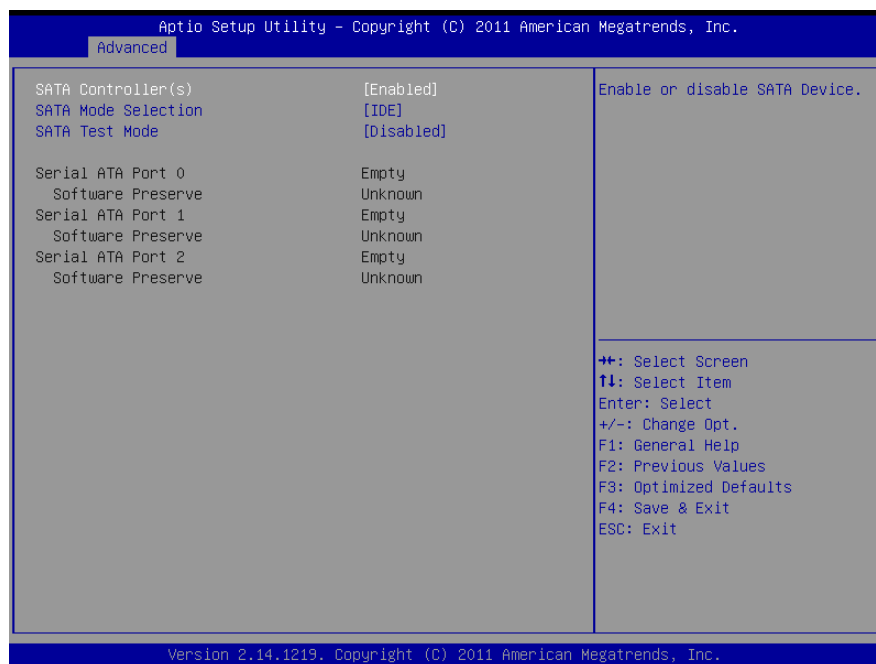


Item	Options	Description
SATA Controller(s)	Enabled[Default] Disabled	Enable or disable SATA Device.
SATA Mode Selection	IDE[Default] AHCI RAID	Determines how SATA controller (s) operate.
SATA Test Mode	Enabled Disabled[Default]	Enable or disable Test Mode.

3.6.2.6 Thermal Configuration

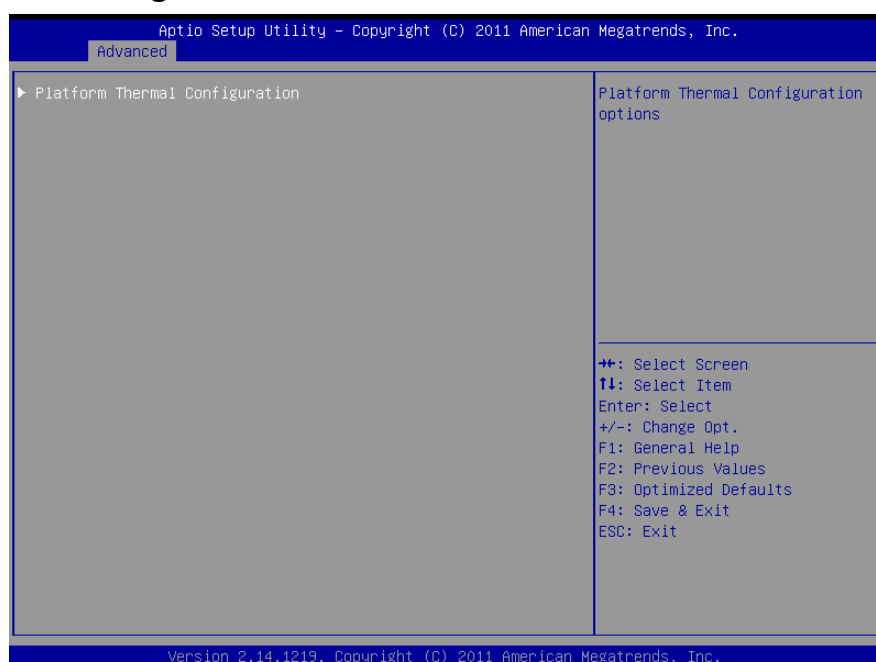

EPI-QM77

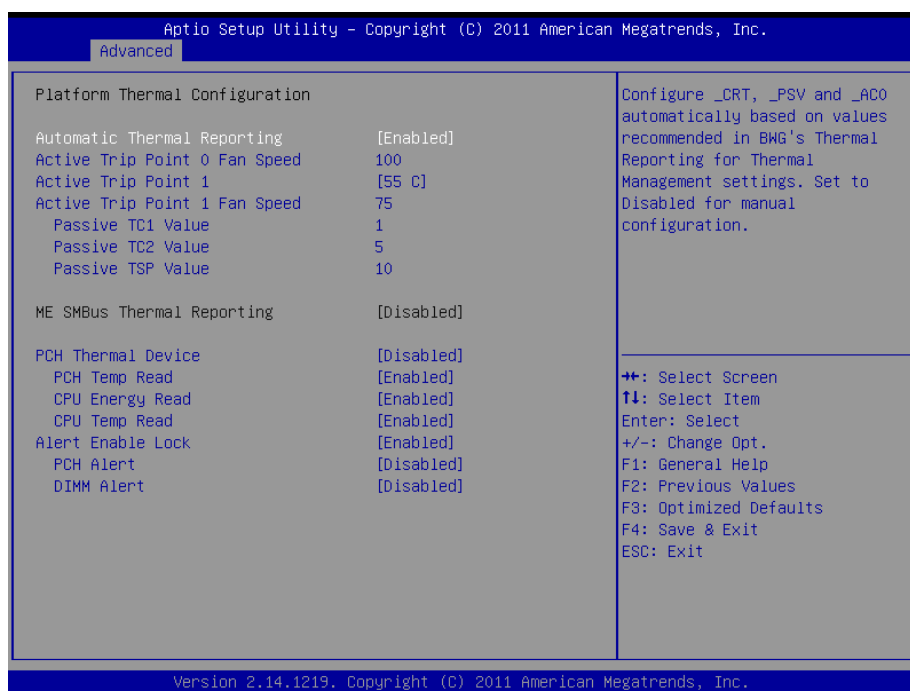


Item	Options	Description
Automatic Thermal Reporting	Disabled, Enabled[Default]	Configure _CRT, _PSV and _ACO automatically based on values recommended in BWG's Thermal Reporting for Thermal Management settings. Set to Disabled for manual configuration.
Active Trip Point 0 Fan Speed	0 ~ 100[Default]	Active Trip Point 0 Fan Speed in percentage. Value must be between 0 (Fan off) -100 (Max fan speed). This is the speed at which fan will run when Active Trip Point 0 is crossed.
Active Trip Point 1	Disabled 15/23/31/39/47/55/63/71/ 79/87/95[Default] /103/111/119C	This value controls the temperature of the ACPI Active Trip Point 1 - the point in which the OS will turn the processor fan on Active Trip Point 1 Fan Speed.
Active Trip Point 1 Fan Speed	0 ~ 100	Active Trip Point 1 Fan Speed in percentage. Value must be between 0 (Fan off) – 100 (Max fan speed). This value must be less than Active Trip Point 0 Fan speed. This is the speed at which fan will run when Active Trip 1 is crossed.
Passive TC1 / TC2 Value	1-16	This value sets the TC1/TC2 value for the ACPI Passive Cooling Formula. Range 1-16
Passive TSP Value	2 ~ 32	This item sets the TSP value for the ACPI Passive Cooling Formula. It represents in tenths of a second how often the OS will read the temperature when passive cooling is enabled. Range 2- 32
PCH Thermal Device	Enable or Disable PCH Thermal Device (D31:F6)	
PCH Temp Read	Disabled, Enabled[Default]	PCH Temperature Read Enable
CPU Energy Read	Disabled, Enabled[Default]	CPU Energy Read Enable
CPU Temp Read	Disabled, Enabled[Default]	CPU Temperature Read Enable

Alert Enable Lock	Disabled, Enabled[Default]	Lock all Alert Enable settings
PCH Alert	Disabled[Default], Enabled	PCH Alert pin enable
DIMM Alert	Disabled[Default], Enabled	DIMM Alert pin enable

3.6.2.7 Intel(R) Rapid Start Technology Configuration




3.6.2.8 Intel TXT (LT) Configuration

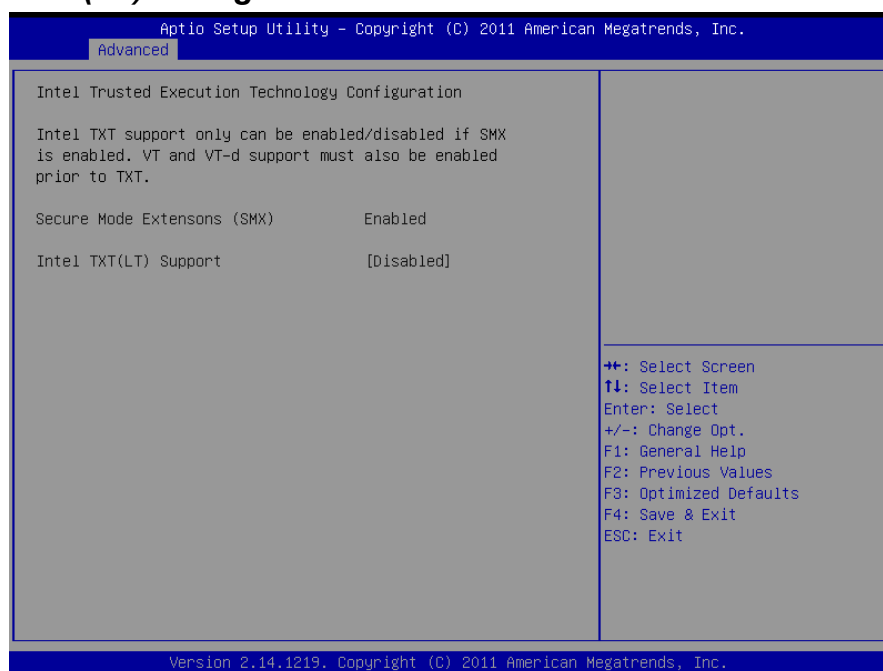

EPI-QM77

3.6.2.9 PCH-FW Configuration

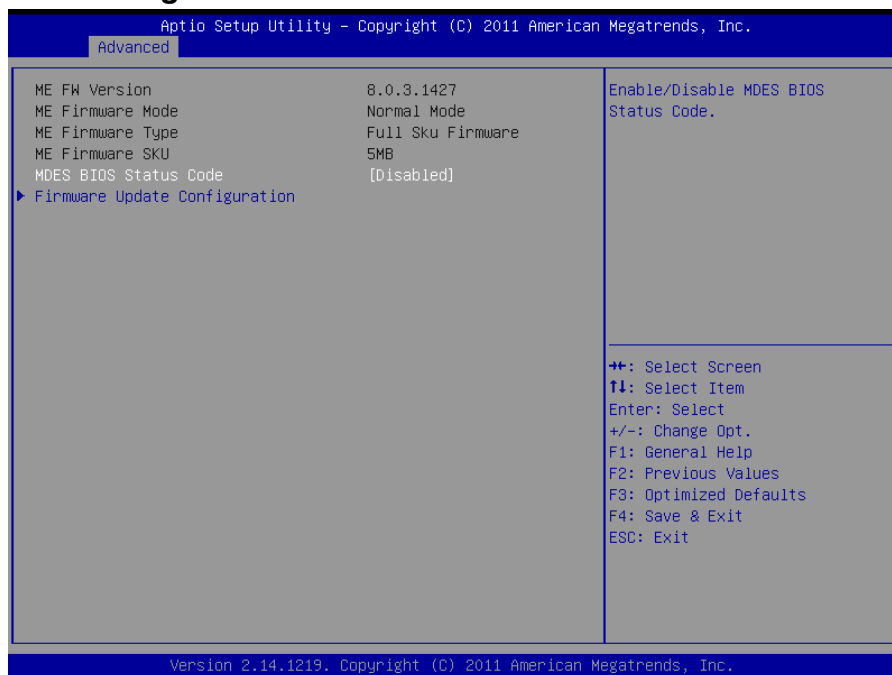


Item	Options	Description
MDES BIOS Status Code	Disabled[Default] Enabled	Enable/Disable MDES BIOS Status Code.
Firmware Update Configuration	Configure Management Engine Technology Parameters.	



Item	Options	Description
Me FW Image Re-Flash	Disabled[Default] Enabled	Enable/Disable Me FW Image Re-Flash function.


3.6.2.10 Intel(R) Anti-Theft Technology Configuration

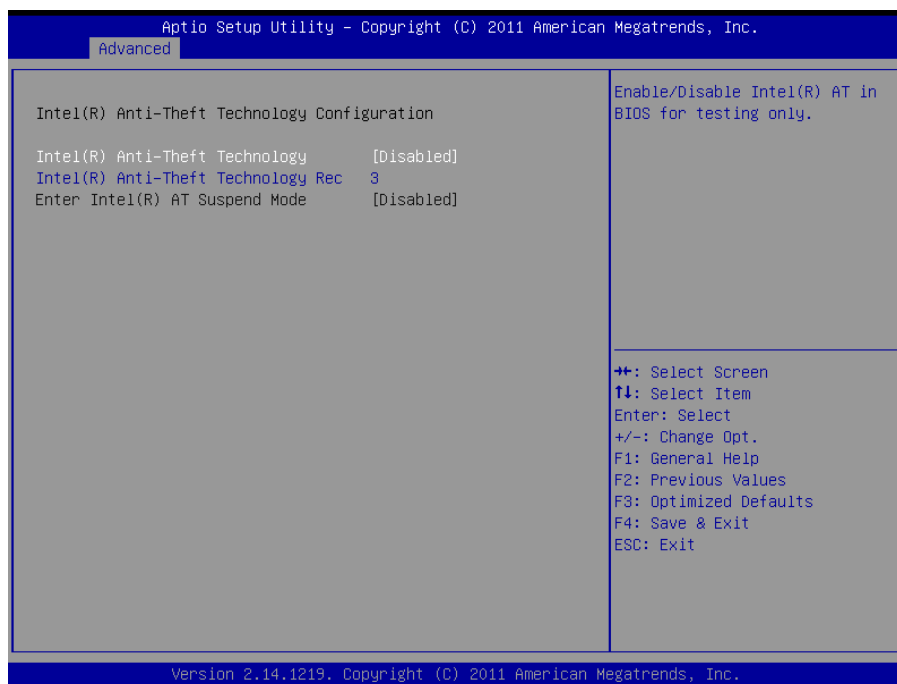

Item	Options	Description
Intel(R) Anti-Theft Technology	Enabled Disabled[Default]	Enable/Disable Intel(R) AT in BIOS for testing only
Intel(R) Anti-Theft Technology Recovery	1 ~ 64	Set the number of times Recovery attempted will be allowed
Enter Intel(R) AT Suspend Mode	Enabled Disabled[Default]	Request that platform enter Intel(R) AT Suspend Mode

3.6.2.11 AMT Configuration


Intel AMT allows hardware-based remote management, security, power-management, and remote-configuration features.

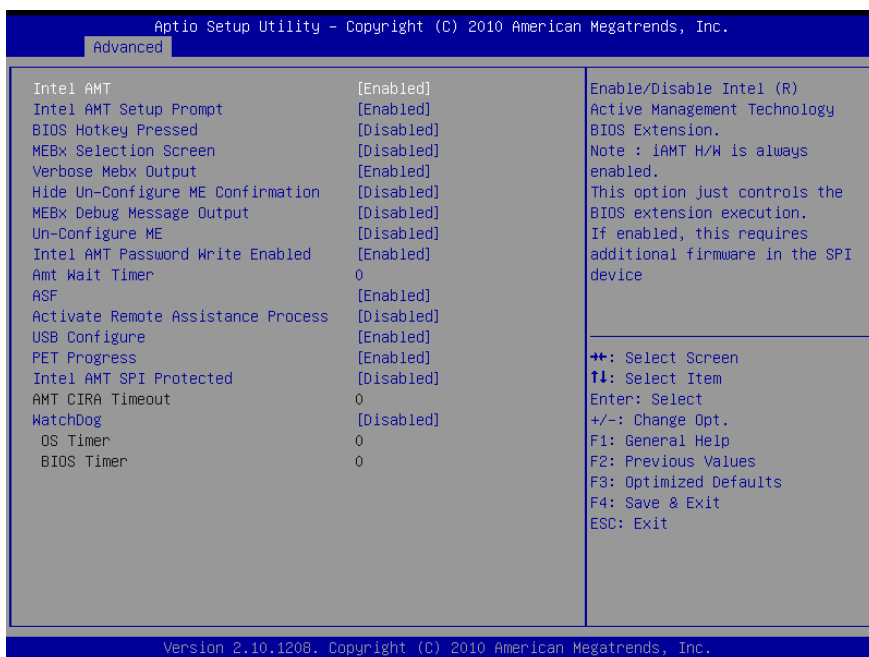

Item	Options	Description
Intel AMT	Enabled[Default] Disabled	Enable/Disable Intel ® Active Management Technology BIOS Extension. Note: iAMT H/W is always enabled. This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device
BIOS Hotkey Pressed	OEMFLag Bit 1: Enable/Disable BIOS hotkey press.	
MEBx Selection Screen	OEMFLag Bit 2: Enable/Disable MEBx selection screen	
Hide Un-Configure ME Confirmation	OEMFLag Bit 6: Hide Un-Configure ME without password Confirmation Prompt.	
MEBx Debug Message Output	OEMFLag Bit 14: Enable MEBx debug message output	
Un-configure ME	OEMFLag Bit 15: Un-Configure ME without password	
AMT Wait Timer	0	Set time to wait before sending ASF_GET_BOOT_OPTIONS.
Disable ME	Enabled[Default] Disabled	Set ME to Soft Temporary Disabled.
ASF	Enabled[Default] Disabled	Enable/Disable Alert Specification Format.
Active Remote Assistance Process	Trigger CIRA boot.	
USB Configure	Enabled[Default] Disabled	Enable/Disable USB Configure function.
PET progress	Enabled[Default] Disabled	User can Enable/Disable PET Events progress to receive PET events or not..
WatchDog	Enabled Disabled[Default]	Enable/Disable WatchDog Timer.

3.6.2.12 USB Configuration


The USB Configuration menu helps read USB information and configures USB settings.

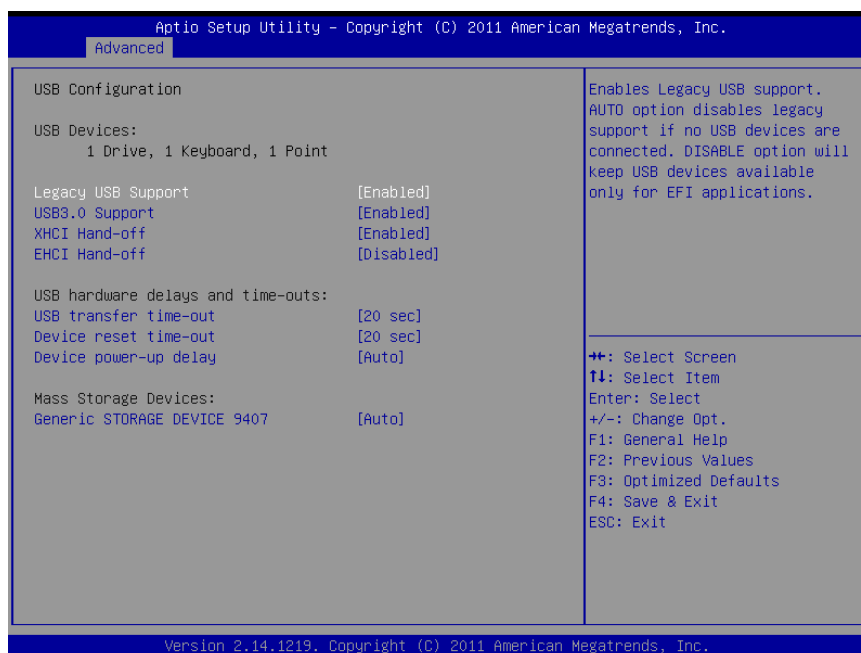

Item	Options	Description
Legacy USB Support	Enabled[Default] Disabled Auto	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
USB3.0 Support	Enabled[Default] Disabled	Enable/Disable USB3.0 (XHCI) Controller support.
XHCI Hand-off	Enabled[Default] Disabled	This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
EHCI Hand-off	Enabled Disabled[Default]	This is a workaround for OSes without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.
USB transfer time-out	1 sec 5 sec 10 sec 20 sec[Default]	The time-out value for Control, Bulk, and Interrupt transfers.
Device reset time-out	10 sec 20 sec[Default] 30 sec 40 sec	USB mass storage device Start Unit command time-out.
Device Power-up delay	Auto[Default] Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.


3.6.2.13 Super IO Configuration

You can use this item to set up or change the Super IO configuration for FDD controllers, parallel ports and serial ports. Please refer to 3.6.2.13.1 and 3.6.2.13.2 for more information.

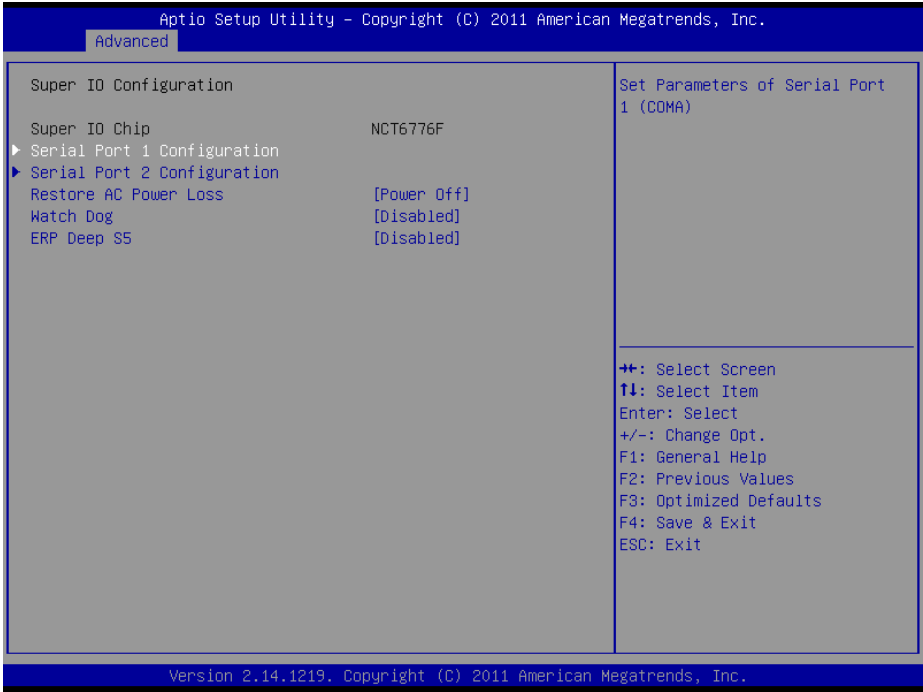


Item	Options	Description
Restore AC Power Loss	Power Off[Default] Power On	Specify what state to go to when power is re-applied after a power failure (G3 state)
Watch Dog	Disabled[Default] 30 sec 40 sec 50 sec 60 sec 2 min 10 min 30 min	Set SIO watch dog timer.
ERP Deep S5	Enabled Disabled[Default]	Deep S5 for power saving.

3.6.2.13.1 Serial Port 1 Configuration

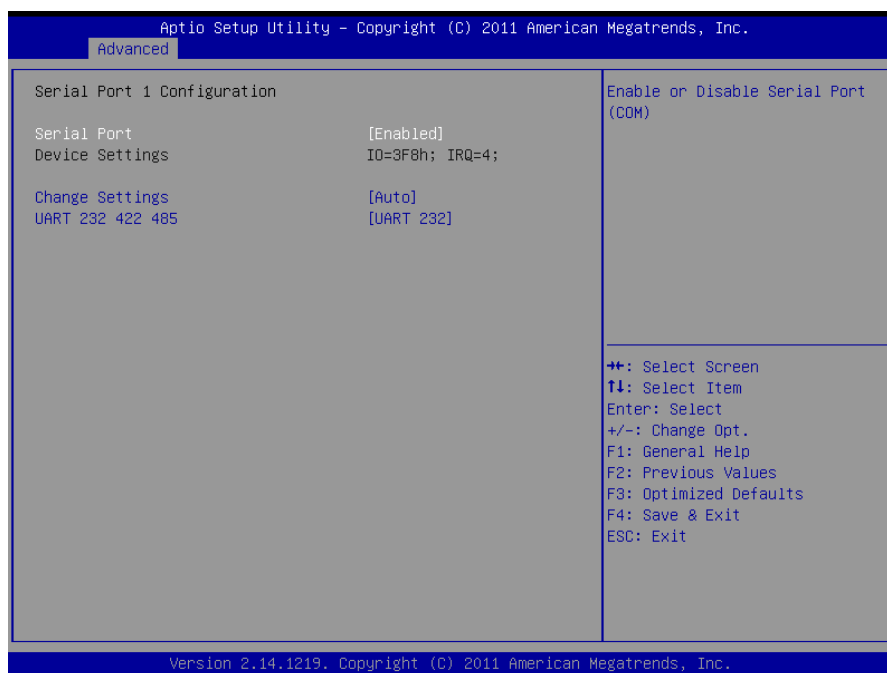

Item	Option	Description
Serial Port	Enabled, Disabled [Default]	Enable or Disable Serial Port (COM)
Change Settings	Auto [Default] IO=3F8h; IRQ=4, IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12 IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12	Select an optimal setting for Super IO device.
UART 232 422 485	UART 232 [Default] , UART 422, UART485	Change the Serial Port as RS232/ 422/ 485


3.6.2.13.2 Serial Port 2 Configuration

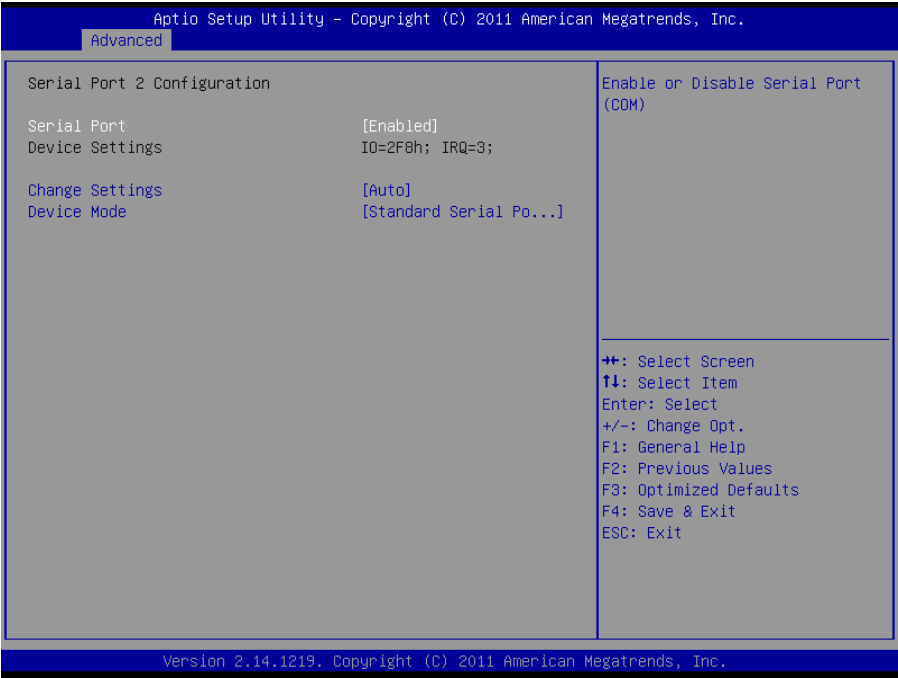

Item	Option	Description
Serial Port	Enabled, Disabled [Default]	Enable or Disable Serial Port (COM)
Change Settings	Auto [Default] IO=2F8h; IRQ=3 IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12 IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12 IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12	Select an optimal setting for super IO device.
Device mode	Standard Serial Port Mode [Default] IrDA 1.0 (HP SIR) Mode ASKIR Mode	Change the Serial Port mode. Select <High Speed> or <Normal mode> mode.

3.6.2.14 Hardware Monitor

Displays system health status

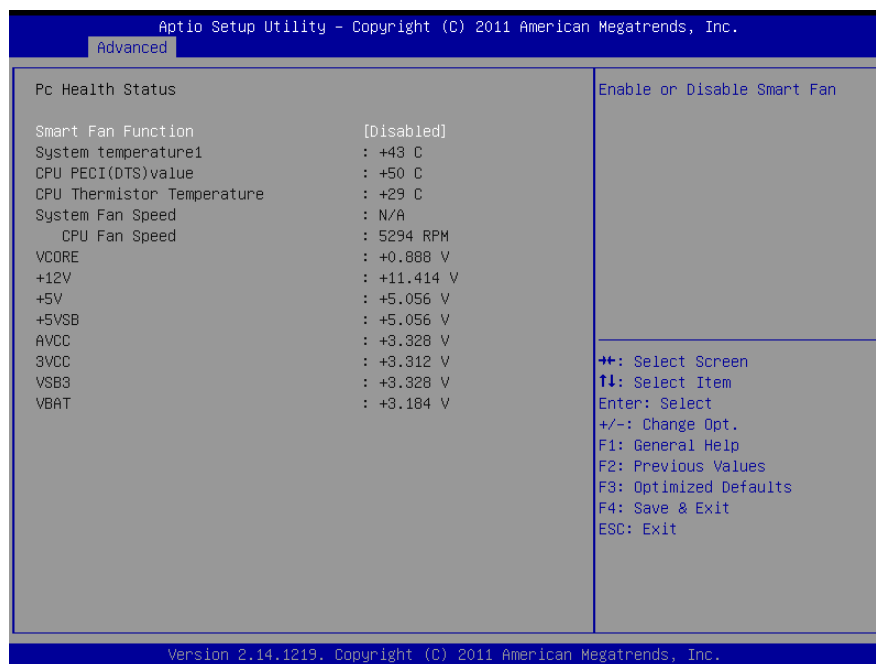

Item	Description
Smart Fan Function	Enable or Disable Smart Fan.

The following system temperature, fan speed and voltage are monitored.

Temperature:

- System Temperature
- CPU Thermistor Temperature


Fan Speed:

- System Fan Speed
- CPU Fan speed

Voltage:


- VCORE
- +12V
- +5V
- +5VSB
- AVCC
- 3VCC
- VSB3
- VBAT

3.6.2.15 Intel® Smart Connect Technology

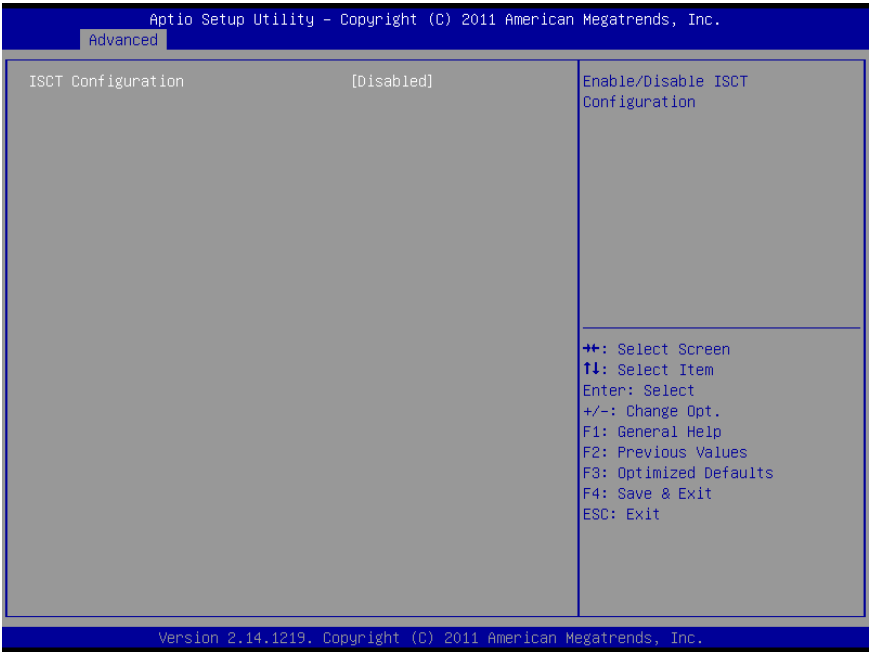

Item	Description	
ISCT Configuration	Enabled Disabled [Default]	Enable/Disable ISCT Configuration.

3.6.2.16 CPU PPM Configuration

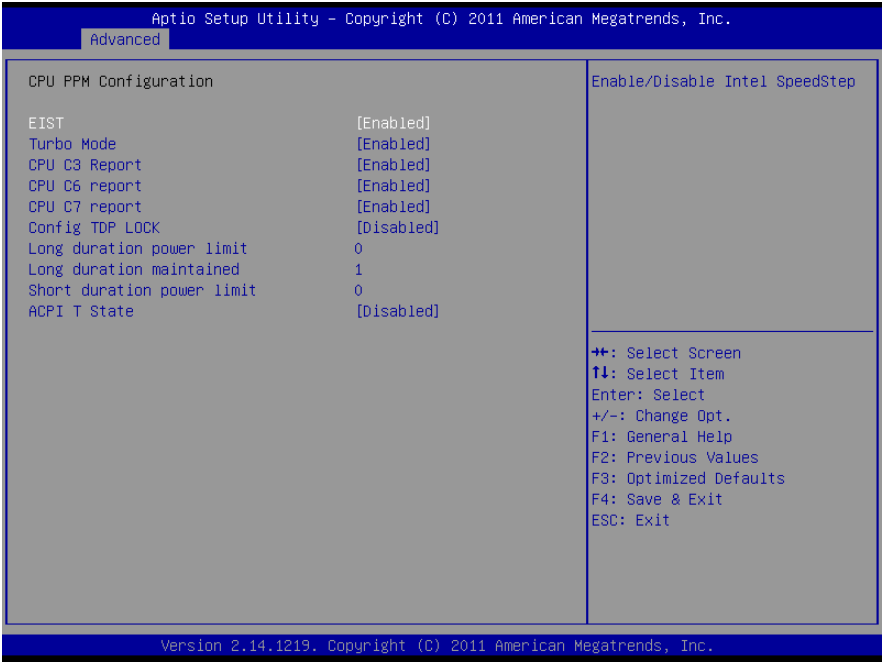


Item	Option	Description
EIST	Disabled Enabled[Default]	Enable or Disable Intel Speedstep.
Turbo Mode		Turbo Mode.
CPU C3/6/7 Report		Enable or Disable CPU C3(ACPI C2)/6(ACPI C3)/7(ACPI C3) report to OS.
Config TDP LOCK	Disabled[Default] Enabled	Lock the Config TDP Control register.
Long Duration power limit	Long duration power limit in Watts, 0 means use factory default.	
Long Duration maintained	Time window which the long duration power is maintained.	
Short Duration power limit	Short duration power limit in Watts, 0 means use factory default.	
ACPI T State	Disabled[Default] Enabled	Enable/Disable ACPI T state support.

3.6.3 Chipset



EPI-QM77

3.6.3.1 PCH-IO Configuration

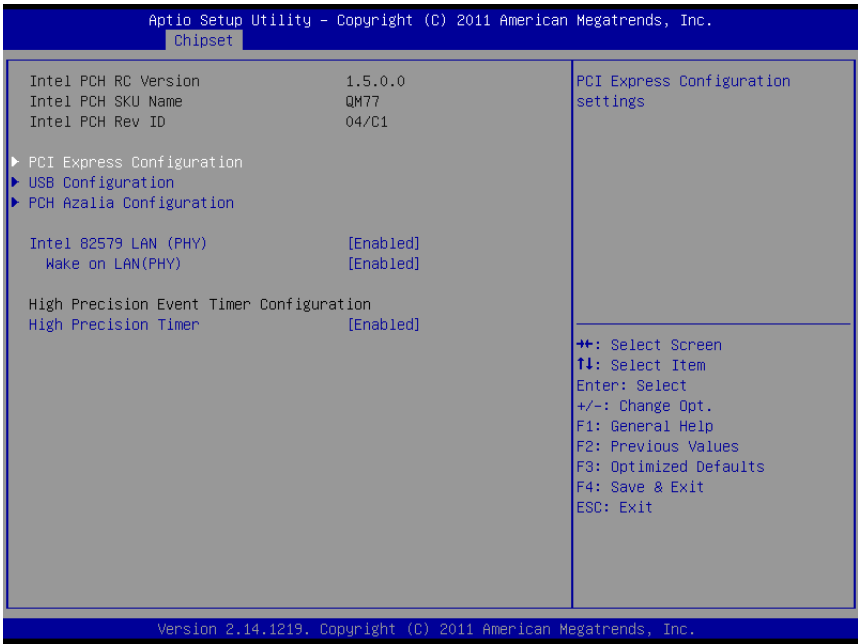


Item	Option	Description
PCI Express Configuration	PCI Express Configuration settings.	
USB Configuration	USB Configuration settings.	
PCH Azalia Configuration	PCH Azalia Configuration settings.	
Intel 82579 LAN (PHY)	Disabled Enabled[Default]	Enable or disable onboard NIC.
Wake on LAN (PHY)	Disabled Enabled[Default]	Enable or disable integrated LAN to wake the system. (The Wake On LAN cannot be disabled if ME is on at Sx state.
High Precision Timer	Disabled Enabled[Default]	Enable or Disable the High Precision Event Timer.

3.6.3.1.1 PCI Express Configuration



Item	Description
PCI Express Root Port 1	PCI Express Root Port 1 Settings.
PCI Express Root Port 6	PCI Express Root Port 6 Settings.
PCI Express Root Port 7(82574 Lan)	PCI Express Root Port 7 Settings.

3.6.3.1.1.1 PCI Express Root Port 1

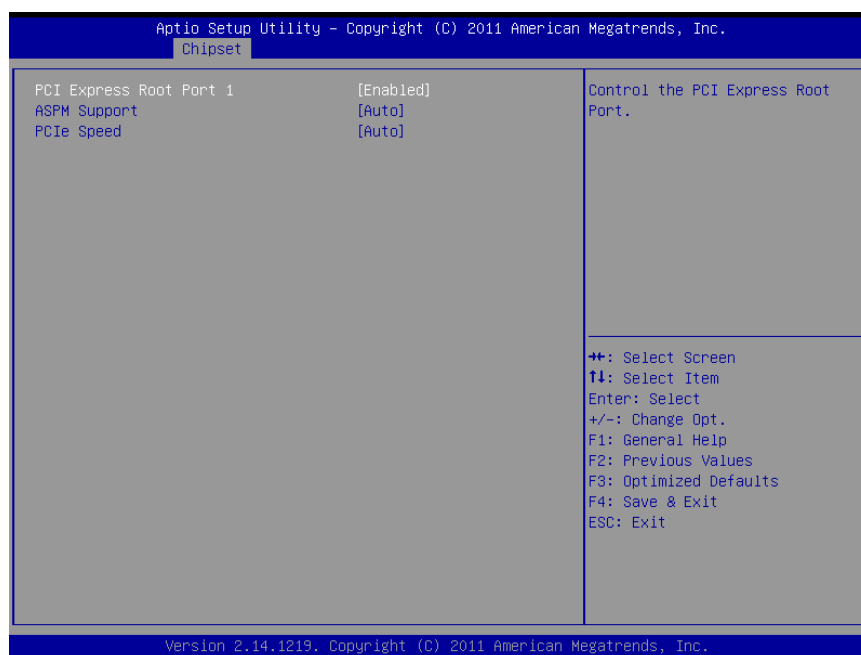

EPI-QM77


Item	Option	Description
PCI Express Root Port 1	Disabled Enabled[Default]	Control the PCI Express Root Port.
ASPM Support	Disabled L0s L1 L0sL1 Auto[Default]	Set the ASPM Level: Force L0s-Force all links to L0s State: AUTO-BIOS auto configure: DISABLE-Disables ASPM.
PCIe Speed	Auto[Default] Gen1 Gen2	Select PCI Express port speed.

3.6.3.1.1.2 PCI Express Root Port 6




Item	Option	Description
PCI Express Root Port 6	Disabled Enabled[Default]	Control the PCI Express Root Port.
ASPM Support	Disabled L0s L1 L0sL1 Auto[Default]	Set the ASPM Level: Force L0s-Force all links to L0s State: AUTO-BIOS auto configure: DISABLE-Disables ASPM.
PCIe Speed	Auto[Default] Gen1 Gen2	Select PCI Express port speed.

3.6.3.1.1.3 PCI Express Root Port 7(82574 Lan)

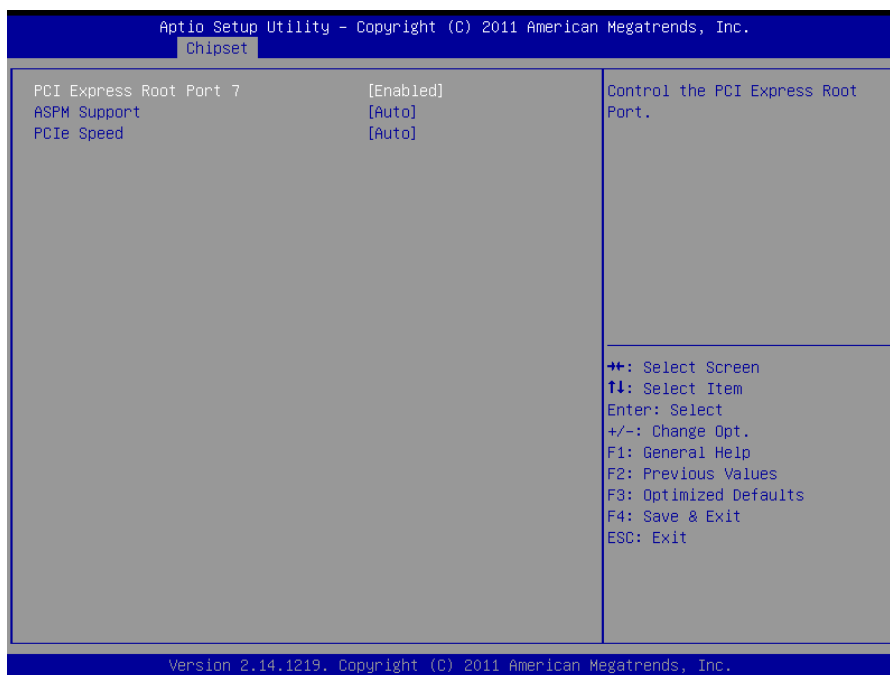


Item	Option	Description
PCI Express Root Port 7	Disabled Enabled [Default]	Control the PCI Express Root Port.
ASPM Support	Disabled L0s L1 L0sL1 Auto [Default]	Set the ASPM Level: Force L0s-Force all links to L0s State: AUTO-BIOS auto configure: DISABLE-Disables ASPM.
PCIe Speed	Auto [Default] Gen1 Gen2	Select PCI Express port speed.

3.6.3.1.2 USB Configuration

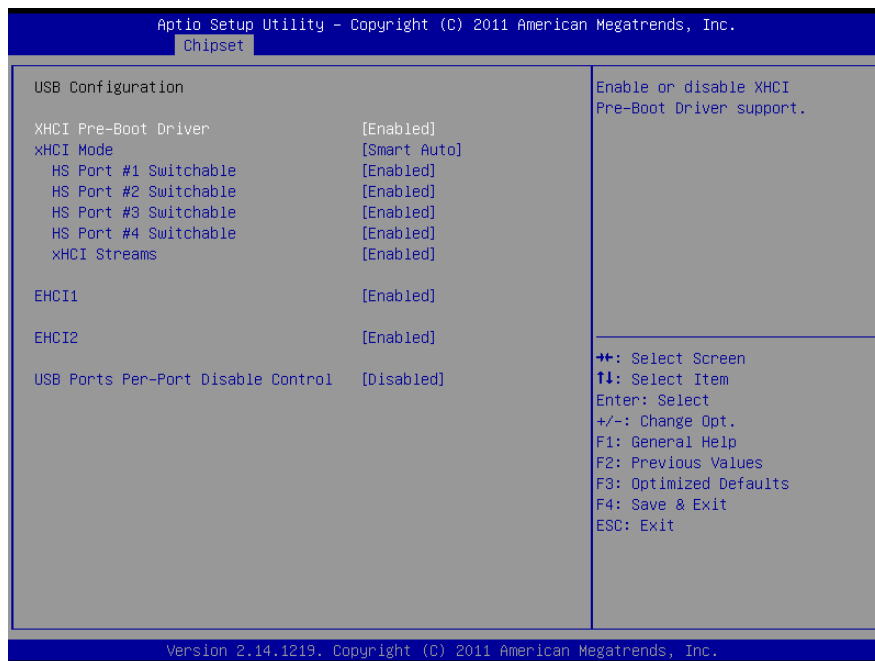


Item	Option	Description
XHCI Pre-Boot Driver	Disabled Enabled [Default]	Enable or disable XHCI Pre-Boot Driver support.
xHCI Mode	Smart Auto [Default] Auto Enabled Disabled	Mode of operation of xHCI controller.
HS Port #1/#2/#3/#4 Switchable	Disabled Enabled [Default]	Allows for HS port switching between xHCI and EHCI. If disabled, port is routed to EHCI. If HS port is routed to xHCI, the corresponding SS port is enabled.
xHCI Streams	Disabled Enabled [Default]	Enable or disable xHCI Maximum Primary Stream Array Size.
EHCI1/2	Disabled Enabled [Default]	Control the USB EHCI (USB 2.0) functions. One EHCI controller must always be enabled.
USB Ports Per-Port Disable Control	Disabled [Default] Enabled	Control each of the USB ports (0~13) disabling.

3.6.3.1.3 PCH Azalia Configuration

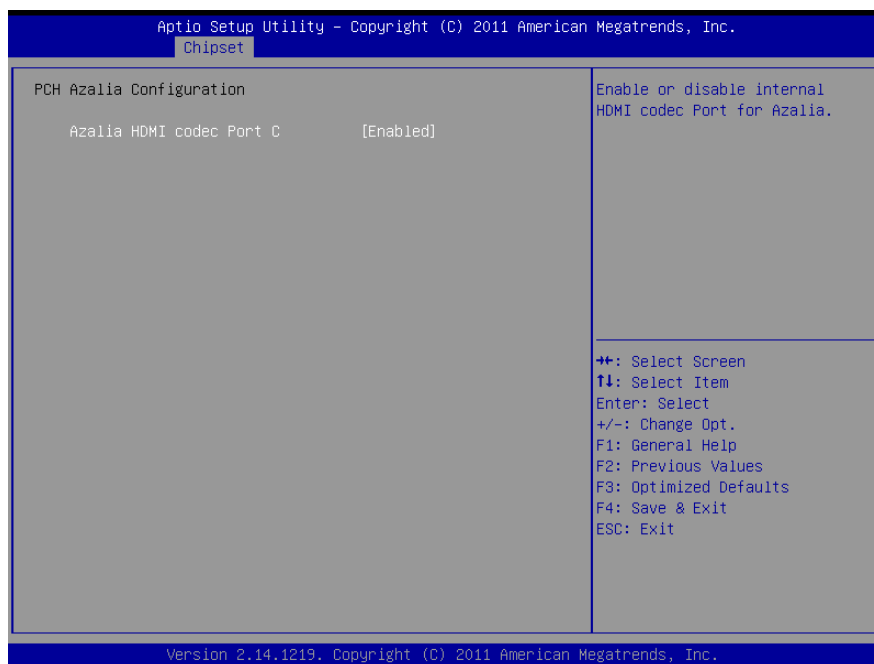

Item	Option	Description
Azalia HDMI codec Port C	Disabled Enabled[Default]	Enable or disable internal HDMI codec Port for Azalia.


3.6.3.2 System Agent (SA) Configuration

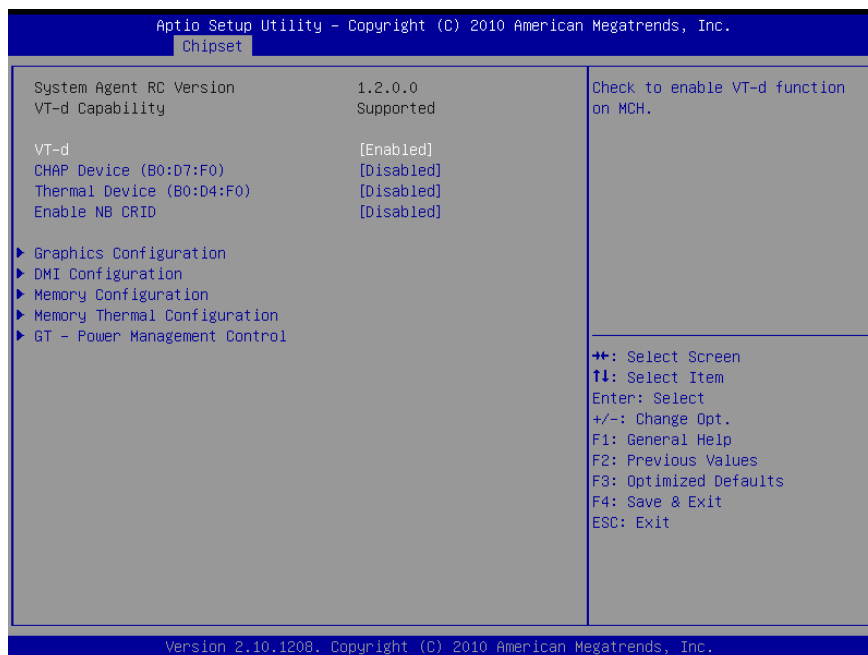

EPI-QM77


Item	Option	Description
VT-d	Disabled Enabled[Default]	Check to enable VT-d function on MCH.
CHAP Device (B0:D7:F0)	Disabled[Default] Enabled	Enable or Disable SA CHAP Device.
Thermal Device (B0:D4:F0)		Enable or Disable SA Thermal Device.
Memory Configuration	Memory Configuration Parameters.	
GT – Power Management Control	GT – Power Management Control Options.	

3.6.3.2.1 Memory Configuration

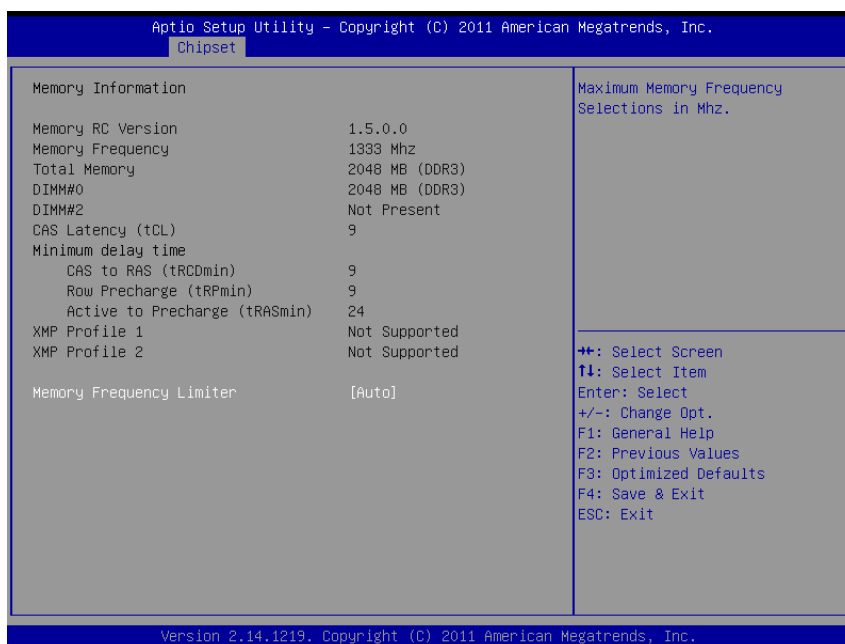


Item	Option	Description
Memory Frequency Limiter	Auto[Default]	Maximum Memory Frequency Selections in Mhz.
	1067	
	1333	
	1600	
	1867	
	2133	
	2400	
	2667	

3.6.3.2.2 GT – Power Management Control

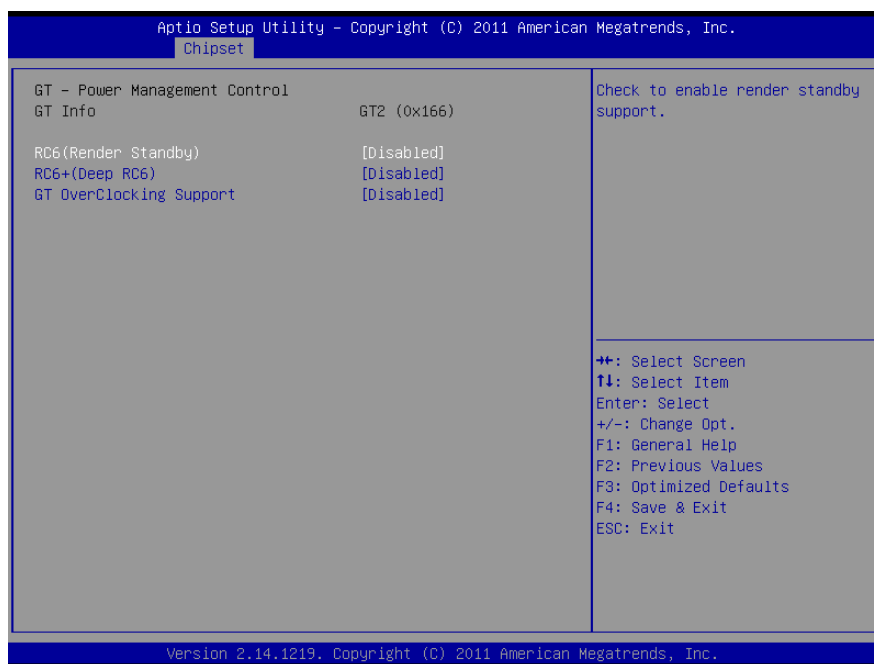

Item	Option	Description
RC6 (Render Standby)	Disabled[Default] Enabled	Check to enable render standby support.
RC6+(Deep RC6)		Check to enable Deep RC6(RC6+) support.
GT Overclocking Support		Enable or Disable GT OverClocking Support.

3.6.3.3 Graphics Configuration

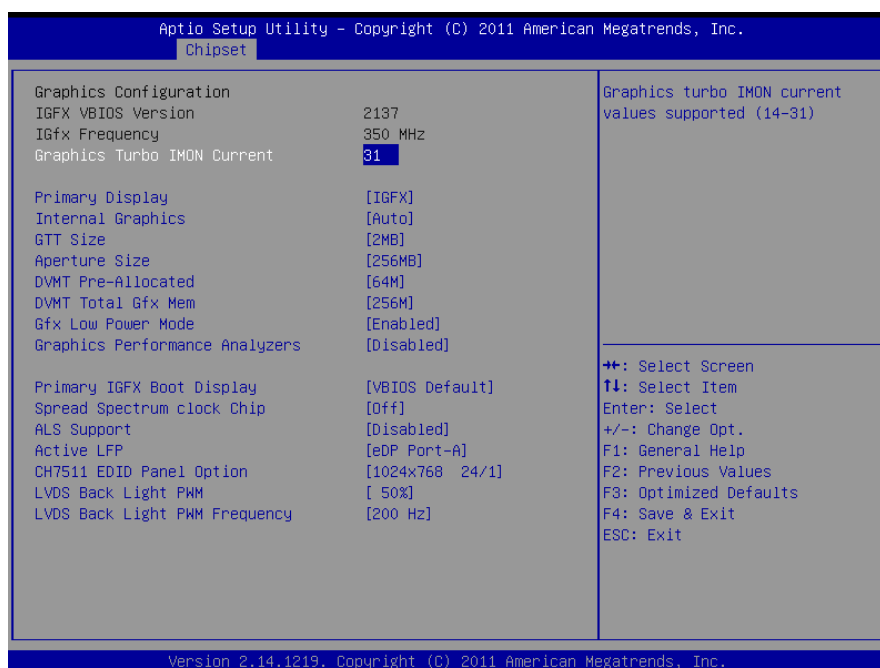


EPI-QM77

Item	Option	Description
Graphics Turbo IMON Current	14 ~31[Default]	Graphics turbo IMON current values (14 -31)
Primary Display	Auto IGFX[Default]	Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select SG for Switchable Gfx.
Internal Graphics	Auto[Default] Disabled Enabled	Keep IGD enabled based on the setup options.
GTT Size	1MB 2MB[Default]	Select the GTT size
Aperture Size	[128MB] [256MB] [Default] [512MB]	Select the Aperture Size
DVMT Pre-Allocated	[32M] [64M] [Default] [96M] [128M] [160M] [192M] [224M] [256M] [288M] [320M] [352M] [384M] [416M] [448M] [480M] [512M] [1024M]	Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.
DVMT Total Gfx Mem	[128MB] [256MB] [Default] [MAX]	Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device.
Gfx Low Power Mode	Disabled Enabled[Default]	This option is applicable for SFF only.
Graphics Performance Analyzers	Disabled[Default] Enabled	Enable or disable Intel Graphics Performance Analyzers Counters.
Primary IGFX Boot Display	VBIOS Default[Default] CRT DVI LVDS HDMI	Select the Video Device which will be activated during POST. This has no effect if external graphics present. Secondary boot display selection will appear based on your selection. VGA modes will be supported only on primary display.
Spread Spectrum clock Chip	Off[Default] Hardware Software	>>Hardware : Spread is controlled by chip;>>Software : Spread is controlled by BIOS.
ALS Support	Disabled[Default] Enabled	Valid only for ACPI. Legacy= ALS Support through the IGD INT10 function. ACPI= ALS support through an ACPI ALS driver.
Active LFP	No LVDS eDP Port-A[Default]	Select the Active LFP Configuration. No LVDS: VBIOS does not enable LVDS. Int-LVDS: VBIOS enables LVDS driver by Integrated encoder. SDVO LVDS: VBIOS enables LVDS driver by

		SDVO encoder. eDP Port-A: LFP Driven by Int-DisplayPort encoder from Port-A. eDP Port-D: LFP Driven by Int-DisplayPort encoder from Port-D (through PCH).
CH7511 EDID Panel Option	1024x768 24/1 [Default] 800x600 18/1 1024x768 18/1 1366x768 18/1 1024x600 18/1 1280x800 18/1 1920x1200 24/2 640x480 18/1 800x480 18/1 1920x1080 18/2 1280x1024 24/2 1440x900 18/2 1600x1200 24/2 1366x768 24/1 1920x1080 24/2 1680x1050 24/2	Port1-EDP to LVDS(Chrotel 7511) Panel EDID Option.
LVDS Back Light PWM	00% 25% 50% [Default] 75% 100%	Select LVDS back light PWM duty.
LVDS Back Light PWM Frequency	200 Hz [Default] /330 Hz/500 Hz 1 kHz/2 kHz/3 kHz 5 kHz/10 kHz/24 kHz 31 kHz/47 kHz/94 kHz	Select LVDS back light PWM Frequency.

EPI-QM77

3.6.4 Boot

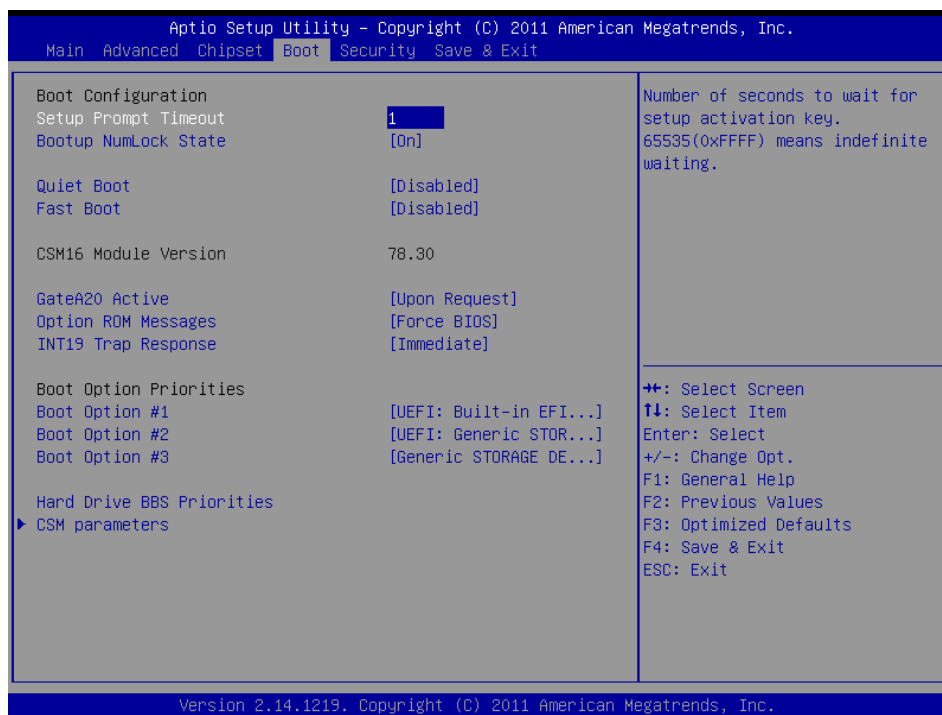


Item	Option	Description
Setup Prompt Timeout	1 ~ 65535	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On Off[Default]	Select the Keyboard NumLock state
Quiet Boot	Disabled[Default] Enabled	Enables or disables Quiet Boot option
Fast Boot	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.	
GateA20 Active	Upon Request[Default] Always	UPON REQUEST –GA20 can be disabled using BIOS services. ALWAYS – do not allow disabling GA20; this option is useful when any RT code is executed above 1MB.
Option ROM Messages	Force BIOS[Default] Keep Current	Set display mode for Option ROM.
INT19 Trap Response	Immediate[Default] Postponed	BIOS reaction on INT19 trapping by Option ROM: IMMEDIATE – execute the trap right away; POSTPONED – execute the trap during legacy boot.
Boot Option #1/2/3	Sets the system boot order	
CSM parameters	OpROM execution, boot options filter,etc.	

3.6.4.1 CSM parameters



Item	Option	Description
Launch CSM	Always [Default] Never	This option controls if CSM will be launched.
Boot option filter	UEFI and Legacy [Default] Legacy only UEFI only	This option controls what devices system can boot to.
Launch PXE OpROM policy	Do not launch UEFI only [Default] Legacy only	Controls the execution of UEFI and Legacy PXE OpROM.
Launch Storage OpROM policy	Do not launch UEFI only [Default] Legacy only	Controls the execution of UEFI and Legacy Storage OpROM.
Launch Video OpROM policy	Do not launch [Default] UEFI only Legacy only	Controls the execution of UEFI and Legacy Video OpROM.
Other PCI device ROM priority	UEFI OpROM [Default] Legacy OpROM	For PCI devices other than Network, Mass storage or Video defines which OpROM to launch.

3.6.5 Security

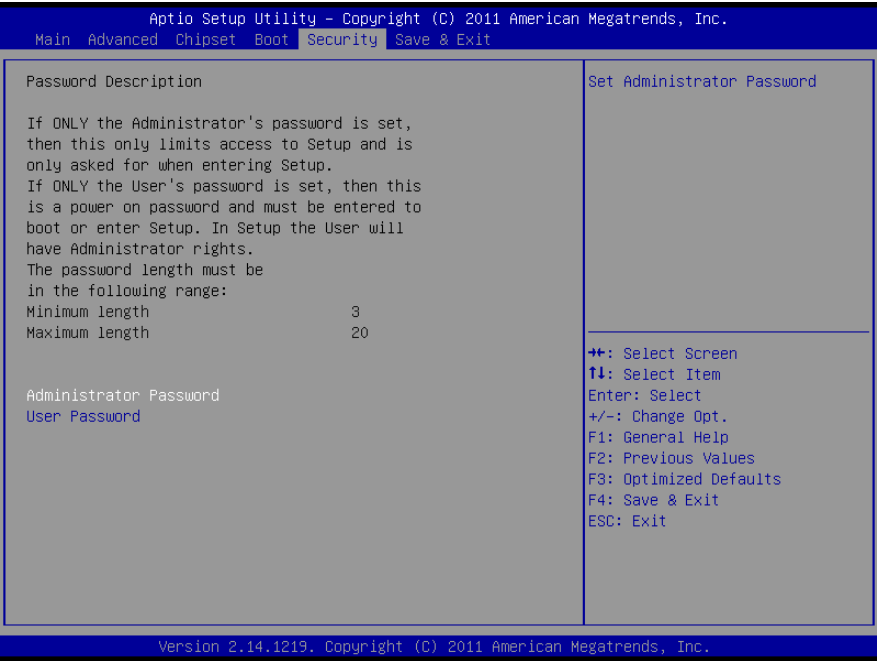


● Administrator Password

Set setup Administrator Password

● User Password

Set User Password

3.6.6 Save and exit

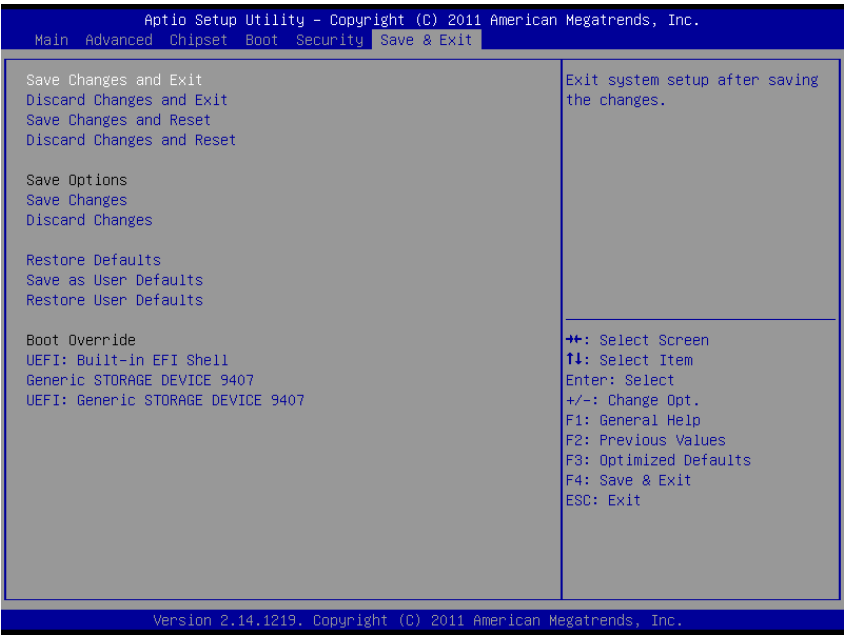

- **Save changes and Exit**

Exit system setup after saving the changes.



4. Drivers Installation



Note: Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.

4.1 Install Chipset Driver (For Intel QM77)

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\\Driver_Chipset\\Intel\\EPI-QM77 INF.**



Note: The installation procedures and screen shots in this section are based on Windows XP operation system. If the warning message appears while the installation process, click Continue to go on.



Step 3. Click Next.



Step1. Click Next..



Step 4. Click Next.



Step 2. Click Yes.



Step 5. Click Finish to complete setup.


4.2 Install ME Driver (For Intel QM77)

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to


\\Utility\EPI-QM77ME_iAMP_vPRO




Note: The installation procedures and screen shots in this section are based on Windows XP operation system. If the warning message appears while the installation process, click Continue to go on.

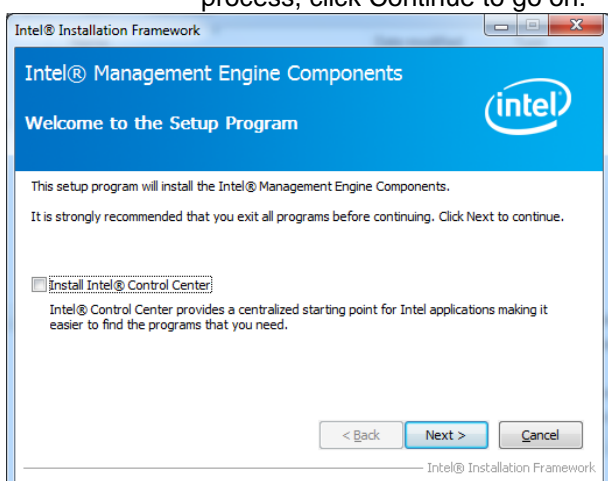


Step1. Click **Next** to start installation.

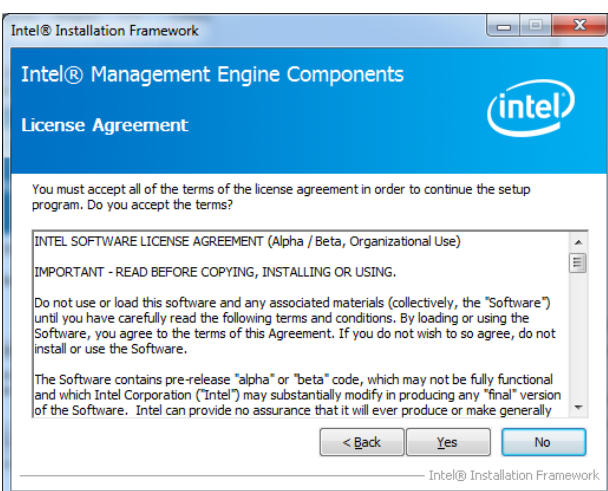


Step 2. Click **Yes** to accept license agreement.

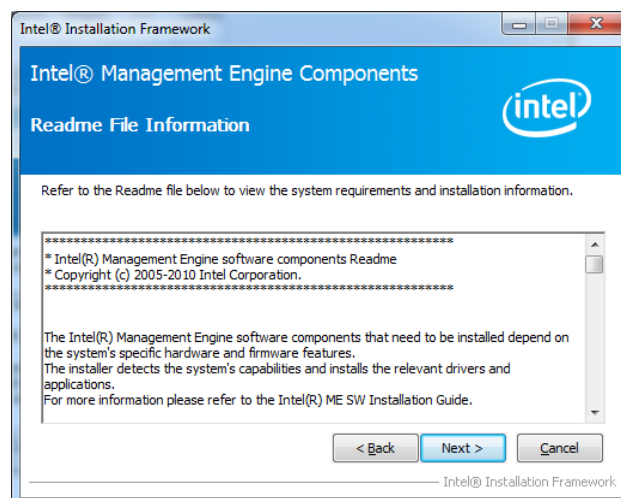


Step 3. Click **Next** to proceed setup.

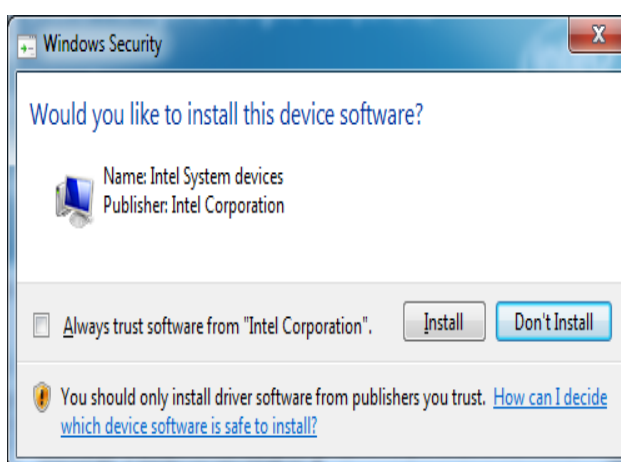

Step 4. Click **Install**.

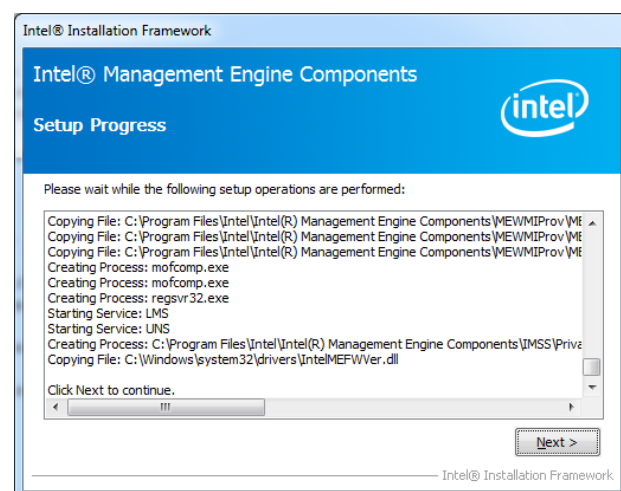

Step 5. Click **Next** to continue.

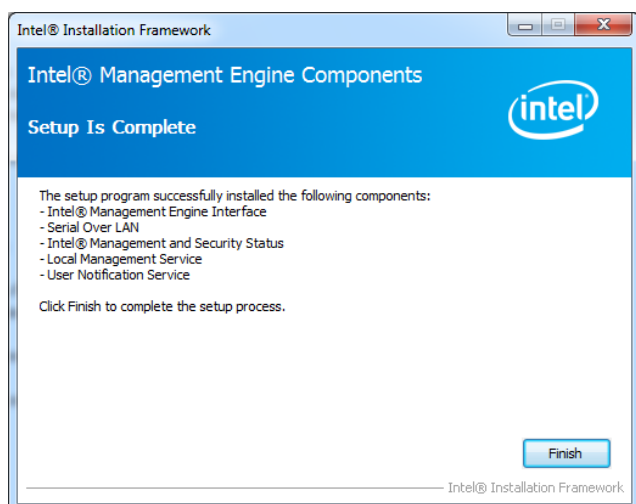


Step 6. Click **Finish** to complete setup.

4.3 Install USB 3.0 Driver (For Intel QM77)


Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to \Utility\EPI-QM77 USB 3.0.




Note: The installation procedures and screen shots in this section are based on Windows XP operation system. If the warning message appears while the installation process, click Continue to go on.

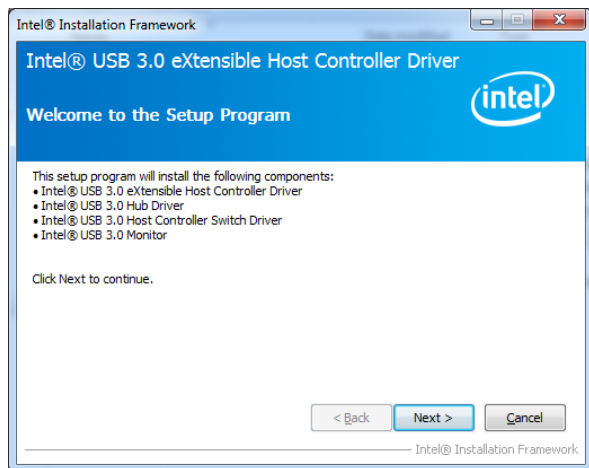


Step1. Click **Next** to start installation.

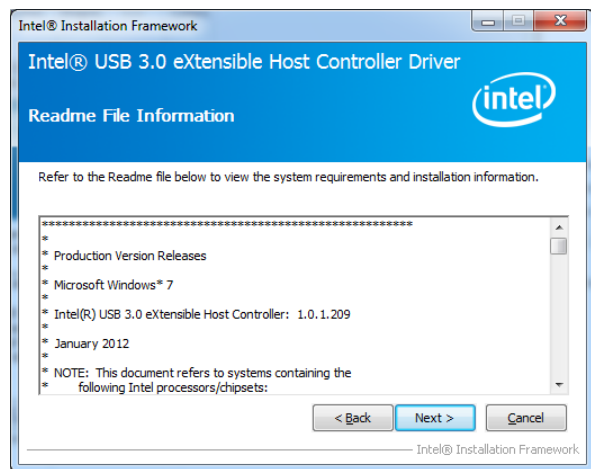


Step 3. Click **Next** to continue installation.

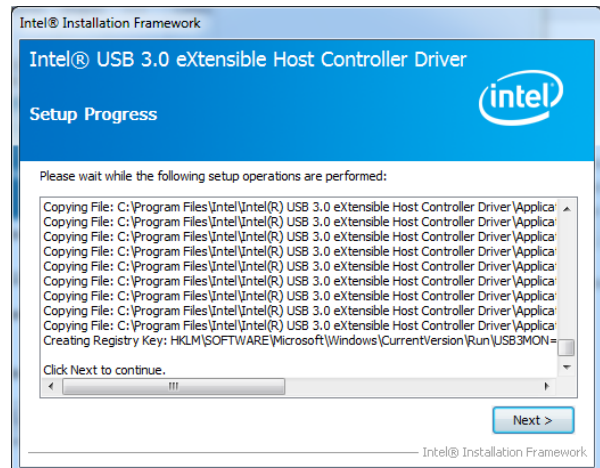

Step 4. Click **Next** to continue installation.

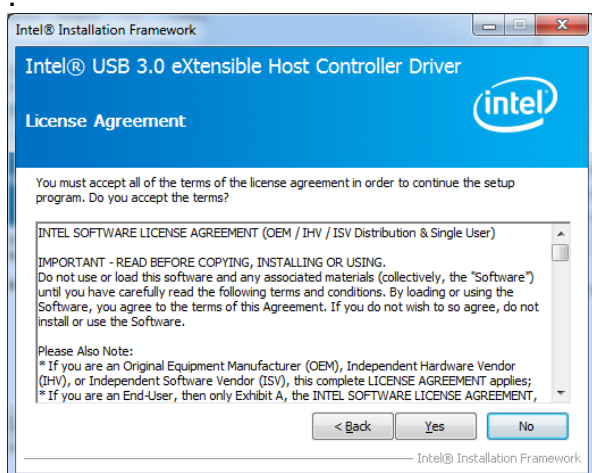

Step 2. Click **Yes**.

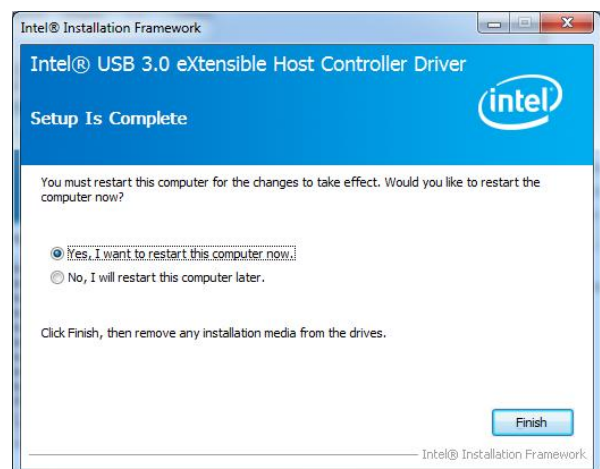


Step 5. Click **Finish** to complete setup.

4.4 Install Display Driver (For Intel QM77)


Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to \ **Driver_Video\Intel\QM77**.



Note: The installation procedures and screen shots in this section are based on Windows XP operation system.

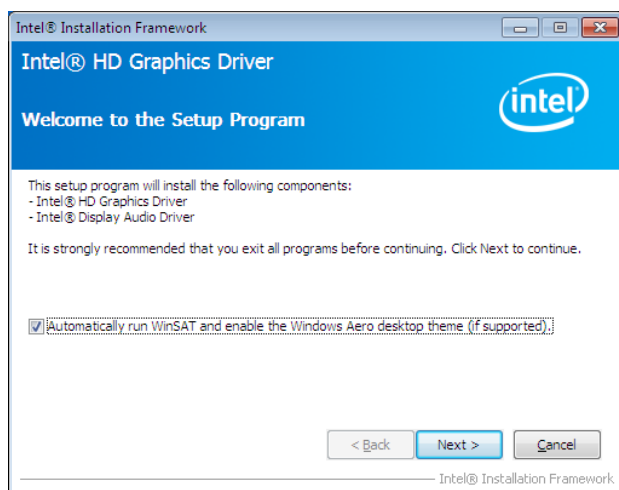


Step 1. Click Next to continue installation.

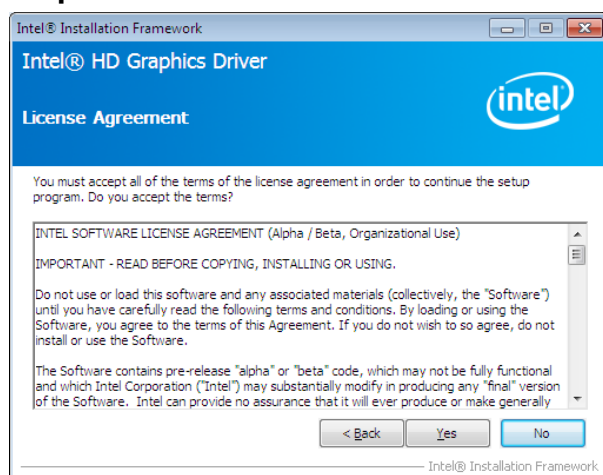


Step 2.


Click **Yes** to accept license agreement.

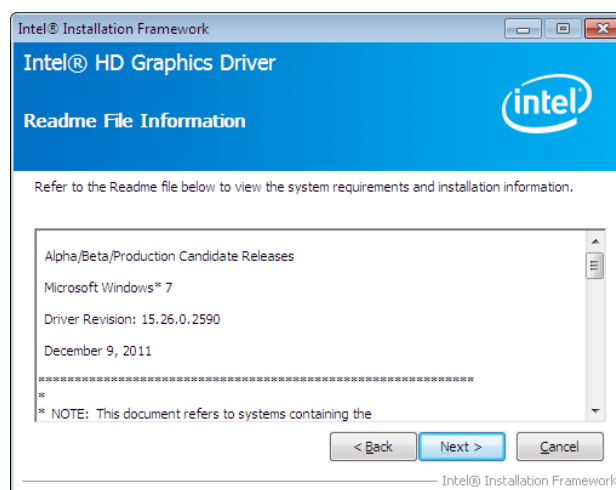

Step 3. Click Next.

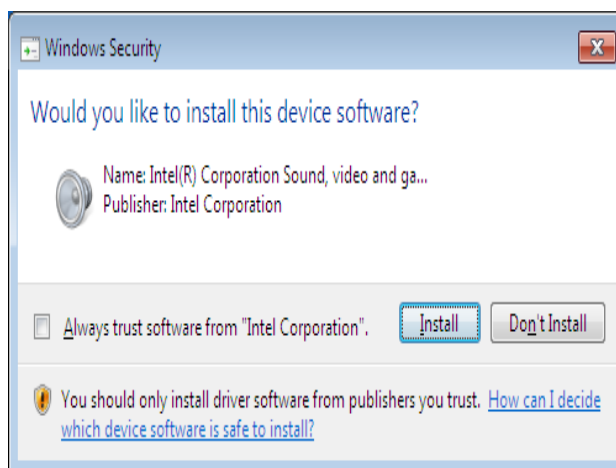


Step 4. Click Install.

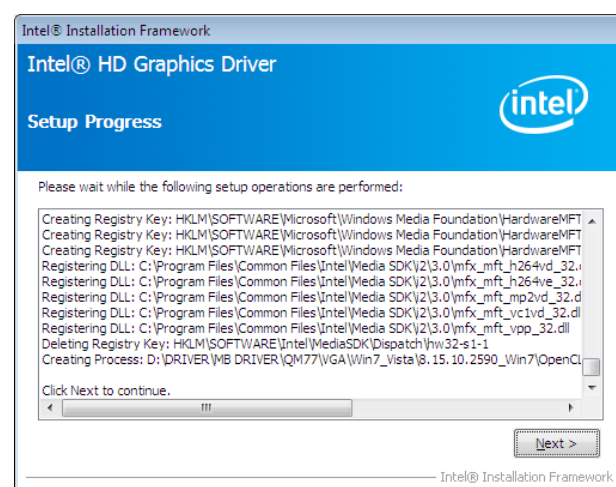

Step 5. Click Next.

EPI-QM77

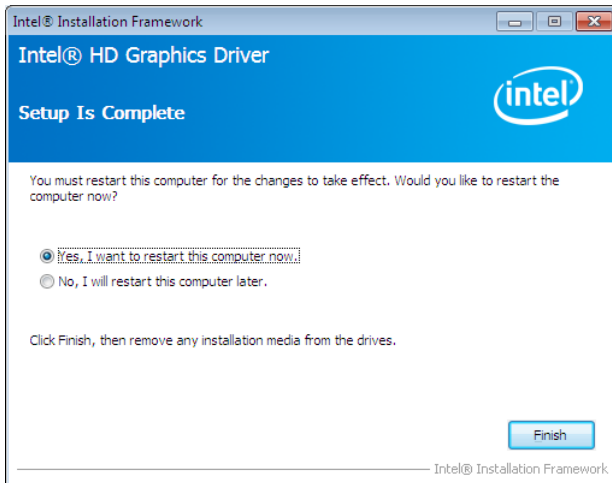

Step 6. Click **Finish** to complete setup.

4.5 Install Audio Driver (For Realtek ALC892)

Insert the Supporting CD-ROM to CD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to **\Driver_Audio\Realtek\ALC892\EPI-QM77 AUDIO**.



Note: The installation procedures and screen shots in this section are based on Windows 2000 operation system.



Step 1. Click **Next** to continue setup.



Step 2. Click **Finish** to complete the setup.


4.6 Install Ethernet Driver (For Intel 82579LM and 82574L)

Insert the Supporting DVD-ROM to DVD-ROM drive, and it should show the index page of Avalue's products automatically. If not, locate Index.htm and choose the product from the menu left, or link to


D:\ Driver_Gigabit\Intel\82579\WinXP.




Note: The installation procedures and screen shots in this section are based on Windows XP operation system.

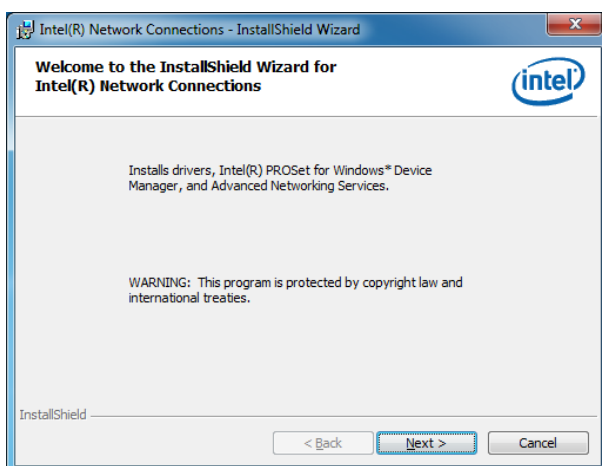


Step 1. Click Next.

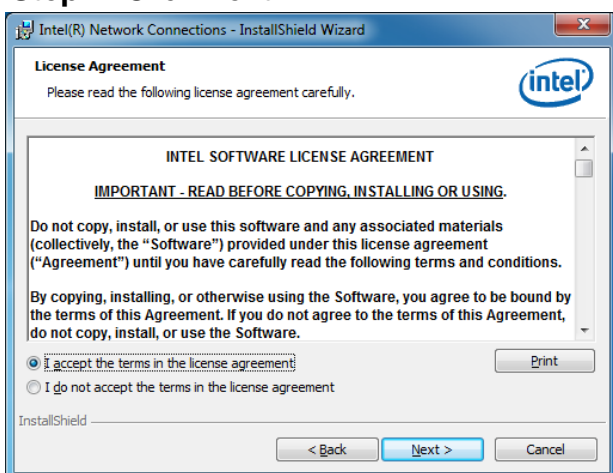


Step 2. Click Next to accept license agreement.

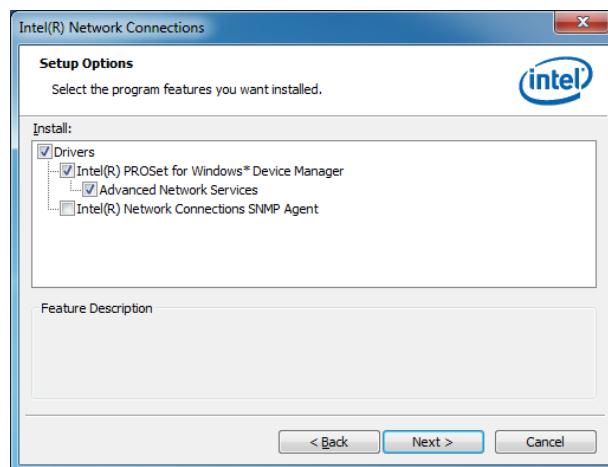


Step 3. Click Next after choosing features to install.

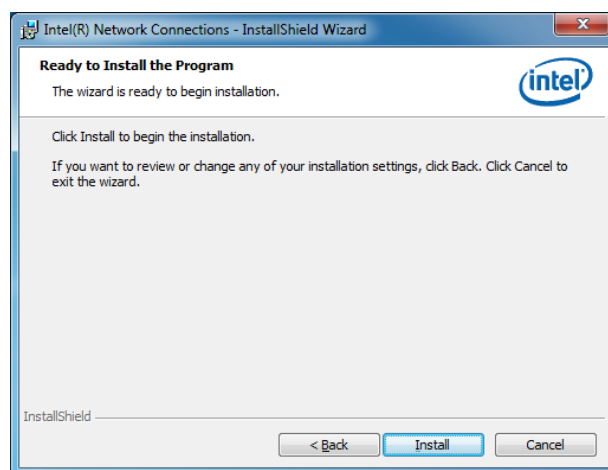

Step 4. Click Install to proceed.

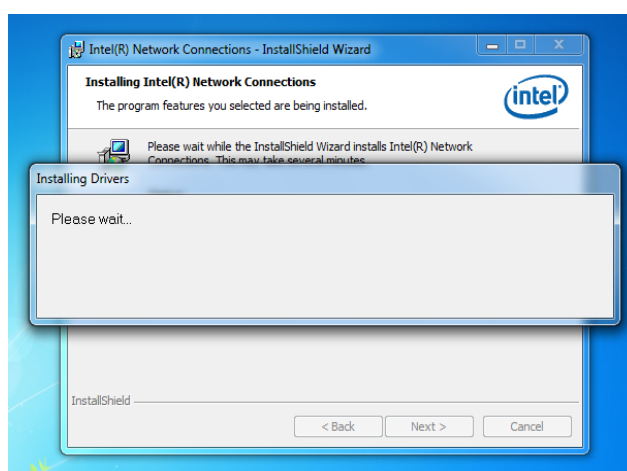


Step 5. Click Next to continue installation

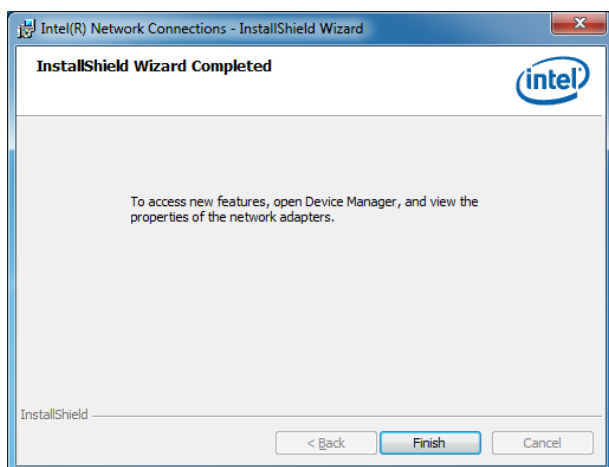


Step 6. Click **Finish** to complete the setup.

5. Mechanical Drawing

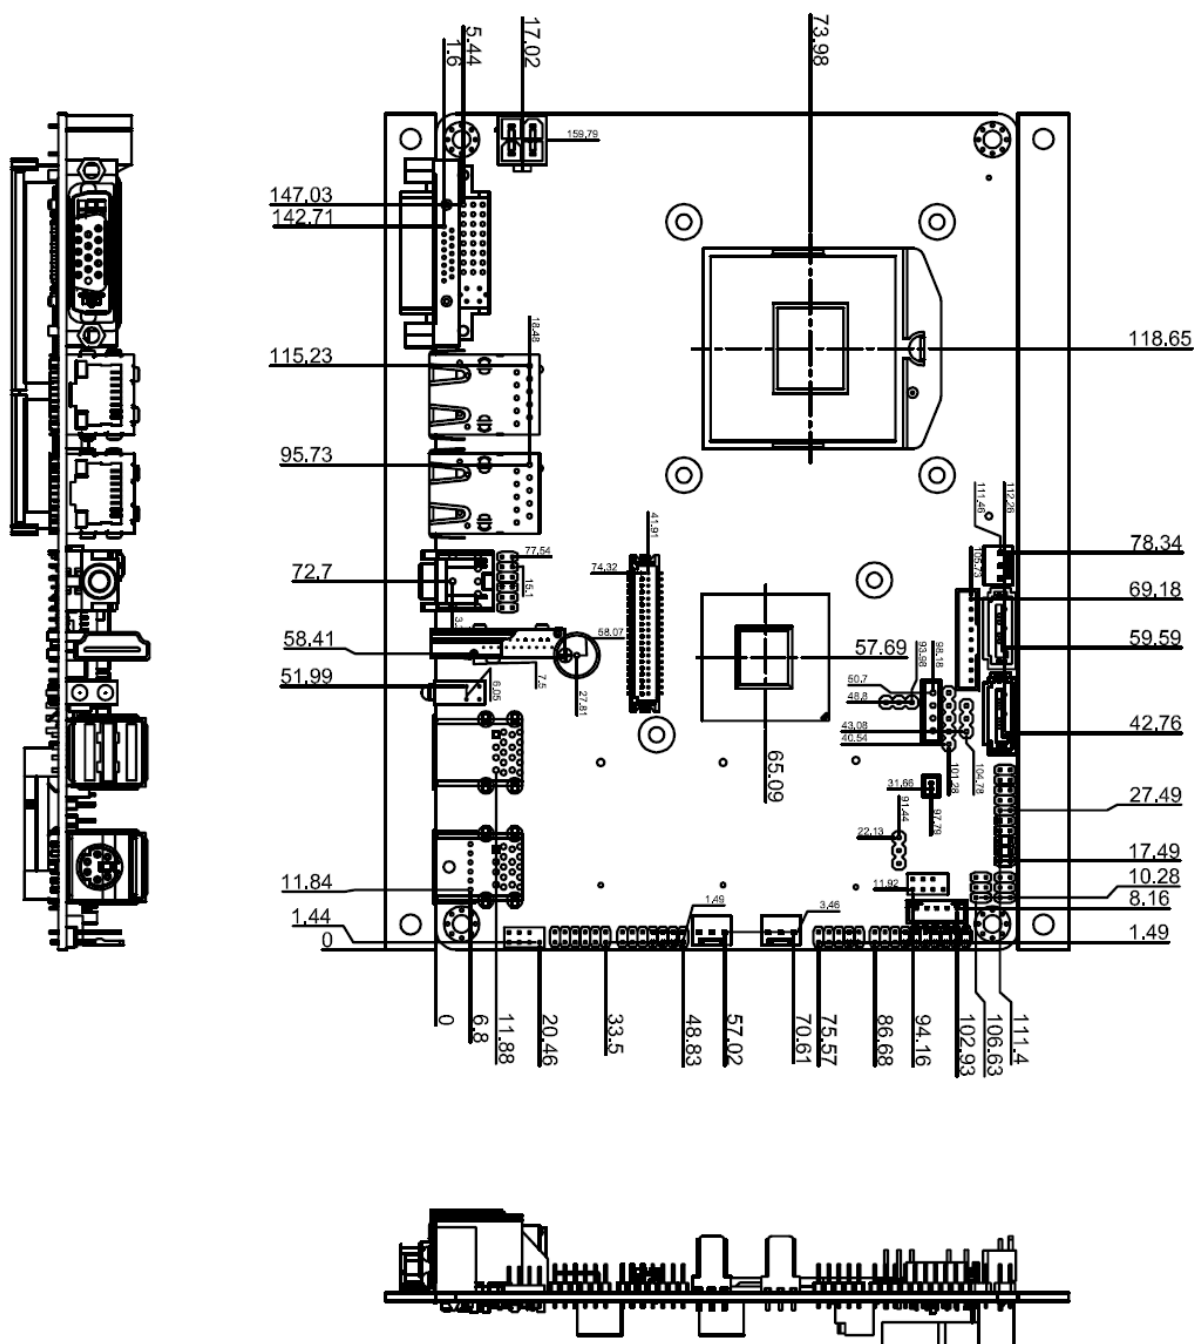

Unit: mm

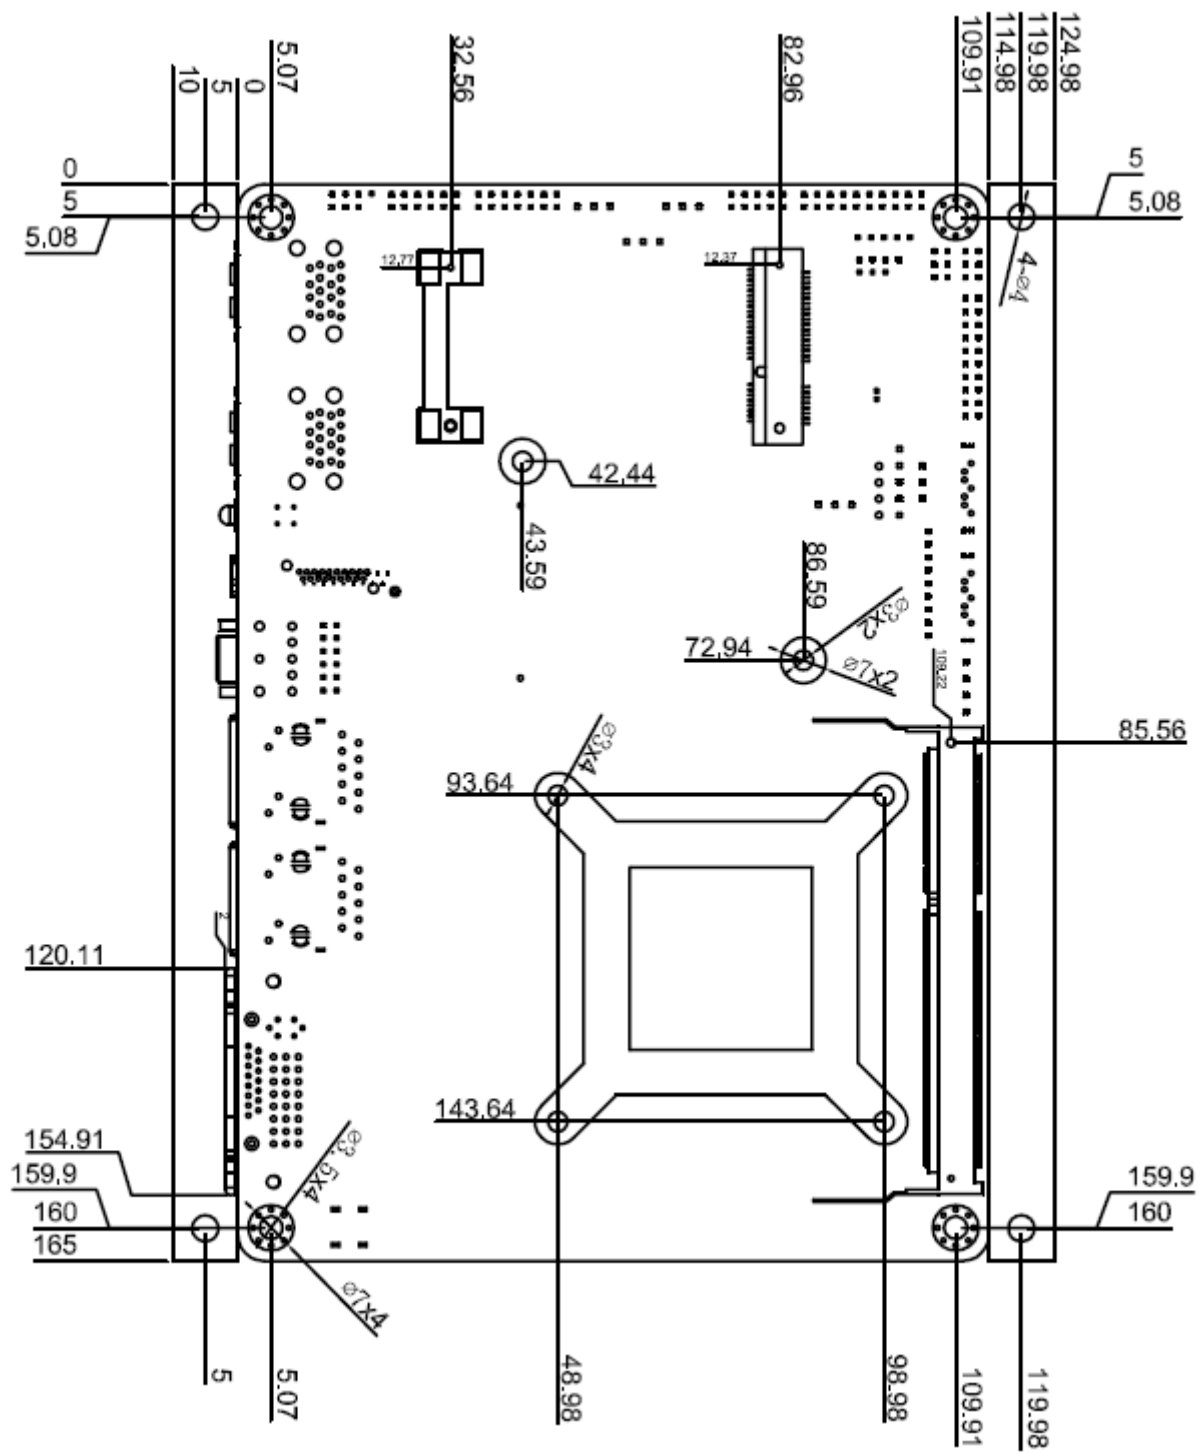

Unit: mm

